



## **IFP Steering Damper Fitting Notes**

Step 1. Secure the damper to the damper bracket and torque the nut to the correct setting dependant of size.



Step 2. Remove the Allen head top bolt (shown with arrow below) and apply permanent Loctite and refit and tighten up to correct torque settings.

