Z6143 Page 1 of 3

Instructions Front Diff - Drop Kit

Note - This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.




• Lift vehicle evenly and safely support.

Never rely on a jack only


• Start by removing the under-trays - to access the front Diff.

Important - support the front Diff with a stand or Jack with timber.

• The RH front control arm will need to un-bolted at the bushings - let it drop down - refer RH image

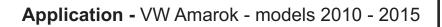



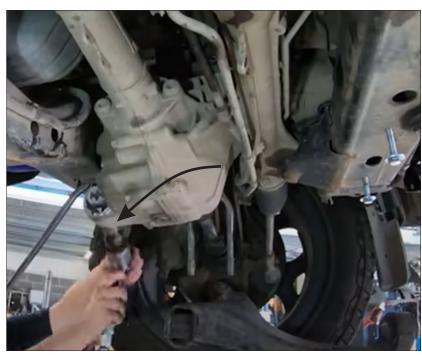

- Reach up inside the front clevis to access the Diff bolt.
- Loosen bolt with socket and extension bar. Remove bolt.
- Remove the factory bushing. This can be done with an Air-chisel (see LH image). OR drill a hole and cut outer shell with hack-saw blade.

Careful to not damage the aluminium housing.

Refer Page 2 -

It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

Instructions Front Diff - Drop Kit

Note - This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Page 2 -

• Push in the new solid bushing. Refer RH image A G clamp with a piece of flat plate will work.


IMPORTANT - the bolt hole should be near "12 o'clock" position.

• Once pressed in, loosely re-install bolt. Don't tighten yet.



LH BRACKET

• With Diff still supported, remove LH bracket. Start with the bushing bolt. (discard this bolt).

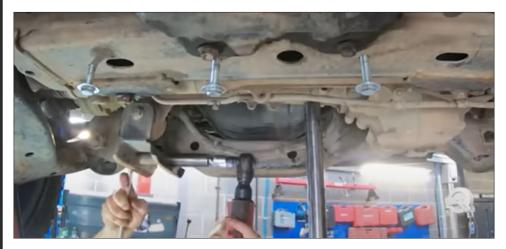

- Loosen and remove the vertical bolt at the front of bracket (keep).
- Lastly, remove the horizontal bolt and nut (keep)

Z6143

Page 2 of 3

 Bolt up new supplied bracket -(below image)

- Use the supplied couter-sunk 100mm bolt - push through chassis - through the bushing.
- Bolt up with supplied flat washer and Nyloc nut.
- Use the factory bolts to bolt vertical bolt and the horizontal through bolt. Don't tighten yet.

Refer page 3 -



It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

Instructions Front Diff - Drop Kit

Note - This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Page 3 -

Image of LH bracket installed



Rear Bracket -

• With the Diff still supported, remove the

2x bolts holding the bracket to the chassis. And the 1x bolt that is bolted to the bushing.



- Grab the factory M12 bushing bolt bolt up to bushing in the Diff.
- Place supplied M12 Nyloc nut on the M12 bushing bolt also.
- Tighten all bolts. Re-fit control arm. Best to tighten control arm bolts at ride height.
- Re-fit splash guard with supplied spacers. Place spacers on the 4x rear mount points.
 - It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.



- Slide bracket out. This is a little tricky. Roll mount upwards around the floor.
- Slide new bracket into position.
- Once in position, loosely bolt up new bracket to the chassis with 2x factory bolts.



Page 3 of 3

Z6143