

GP M8274 Free Spool Handle

Fitting Guide

Gigglepin 8274 Free spool Handle





Installation Guide: Step 1:



Step 2:



Included in this kit:

- Freespool Handle Assembly
- M6 Bolts (x4)
- 5mm Drill Bit
- M6 Tap
- 6mm Allen Key

Remove standard free spool activation lever.

Using the 5mm drill bit drill out, and using the M6 Tap, rethread the 4 mounting holes in the Top Housing.

Apply a thin bead of Silicone sealant to mounting surface of the Free Spool leaver.

Align the Pinion Gear onto the motor armature shaft.

Ensuring that the lever is fully screwed in to the housing, offer the free spool handle up to the top housing, align the mounting holes and insert the 4 mounting bolts. Tighten all bolts equally using the 6mm Allen Key.

Tel: 0044 1732 463 600 E-mail: shop@gigglepin4x4.net Web: www.gigglepin4x4.net

Address: Unit 10 Gaza Trading estate, Scabharbour Road, Hildenborough, Kent, TN11 8PL - UK



Operation

The GP replacement M8274 freespool handle is designed to be a heavier duty, improved version of Warn's original unit.

The improvements that we have made are as follows:

- 1. Heavier duty casting to withstand physical knocks
- 2. Oil filler plug for easier oil changes
- 3. Heavier duty M6 mounting bolts
- 4. Larger knob for ease of use
- 5. Screw in lock mechanism to eliminate the chance of accidental disengagement.

Once installed, operation is as follows:

To disengage

- 1. Unscrew the lever until fully undone
- 2. Pull the handle until the lever clicks into place

To Re-Engage

- 1. Push the lever in until the threads on the lever are touching the housing
- 2. Screw the lever in until finger tight.

We recommend that a smear of grease is applied to the thread on the shaft at regular intervals to ensure continued smooth operation of this unit.

Tel: 0044 1732 463 600 E-mail: shop@gigglepin4x4.net Web: www.gigglepin4x4.net

Address: Unit 10 Gaza Trading estate, Scabharbour Road, Hildenborough, Kent, TN11 8PL - UK