




STEP 1 Remove the original rails covers whit care.

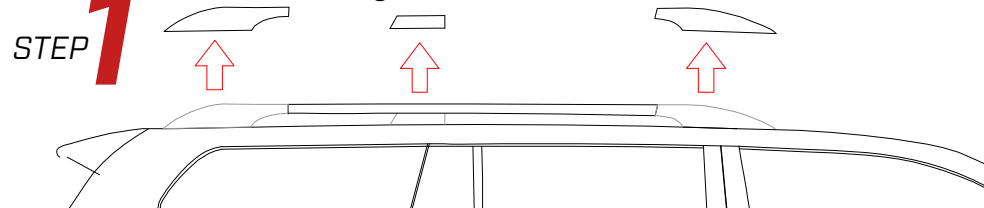

Remove the original bolts and original rails racks.

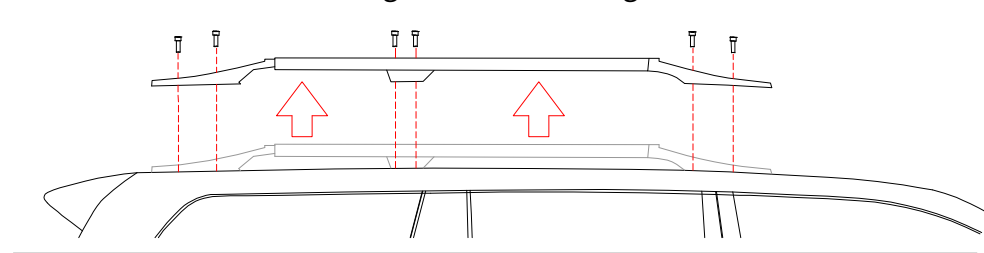



if it does` t have the original rails racks,
remove the 6 hole covers to reveal the
threaded holes.

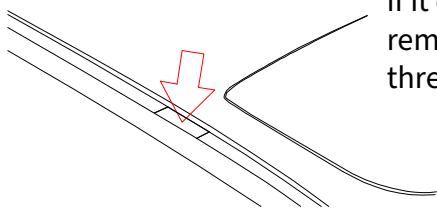

PLACE ROOF BRACKETS


- STEP 2**
- | | | |
|----|------------------|-----|
| 19 | M8 X 25 Alen Cap | X12 |
| 22 | M8 Washer | X12 |

1- Use SEALANT around all roof holes
before place brackets to protect and seal.
2- Clean the sealant excess after
placement of roof brackets.

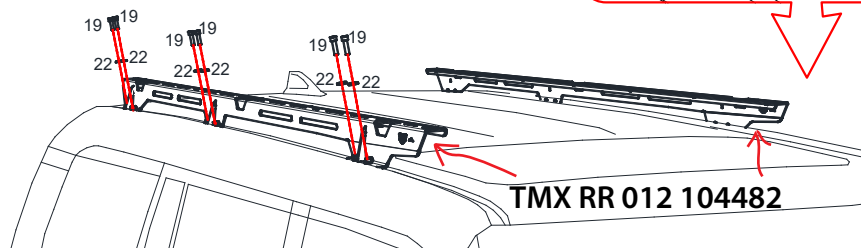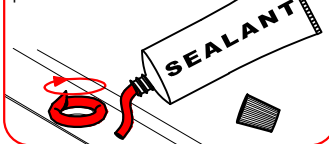


TMX RR 012 104482

STEP 3 After under rails have been fitted, place roof rack up to side
under rails brackets, and fasten as per folowing diagram.

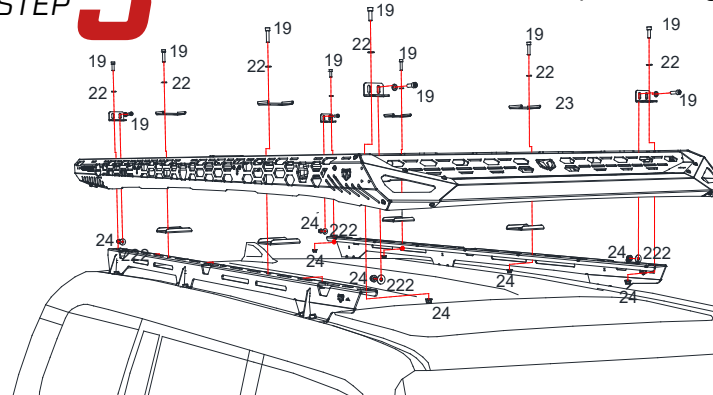



TMX RR 104482 Bracket Bolt Kit

Item N°	Part	Description	Qty
24	M8 1,25 flange nylock nut		12
19	M8 X 25 Alen Cap		24
22	M8 Washer		24
222	DIN 9021 M8		4

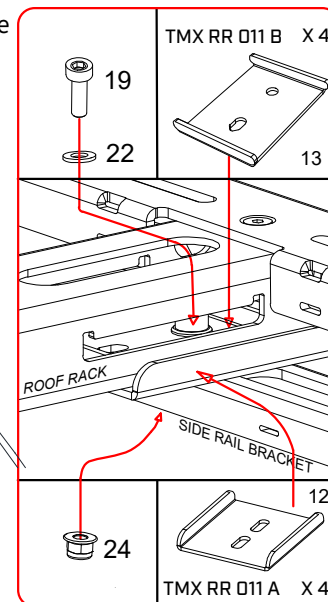


STEP 4

FRONT AND REAR
PLACEMENT

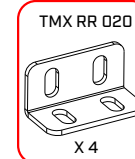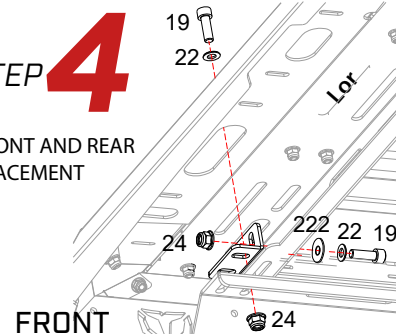

- | | | |
|-----|----------------------|----|
| 19 | M8 X 25 Alen Cap | X8 |
| 22 | M8 Washer | X8 |
| 24 | M8 Nylock Flange nut | X8 |
| 222 | M8 LARGE WASHER | X4 |

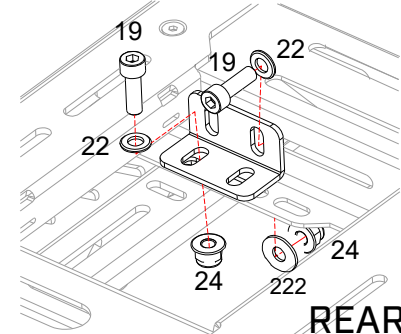

Done!