


FITTING INSTRUCTIONS

VEHICLE Toyota Landcruiser 200 series MODEL YEAR September 2016 on PRODUCT Auxiliary battery tray PRODUCT CODE 045 **Battery Tray Details** Fits up to N70zz 12 inch case

Comes with: 2 x 6mm bolts, 2 x 8mm bolts, 4 x 8mm nylocks, 1 hold down bracket, 2 x J hooks.

1. Battery tray fits into the front of the right hand drivers side of the vehicle under the bonnet.

2. Place the 2 x 6mm bolts in the holes towards the front of the tray.

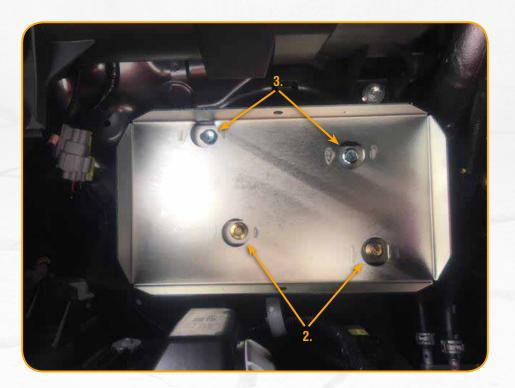

3. Then place the 2 x 8mm bolts in the holes at the rear of the tray, use 2 x 8mm nylocks behind the inner guard.

 Insert 2 x J hooks into holes on side of tray, sit battery into tray and fit battery hold down and tighten 2 x 8mm nylocks.



Roadsafe - A Division of Specialist Wholesalers Pty. Ltd. ABN 64 163 280 279 VIC Phone: 03 8687 1700 QLD Phone: 07 3737 7420 Email sales@roadsafe.com.au