



VEHICLE Mitsubishi MQ & MR Triton / QE Pajero Sport
MODEL YEAR 2016 - Current
PRODUCT Auxiliary battery tray
PRODUCT CODE BT101

Battery Tray Details

Fits up to N50

Comes with:
3x M8 Bolts, nuts and washers
1x hold down with J-hooks

1. Bolt removable leg to battery tray.
2. Remove relay bracket and wiring retainer bracket from the inner wheel arch.
 - a. Remove relay from bracket
See figure 1
3. Re-locate fuel line to lower section of clip as shown in *figure 2*.
 - a. Remove bolt on firewall as shown in *figure 2*
 - b. Will be using this position to mount the battery tray
4. Re-route main battery wiring harness, this will now be routed under the auxiliary battery tray.
 - a. Be sure to check the wiring harness is secure and cannot rub on sharp edges

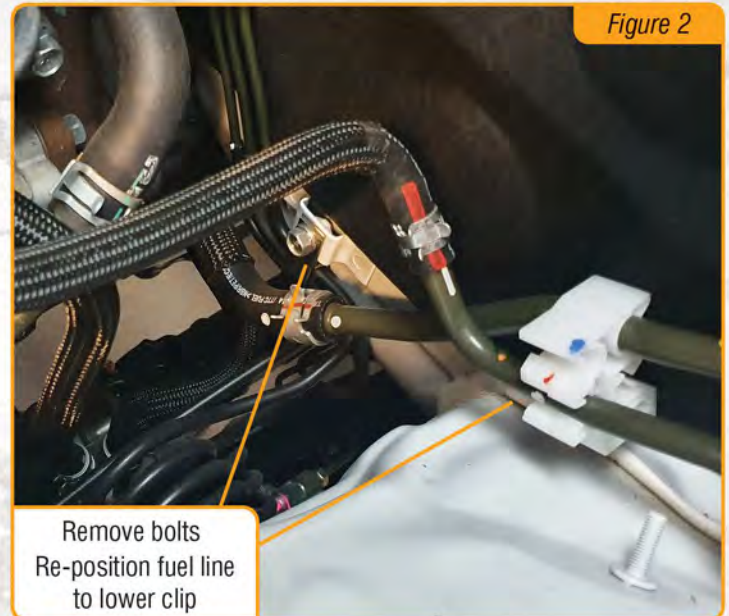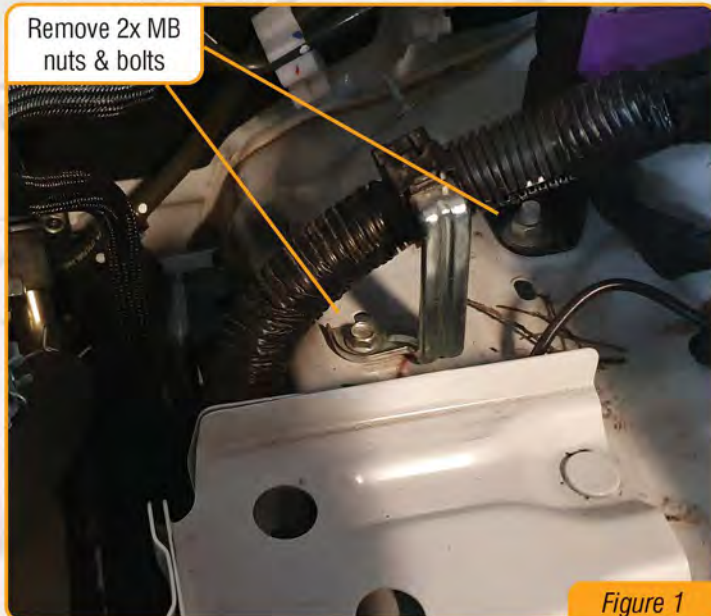

ROADsafe™ 4WD

FITTING INSTRUCTIONS

VEHICLE Mitsubishi MQ & MR Triton / QE Pajero Sport
MODEL YEAR 2016 - Current
PRODUCT Auxiliary battery tray
PRODUCT CODE BT101

Battery Tray Details

Fits up to N50

Comes with:
3x M8 Bolts, nuts and washers
1x hold down with J-hooks

5. Fit auxiliary battery tray in position.
 - a. Fit mounting hardware and tighten
6. Re-fit relay onto M6 stud and fit supply M6 nut, on the side of the battery tray.
7. Use supplied fir tree zip ties to secure hoses away from any sharp edges.

