

VEHICLE Toyota Prado 150 2015+ 2.8L Diesel

PRODUCT Auxiliary Battery Tray

PRODUCT CODE BT102_BLACK

NOTE Recommended installation by qualified automotive technician

DURING RECOVERY ALWAYS USE BOTH RECOVERY POINTS

Hardware supplied:

- 4 x M6x1.0*16L Flange Bolt
- 2 x M8 Nyloc Nut
- 1 x M6x1.0*30L Flange Bolt
- 3 x M8 Washer
- 4 x M6 Nyloc Nut

Tools required:

- 10mm Socket
- 12mm Socket
- 6mm Drill

Component list:

- 1 x Battery tray
- 1 x Mounting Plate
- 1 x Battery Clamp
- 2 x Tie Down rod

1. Disconnect negative terminal from battery.

2. Remove bolts from earth on inner guard and A/C bracket.
See figure 1.

3. Remove plastic cable mount from inner guard.
See figure 1.

4. Remove front half of inner wheel arch lining and remove indicated bolt. Partially install M6 x 30mm bolt into existing thread.
See figure 2.

5. Place battery tray into position ensuring lower battery arm does not pinch any wires or piping.

6. Place lower battery arm over M6 x 30mm bolt installed in step 4 and secure.

7. Place earth strap over upper tray arm and secure.
See figure 3.

8. Drill two M6 holes into wheel arch using the tray bracket as a template. Rust protect and secure tray arm using the supplied mounting plate inside the wheel arch.
See figure 3.

9. Tighten all bolts and ensure adequate clearance to all other components. Place battery into position and secure into place using the supplied battery strap and J bolts.

10. Secure battery strap to vehicle front radiator support.



Figure 1



Figure 2

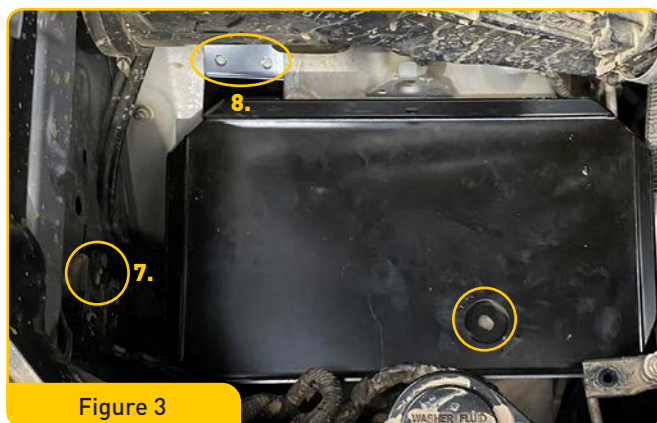


Figure 3