

Bonnet Strut Fitting Instructions

Ford Ranger PJ/PK & Mazda BT50 2006-2011



- 1- Locate the bonnet bracket bolts on the bonnet of you vehicle (figure 1)
- 2- With the bracket facing the way pictured (figure 2) so that the ball is facing to the outer of the vehicle, bolt the bracket in.
We recommend doing this one bolt at a time to avoid the bonnet falling on you and to avoid misalignment issues. (figure 3)
- 3- Once the bracket is installed with both bolts (figure 4) Repeat on the other side of the bonnet, making sure the ball is facing outwards.

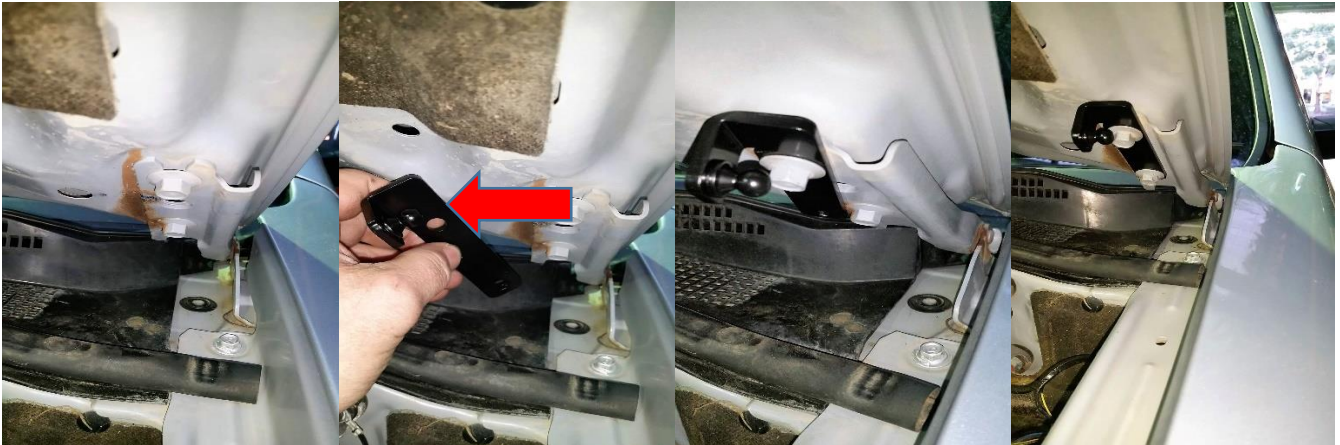


Figure 1

Figure 2

Figure 3

Figure 4

- 4- To install the bracket on the guard, remove the 10mm guard bolt & fit the supplied longer bolt through the hole & tighten. (figure 5)
- 5- Fit the bracket under the lip of the guard & secure using the nut & washer supplied then you can fit the strut by clipping it over the balls on the mounting brackets (figure 6)
- 6- Repeat for the other side (figure 7 & 8)

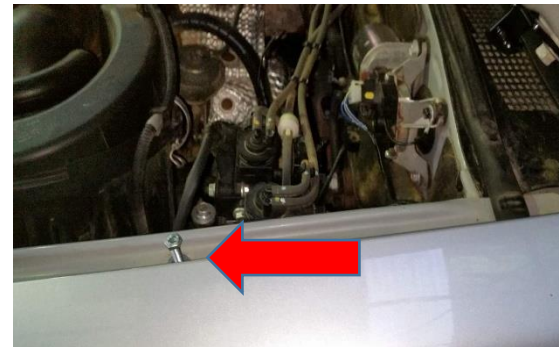


Figure 5



Figure 6

Figure 7

Figure 8