

<b>BMW X5 (excluding air suspension)</b>		<b>E53</b>		<b>2000 - 2006</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Bilstein</i>	VE3-A742	1ea	LHS	BE5-A744	2ea	
	VE3-A743	1ea	RHS			
<i>SuperPro</i> For individual bushes refer to the SuperPro Catalogue						
<i>Caster Correction Kit</i>	SPF2247K	1kt	PS & DS increase			



<b>BMW X5 &amp; X6 (excluding air suspension)</b>		<b>E70, E71, E72</b>		<b>2006 - 2013</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Bilstein B6</i>	24-272674	2ea		24-143943	1ea	LHS
				24-143950	1ea	RHS
<i>SuperPro</i> For individual bushes refer to the SuperPro Catalogue						
<i>Caster Correction Kit</i>	SPF3339K	1kt				



<b>BMW X5 &amp; X6 (excluding air suspension)</b>		<b>F15, F85, F16, F86</b>		<b>2013 - 2018</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Bilstein B6</i>	29-241668	2ea		24-241670	1ea	LHS
				24-241687	1ea	RHS



**Chevrolet Silverado**

**4th Gen**

**2018 - on**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>COIL SPRING</b>						
<i>King Springs</i>	KGMC-01	1pr	Raised			
<b>ROLL CONTROL</b>						
<i>Fixed Offset Upper Control Arms</i>	TRC6655	1pr	designed for 2-4" Lifts			
<b>AIRBAG</b>						
<i>Polyair Ultimate Kit</i>				88288ULT	1kt	standard height
				88388ULT	1kt	2" Lift
<i>Ride Rite Airbag Kit</i>				RR4734	1kt	standard height
<b>FORMULA 4X4 KITS</b>						
<i>Bilstein Levelling Kit</i>	SILV-002L			24-293297, 24-293471		



DAIHATSU F-Series		F_0, Scat		1975 - 1984		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6026Y	2ea		G6026Y	2ea	

DAIHATSU F-Series		F_5P		1975 - 1984		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6026Y	2ea				
Sachs Max	316 395	2ea		316 395	2ea	1975-1978
<b>LEAF SPRING</b>						
Formula	DAI-05	1pr	Approx 50mm Lift at 45kg	FLS-089	2ea	Approx 50mm Lift at 100kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-189	1ea	DAI-05 x 2, FLS-089 x 2, C659 x 1, C658 x 7			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
U Bolts	C659	1ea	RHS Inner	C658	4ea	
	C658	3ea				



DAIHATSU Feroza		F300		1988 - 1992		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea				
Raw Nitro	G6897BY	2ea		G6019M3Y	2ea	
<b>TORSION BAR</b>						
EFS	TB-197	1pr				
<b>LEAF SPRING</b>						
Formula				FLS-090	2ea	Approx 40mm Lift at 0-300kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-090	1ea	FLS-090 x 2, C658 x 4, KIT063K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
U Bolts				C658	4ea	
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT063K	1kt	
<b>AIRBAG</b>						
Polyair Red Bag Kit				75598	1kt	



DAIHATSU Feroza		F310		1992 - 1999		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea				
Raw Nitro	G6897BY	2ea		G6028Y	2ea	
<b>TORSION BAR</b>						
EFS	TB-197	1pr				
<b>LEAF SPRING</b>						
Formula				FLS-027	2ea	Approx 40mm 0-300kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-027	1ea	FLS-027 x 2, C658 x 4, KIT064K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
U Bolts				C658	4ea	
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT064K	1kt	To suit Wide Track Series

DAIHATSU Rocky

F7, F8

1984 - 1993



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6019M3Y	2ea		G6019M3Y	2ea	
				G6164Y	2ea	Tray Back
<b>STEERING DAMPER</b>						
Replacement Damper	14031	1ea				
<b>LEAF SPRING</b>						
Formula	FLS-091	2ea	approx. 50mm up to 45kg	FLS-089	2ea	approx. 50mm SWB/LWB Wagon at 100kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-091	1ea	FLS-091 x 2, C659 x 1, C658 x 3, KIT062K x 1			
	FLSKIT-089	1ea	FLS-089 x 2, C658 x 4, KIT062K x 1			
	FLSKIT-191	1ea	FLS-091 x 2, C659 x 1, C658 x 3, KIT111K x 1			
	FLSKIT-166	1ea	FLS-089 x 2, C658 x 4, KIT111K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
U Bolts	C659	1ea	RHS Inner	C658	4ea	
	C658	3ea				
For individual bushes refer to the SuperPro Catalogue						
SuperPro						
Spring Eye & Shackle Bush Kit	KIT062K	1kt	Fits Front & Rear F70,F75,F80 Wagon Series			
	KIT111K	1kt	Fits Front & Rear F77,F87 Trayback Series			
<b>AIRBAG</b>						
Polyair Red Bag Kit				78503	1kt	

<b>DAIHATSU Rocky</b>		<b>F7, F98 (Coil rear)</b>		<b>1993 - 1998</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6833M1BY	2ea				
<b>TORSION BAR</b>						
EFS	TB-198	1pr				
<b>COIL SPRING</b>						
King Springs				KHRS-17	1pr	Raised
<b>AIRBAG</b>						
Polyair Red Bag Kit				15498	1kt	



<b>DAIHATSU Terios</b>		<b>J1</b>		<b>1997 - 2006</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Koni Heavy Track Oil	86-2590	2ea	Fits original Showa Struts only to 11/00	80-2783	2ea	7/97-11/00
Sachs				313 789	2ea	
<b>COIL SPRING</b>						
King Springs	KDFR-90	1pr	Raised	KMRS-21	1pr	Raised



**DODGE RAM 1500** **DS** **2008 - on**



Description	FRONT		Qty	Notes	REAR		Qty	Notes
<b>SHOCK ABSORBER</b>								
Formula	60018	2ea	0-50mm Lift		60019	2ea	0-50mm Lift	
Bilstein	24-317887	2ea	0-50mm Lift		24-187374	2ea	0-25mm Lift	
					25-242393	2ea	0-25mm Lift (external reservoir)	
<b>COIL SPRING</b>								
King Springs	KDFR-402	1pr	Raised		KDRR-403	1pr	Raised	
	KDFR-402HD	1pr	Raised HD 150-250kg		KDRR-403HD	1pr	Raised HD 100-300kg	
					KDRR-403EHD	1pr	Raised EHD 500kg	
<b>ROLL CONTROL</b>								
Fixed Offset Upper Control Arms	TRC6645	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster					
<b>AIRBAG</b>								
Polyair Ultimate Kit					99047ULT	1kt	standard height	
					99047RULT	1kt	2" Lift	
Coil Rite Airbag Kit					CR5159HP	1kt	standard height	
					CR5171HP	1kt	25mm Lift (DS Warlock std)	
On Air Airbag Kit					CR5161HP	1kt	50mm Lift	
					OA6044	1kt	0-50mm Lift	
FORMULA 4X4 KITS	Refer above on part quantities and specifications							
Formula Lift Kit	RAM-005	60018, 60019, KDFR-402, KDRR-403						
Bilstein Levelling Kit	RAM-003L	24-317887, 24-187374						



DODGE RAM 1500		DT		2018 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	60016	2ea	0-50mm Lift	60017	2ea	0-50mm Lift
Bilstein	24-232203	2ea	0-50mm Lift	24-233354	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KDFR-402	1pr	Raised (182mm Seat Height)	KDRR-404	1pr	Raised
	KDFR-402HD	1pr	Raised HD 150-250kg (182mm SSH)	KDRR-404HD	1pr	Raised HD 100-300kg
	KDFR-406	1pr	Raised (210mm Seat Height)	KDRR-404EHD	1pr	Raised EHD 500kg
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arms	TRC6640	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
<b>AIRBAG</b>						
Polyair Ultimate Kit				99057ULT	1kt	standard height
				99057RULT	1kt	2" Lift
Coil Rite Airbag Kit				CR5164HP	1kt	standard height
				CR5167HP	1kt	50mm Lift
On Air Airbag Kit				OA6044	1kt	0-50mm Lift
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	RAM-006		60016, 60017, KDFR-406, KDRR-404			
Bilstein Levelling Kit	RAM-004L		24-300872, 24-233354			



**FORD Courier/Raider**
**PC - PH**
**1987 - 2006**


Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50021	2ea	0-50mm Lift	50002	2ea	0-50mm Lift
Raw Nitro	G6897M2BY	2ea	0-50mm Lift	G6014M4Y	2ea	0-50mm Lift
<b>TORSION BAR</b>						
EFS	TB-1546A	1pr	27mm OD, 927mm long			
<b>LEAF SPRING</b>						
Formula				FLS-085	2e	Approx 35mm Lift at 0-300kg load
				FLS-084	2e	Approx 35mm lift at const.300kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-084	1ea	FLS-084 x 2, FUB-002 x 4, FSK-008 x 2, KIT065K x 1			
	FLSKIT-085	1ea	FLS-085 x 2, FUB-002 x 4, FSK-008 x 2, KIT065K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-008	2ea	Greaseable
U Bolts				FUB-002	4ea	
Caster Wedges				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
SuperPro			For individual bushes refer to the SuperPro Catalogue			
Spring Eye & Shackle Bush Kit				KIT065K	1kt	
<b>AIRBAG</b>						
Polyair Red Bag Kit				75598	1kt	1991-1999 Std Height
				75698	1kt	2000-2006 Std Height
Ride Rite Airbag Kit				RR4596	1kt	Diesel & 4cyl Petrol Std Height
				RR4585	1kt	4.0Ll V6 Std Height
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	COUR-003		50021, 50002, FLS-085, FSK-008, 794, FUB-002, KIT065K			
RAW Lift Kit	COUR-001		G6897M2BY, G6014M4Y, FLS-085, FSK-008, 794, FUB-002, KIT065K			
Formula Load Kit	COUR-004		50021, 50002, TB-1546A, FLS-084, FSK-008, 794, FUB-002, KIT065K			
RAW Load Kit	COUR-002		G6897M2BY, G6014M4Y, TB-1546A, FLS-084, FSK-008, 794, FUB-002, KIT065K			

**FORD Escape** **BA, ZA-ZD** **2001 - 2013**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	317 101	1ea	LHS (up to 2004)	312 589	2ea	
	317 102	1ea	RHS (up to 2004)			
Bilstein				24-290562	2ea	
<b>COIL SPRING</b>						
King Springs	KMFR-54	1pr	Raised	KMRR-55	1pr	Raised
<b>AIRBAG</b>						
Polyair Red Bag Kit				12498	1kt	standard height
Coil Rite Airbag Kit				CR5140/HP	1kt	standard height

**FORD Everest**

**UA**

**2015 - 2018**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula</i>	40002	2ea	0-50mm Lift	50029	2ea	0-50mm Lift
<i>Bilstein</i>	24-231527	2ea		24-290562	2ea	
<i>Raw Nitro</i>	G6898	2ea	0-50mm Lift			
<i>Raw NitroMax</i>	NM898	2ea	0-50mm Lift			
<i>Koni Heavy Track Raid</i>	82-2603SP1	2ea	0-30mm Lift			
<b>COIL SPRING</b>						
<i>King Springs</i>	KFFR-08	1pr	Raised	KFRR-106	1pr	Raised 0-100kg
				KFRR-106HD	1pr	Raised Heavy Duty 100-300kg
<b>ROLL CONTROL</b>						
<i>Sway Bar</i>	RC0009FZ-33	1kt	33mm 2 Position Adj. Sway Bar	RC0076RZ-24	1kt	24mm 2 Position Adj. Sway Bar
<i>Adjustable Upper Control Arms</i>	TRC6560	1pr	+/- 2.5 Degrees of Camber Adjustment and 0 to +3 Degrees of Caster Adjustment			
<i>Fixed Offset Upper Control Arms</i>	TRC6560	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
<i>ReadyStrut</i>			<i>ReadyStruts come complete with Strut, Spring &amp; Upper Mounts. No dismantling required</i>			
<i>ReadyStrut Top Caps</i>	RS006	2ea	Strut Cap, Spring Seat, Nuts & Washers (Suits RAW Predator & Bilstein Struts)			
	RS011	2ea	Strut Cap, Spring Seat, Nuts & Washers (Suits O.E. RAW Nitro Max & Rancho Struts)			
<i>Formula Struts &amp; King Springs</i>	RANGER08-FOR, RANGER08T-FOR, RANGER08H-FOR, RANGER08HT-FOR, RANGER08HD-FOR				1pr	
<i>RAW Struts &amp; King Springs</i>	RANGER08-RAW, RANGER08T-RAW, RANGER08HT-RAW, RANGER08HD-NMRAW				1pr	
<i>Bilstein Struts &amp; King Springs</i>	RANGER08-BIL, RANGER08T-BIL, RANGER08HT-BIL, RANGER08HD-BIL				1pr	
<b>AIRBAG</b>						
<i>Polyair Red Bag Kit</i>				95094R	1kt	2" Lift
<i>Polyair Ultimate Kit</i>				95094RULT	1kt	2" Lift
				CR5138	1kt	Std Height
<i>Coil Rite Airbag Kit</i>				CR5139	1kt	20-30mm Lift
				CR5140	1kt	40-50mm Lift
<b>FORMULA 4X4 KITS</b> <i>It is highly recommended to fit TRC6560/TRC6560 FUCA when lifting this vehicle</i>						
<i>Refer above on part quantities and specifications</i>						
<i>Formula Lift Kit</i>	EVER-003	40002, 50029, KFFR-08, KFRR-106				
<i>Formula Lift Kit with ReadyStruts</i>	EVER-003R	RANGER08-FOR, 50029, KFRR-106				
<i>Bilstein Lift Kit</i>	EVER-001	24-231527, 24-290562, KFFR-08, KFRR-106				
<i>Bilstein Lift Kit with ReadyStruts</i>	EVER-001R	RANGER08-BIL, 24-290562, KFRR-106				



FORD Everest		UA II		2018 - 2022			
Description	FRONT	Qty	Notes	REAR	Qty	Notes	
<b>SHOCK ABSORBER</b>							
Formula	40012	2ea	0-50mm Lift	50029	2ea	0-50mm Lift	
Bilstein	24-317726	2ea		24-290562	2ea		
<b>COIL SPRING</b>							
King Springs	KFFR-24	1pr	40mm Lift	KFFR-106	1pr	Raised 0-100kg	
	KFFR-24H	1pr	40mm Lift Heavy Duty	KFFR-106HD	1pr	Raised Heavy Duty 100-300kg	
<b>ROLL CONTROL</b>							
Adjustable Upper Control Arms	TRC6560	1pr	+/- 2.5 Degrees of Camber Adjustment and 0 to +3 Degrees of Caster Adjustment				
Fixed Offset Upper Control Arms	TRC6560	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster				
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required						
Formula Struts & King Springs	RANGER24-FOR, RANGER24H-FOR, RANGER24HH-FOR				1pr		
Bilstein Struts & King Springs	RANGER24-BIL, RANGER24H-BIL				1pr		
<b>AIRBAG</b>							
Polyair Red Bag Kit				95094R	1kt	2" Lift	
Polyair Ultimate Kit				95094RULT	1kt	2" Lift	
Coil Rite Airbag Kit				CR5138	1kt	Std Height	
				CR5139	1kt	20-30mm Lift Height	
					CR5140	1kt	40-50mm Lift
<b>FORMULA 4X4 KITS</b>							
It is highly recommended to fit TRC6560/TRC6560 FUCA when lifting this vehicle							
Refer above on part quantities and specifications							
Formula Lift Kit	EVER-004	40012, 50029, KFFR-24, KFFR-106					
Formula Lift Kit with ReadyStruts	EVER-004R	RANGER24-FOR, 50029, KFFR-106					
Bilstein Lift Kit	EVER-002	24-317726, 24-290562, KFFR-24, KFFR-106					
Bilstein Lift Kit with ReadyStruts	EVER-002R	RANGER24-BIL, 24-290562, KFFR-106					



FORD Everest		UB, P704		2022 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40017	2ea	0-50mm Lift	50029	2ea	0-50mm Lift
Bilstein		2ea			2ea	
<b>COIL SPRING</b>						
King Springs	KFFR-122SP	1pr	Raised	KFRR-125	1pr	Raised
	KFFR-122B	1pr	Raised Comfort 50-100kg	KFRR-125HD	1pr	Raised 100-300kg
	KFFR-122	1pr	Raised 50-100kg		1pr	
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arms	TRC6750	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
Sway Bar	RC0129FZ-33	1kt	33mm 2 Position Adj. Sway Bar			
<b>AIRBAG</b>						
Polyair Red Bag Kit				95099R	1kt	2" Lift
Polyair Ultimate Kit				95099RULT	1kt	2" Lift
Coil Rite Airbag Kit				CR5139HP	1kt	Std Height
				CR5140HP	1kt	25mm Lift
				CR5175HP	1kt	50mm Lift
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
Formula Struts & King Springs	RANGER122-FOR RANGER122H-FOR RANGER122HH-FOR RANGER122HT-FOR RANGER122T-FOR				1pr	
FORMULA 4X4 KITS	It is highly recommended to fit TRC6750 FUCA when lifting this vehicle					
	Refer above on part quantities and specifications					
Formula Lift Kit	EVER-005	40017, KFRR-122, 50029, KFRR-125H, TRC0049				
Formula Lift Kit with ReadyStruts	EVER-005R	RANGER122-FOR, 50029, KFRR-125H, TRC0049				

<b>FORD Explorer</b>		<b>UN-US</b>		<b>1996 - 2001</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
(excludes adjustable suspension)						
Sachs	310 225	2ea		030 218	2ea	
Koni Heavy Track Gas	30-1614	2ea		30-1502	2ea	96-4/99
Raw	84030	2ea		84031	2ea	96-4/99
SuperPro For individual bushes refer to the SuperPro Catalogue						
Spring Eye & Shackle Bush Kit				KIT066K	1kt	
<b>AIRBAG</b>						
Polyair Red Bag Kit				75606	1kt	
Ride Rite Airbag Kit				RR4568	1kt	



<b>FORD Explorer</b>		<b>UT-UZ</b>		<b>2001 - 2008</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>COIL SPRING</b>						
King Springs	KFFR-78	1pr	6 Cyl Raised	KKRR-79	1pr	Raised P/Rate
	KFFR-78SP	1pr	V8 Cyl Raised			
<b>AIRBAG</b>						
Polyair Red Bag Kit				75606	1kt	





FORD F150		13th Gen		2015 - 2020		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arms	TRC6670	1pr	designed for 2-4" Lifts			
<b>AIRBAG</b>						
Polyair Ultimate Kit				88385ULT	1kt	standard height
Ride Rite Airbag Kit				RR4688	1kt	standard height
<b>FORMULA 4x4 KITS</b>						
Bilstein Levelling Kit	F150-003L					24-248129, 33-253190



FORD F150		14th Gen		2021 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arms	TRC6675	1pr	designed for 2-4" Lifts			
<b>FORMULA 4x4 KITS</b>						
Bilstein Levelling Kit	F150-004L					24-323690, 33-253190



<b>FORD F250</b>		<b>Utility (Single and Dual Cab)</b>		<b>2001 - on</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Bilstein</i>	BE5-2818	2ea		BE5-C296	4ea	
<i>Koni Heavy Track</i>	88-1719	2ea		88-1720	2ea	Inside Location If Quad Rear
				88-1721	2ea	Quad Susp-Outside
<b>LEAF SPRING</b>						
<i>Formula</i>	FORD-29E	2ea	Approx 40mm lift at 80kg	FORD-32	2ea	Approx 40mm Lift at 300kg
	FORD-30HD	2ea	Approx 50mm lift at 70kg	FORD-32E	2ea	Approx 50mm Lift at 300kg
Bushes supplied with Leaf Springs Front and Rear						
<b>LEAF SPRING KIT</b>						
<i>Formula</i>	FLSKIT-168	1ea	FORD-29E x 2, FORD-32 x 2, C471 x 4, C472 x 4			
	FLSKIT-169	1ea	FORD-30HD x 2, FORD-32 x 2, C471 x 4, C472 x 4			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
<i>U Bolts</i>	C471	4ea		C472	4ea	
<i>Caster Wedges</i>				CW-751	2ea	1 degree
				CW-752	2ea	2 degrees
				CW-753	2ea	3 degrees
<b>AIRBAG</b>						
<i>Polyair Bellows Kit Kit</i>				85301	1kt	Quad Shock Rear Suspension
<i>Ride Rite Airbag Kit</i>	RR4557			RR4566	1kt	Under chassis Rear kit
				RR4530	1kt	Outboard mounted Rear kit
<b>ADJUSTABLE PANHARD ROD</b>						
<i>Formula</i>	10-1014	1ea				

**FORD Maverick** Refer Nissan Patrol

**FORD Raider** Refer Courier





FORD Ranger		PJ, PK		2006 - 2011		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50023	2ea	0-50mm Lift	50002	2ea	0-50mm Lift
Raw Nitro	G6011M1BY	2ea	0-40mm	G6014M4Y	2ea	0-40mm
Raw NitroMax				NM326M4	2ea	0-40mm
Bilstein	B46-2076BT	2ea	0-40mm	24-231534	2ea	0-40mm
Sachs Max	317 631	2ea	0-40mm	317 230	2ea	0-40mm
<b>TORSION BAR</b>						
EFS	TB-1551	1pr	27mm OD, 1024mm Long			
<b>LEAF SPRING</b>						
Formula				FLS-083*	2ea	Approx 35mm Lift at 0-300kg load
				FLS-082*	2ea	Approx 35mm Lift at 300kg+ load
* Please Note - Original Eye Bushes cannot be removed without damage						
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-082	1ea	FLS-082 x 2, FUB-002 x 4, KIT145SK x 1			
	FLSKIT-083	1ea	FLS-083 x 2, FUB-002 x 4, KIT145SK x 1			
	FLSKIT-188	1ea	FLS-082 x 2, FUB-004 x 4, KIT145SK x 1			
	FLSKIT-183	1ea	FLS-083 x 2, FUB-004 x 4, KIT145SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-008	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts - Check Axle Housing OD				FUB-002	4ea	Axle Housing 83mm OD
				FUB-004	4ea	Axle Housing 88mm OD
Caster Wedges				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
<b>MISC PARTS</b>						
Shock Tower Re-Inforcement	10-1003	1kt	Bracket Mount kit to provides support to shock tower			
SuperPro			For individual bushes refer to the SuperPro Catalogue			
Spring Eye & Shackle Bush Kit				KIT145K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT145SK	1kt	Greaseable Shackles, Pins & Bushes
Centre Bearing Alignment Kit				SPF4361K	1ea	
<b>AIRBAG</b>						
Polyair Bellows Kit				85126	1kt	0-30mm Lift
				85126R	1kt	50mm Lift
Ride Rite Airbag Kit				RR4596	1kt	Std Height
Load-Up Kit				LU8013	1kt	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	RANG-083		50023, 50002, FLS-083, FUB-002, KIT145SK, SPF4361K			
	RANG-088		50023, 50002, FLS-083, FUB-004, KIT145SK, SPF4361K			
RAW Lift Kit	RANG-183		G6011M1BY, G6014M4Y, FLS-083, FUB-002, KIT145SK, SPF4361K			
	RANG-188		G6011M1BY, G6014M4Y, FLS-083, FUB-004, KIT145SK, SPF4361K			
Bilstein Lift Kit	RANG-383		B46-2076BT, 24-231534, TB-1551, FLS-083, FUB-002, KIT145SK, SPF4361K			
	RANG-388		B46-2076BT, 24-231534, TB-1551, FLS-083, FUB-004, KIT145SK, SPF4361K			
RAW Load Kit	RANG-283		G6011M1BY, NM326M4, TB-1551, FLS-082, FUB-002, KIT145SK, SPF4361K			
	RANG-288		G6011M1BY, NM326M4, TB-1551, FLS-082, FUB-004, KIT145SK, SPF4361K			

FORD Ranger		PX I & PX II		2011 - 2018		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formala	40002	2ea	0-50mm Lift	50002	2ea	0-50mm Lift
Raw Nitro	G6898	2ea	0-50mm Lift	G6899	2ea	0-50mm Lift
Raw NitroMax	NM698	2ea	0-50mm Lift	NM326M4	2ea	0-50mm Lift
Bilstein	24-231527	2ea	0-50mm Lift	24-231534	2ea	0-50mm Lift
Sachs Max	317 632	2ea	0-40mm	317 230	2ea	0-40mm
Koni Heavy Track Raid	82-2603SP1	2ea	0-30mm Lift	82-2604	2ea	0-30mm Lift
<b>COIL SPRING</b>						
King Springs	KFFR-08	1pr	40mm Lift			
	KFFR-08T	1pr	40mm Lift Comfort			
	KFFR-08HD	1pr	40mm Lift 50-100kg			
	KFFR-08HT	1pr	40mm Lift Comfort 50-100kg			
	KFFR-08HHD	1pr	40mm Lift Comfort 100-250kg			
<b>LEAF SPRING</b>						
Formala				FLS-005	2ea	50mm Lift 0-300kg Constant Load
				FLS-006	2ea	50mm Lift 300-500kg Constant Load
				FLS-007	2ea	50mm Lift 500kg + Constant Load
<i>Note: When fitting lifted rear springs it is advisable to use SPF4659K to re-align the centre bearing</i>						
<b>LEAF SPRING KIT</b>						
Formala	FLSKIT-005	1ea	FLS-005 x 2, FUB-002 x 4, KIT168SK x 1			
	FLSKIT-006	1ea	FLS-006 x 2, FUB-002 x 4, KIT168SK x 1			
	FLSKIT-007	1ea	FLS-007 x 2, FUB-009 x 4, KIT168SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-006	2ea	Greaseable (grease nipple to outside)
Fixed Pin				FSK-015	2ea	Greaseable (grease nipple to inside)
U Bolts				FSP-001	2ea	Greaseable
Caster Wedges				FUB-009	4ea	use with FLS-007
				FUB-004	4ea	
				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
			CW603	2ea	3 degrees	
<b>ROLL CONTROL</b>						
Sway Bar	RC0009FZ-33	1kt	33mm 2 Position Adj. Sway Bar	RC0009RZ-22	1kt	22mm 3 Position Adj. Sway Bar
				RC0009RZ-20	1kt	20mm 3 Position Adj. Sway Bar
Adjustable Upper Control Arms	TRC8560	1pr	+/- 2.5 Degrees of Camber Adjustment and 0 to +3 Degrees of Caster Adjustment			
Fixed Offset Upper Control Arms	TRC8560	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
SuperPro Easy-Lift Kit	TRC168FLK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. 2 x Front Strut Spacers Only. (Suits PX I & PX II)			
	TRC169LK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Rear Raising Blocks, 4 x U Bolts. (Suits PX II)			
	TRC168LK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Rear Raising Blocks, 4 x U Bolts. (Excluding PX II)			



FORD Ranger		PX I & PX II - continued		2011 - 2018		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SuperPro</b>	For individual bushes refer to the SuperPro Catalogue					
<b>Strut Fitting Kit</b>	SPF4906K	1kt	Contains bushes & washers - Suits Bilstein & RAW Struts Only			
<b>Spring Eye &amp; Shackle Bush Kit</b>				KIT168K	1kt	Bushes Only
<b>Shackle, Pin &amp; Bush Kit</b>				KIT168SK	1kt	Greaseable Shackles, Pins & Bushes
<b>Centre Bearing Alignment Kit</b>				SPF4659K	1ea	
<b>Diff Drop Kit</b>	TRCRANGDD	1	Corrects the front differential by 25mm			
<b>AIRBAG</b>						
<b>Polyair Bellows Kit</b>				88227-2	1kt	Std Height
				88227-2R	1kt	30-50mm Lift
<b>Ride Rite Airbag Kit</b>				RR4634	1kt	0-40mm Lift
<b>Load-Up Kit</b>				LU8015	1kt	
<b>ReadyStrut</b>	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
<b>ReadyStrut Top Caps</b>	RS006	2ea	Strut Cap, Spring Seat, Nuts & Washers (Suits RAW Predator & Bilstein Struts)			
	RS011	2ea	Strut Cap, Spring Seat, Nuts & Washers (Suits O.E, RAW Nitro & RAW Nitro Max Struts)			
<b>Formula Struts &amp; King Springs</b>	RANGER08-FOR, RANGER08T-FOR, RANGER08H-FOR, RANGER08HT-FOR, RANGER08HD-FOR				1pr	
<b>RAW Struts &amp; King Springs</b>	RANGER08-RAW, RANGER08T-RAW, RANGER08HT-RAW, RANGER08-NMRAW, RANGER08T-NMRAW, RANGER08HT-NMRAW, RANGER08HD-NMRAW				1pr	
<b>Koni Struts &amp; King Springs</b>	RANGER08HD-KONI				1pr	
<b>Bilstein Struts &amp; King Springs</b>	RANGER08-BIL, RANGER08T-BIL, RANGER08H-BIL, RANGER08HT-BIL, RANGER08HD-BIL, RANGER08HHD-BIL, RANGER08HDT-BIL				1pr	
<b>Bilstein Adjustable Struts &amp; King Springs</b>	RANGE08ADJ-BIL				1pr	
<b>FORMULA 4x4 KITS</b>	<b>It is highly recommended to fit TRC8560/TRC6560 FUCA when lifting this vehicle</b>					
	Refer above on part quantities and specifications					
<b>Formula Lift Kit</b>	RANG-306		40002, 50002, KFFR-08, FLS-005, FUB-004, KIT168SK, SPF4659K			
<b>Formula Lift Kit with ReadyStruts</b>	RANG-306R		RANGER08-FOR, 50002, FLS-005, FUB-004, KIT168SK, SPF4659K			
<b>RAW Lift Kit</b>	RANG-300		G6898, G6899, KFFR-08, FLS-005, FUB-004, KIT168SK, SPF4659K			
<b>RAW Lift Kit with ReadyStruts</b>	RANG-300R		RANGER08-RAW, G6899, FLS-005, FUB-004, KIT168SK, SPF4659K			
<b>Bilstein Lift Kit</b>	RANG-304		24-231527, 24-231534, KFFR-08T, FLS-005, FUB-004, KIT168SK, SPF4659K, SPF4906K			
<b>Bilstein Lift Kit with ReadyStruts</b>	RANG-304R		RANGE08T-BIL, 24-231534, FLS-005, FUB-004, KIT168SK, SPF4659K			
<b>Bilstein Lift Kit with adjustable ReadyStruts</b>	RANG-304ADJ		RANGE08ADJ-BIL, 24-231534, FLS-005, FUB-004, KIT168SK, SPF4659K			
<b>RAW Load Kit (300-500kg)</b>	RANG-303		NM898, NM326M4, KFFR-08T, FLS-006, FUB-004, KIT168SK, SPF4659K			
<b>RAW Load Kit with ReadyStruts (300-500kg)</b>	RANG-303R		RANGER08HD-NMRAW, NM326M4, FLS-006, FUB-004, KIT168SK, SPF4659K			
<b>RAW Load Kit (500kg+)</b>	RANG-301		NM898, NM326M4, KFFR-08HD, FLS-007, FUB-009, KIT168SK, SPF4659K			
<b>RAW Load Kit with ReadyStruts (500kg+)</b>	RANG-301R		RANGER08HD-NMRAW, NM326M4, FLS-007, FUB-009, KIT168SK, SPF4659K			

FORD Ranger		PX III		2018 - 2022		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40012	2ea	0-50mm Lift	50002	2ea	0-50mm Lift Raised
Formula F4R Remote Reservoir Shocks	91003	1pr	only sold as part of kit (see below)	92002	1pr	only sold as part of kit (see below)
Bilstein	24-317726	2ea		24-231534	2ea	
Raw NitroMax	NM1110	2ea	0-50mm Lift	NM326M4	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KFFR-24	1pr	40mm Lift			
	KFFR-24H	1pr	40mm Lift 50-100kg			
	KFFR-24HH	1pr	40mm Lift 100-250kg			
	KFFR-24FX4	1pr	20-25mm Lift for vehicles with Bull Bar fitted			
<b>LEAF SPRING</b>						
Formula				FLS-005	2ea	50mm Lift 0-300kg Constant Load
				FLS-006	2ea	50mm Lift 300-500kg Constant Load
				FLS-007	2ea	50mm Lift 500kg + Constant Load
Note: When fitting lifted rear springs it is may be necessary to use SPF4659K to re-align the centre bearing						
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-170	1ea	FLS-005 x 2, FUB-004 x 4, KIT168SK x 1			
	FLSKIT-172	1ea	FLS-006 x 2, FUB-004 x 4, KIT168SK x 1			
	FLSKIT-007	1ea	FLS-007 x 2, FUB-009 x 4, KIT168SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-006	2ea	Greaseable (grease nipple to outside)
Fixed Pin				FSK-015	2ea	Greaseable (grease nipple to inside)
U Bolts				FSP-001	2ea	Greaseable
				FUB-004	4ea	
				FUB-009	4ea	use with FLS-007
<b>ROLL CONTROL</b>						
Sway Bar	RC0105FZ-35	1kt	35mm 2 Position Adj. Sway Bar	RC0009RZ-20	1kt	20mm 3 Position Adj. Sway Bar
				RC0009RZ-22	1kt	22mm 3 Position Adj. Sway Bar
Adjustable Upper Control Arms	TRC8560	1pr	+/- 2.5 Degrees of Camber Adjustment and 0 to +3 Degrees of Caster Adjustment			
Fixed Offset Upper Control Arms	TRC8560	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
<b>SuperPro</b> For individual bushes refer to the SuperPro Catalogue						
Spring Eye & Shackle Bush Kit				KIT168K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT168SK	1kt	Greaseable Shackles, Pins & Bushes
Fixed Pin Protection Cap				SPF4848K	1kt	
Centre Bearing Alignment Kit				SPF4659K	1ea	
Diff Drop Kit		1	Corrects the front differential by 25mm			



FORD Ranger		PX III - continued		2018 - 2022		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIRBAG</b>						
<b>Polyair Bellows Kit</b>				88227-2	1kt	Std Height
				88227-2R	1kt	30-50mm Lift
<b>Ride Rite Airbag Kit</b>				RR4634	1kt	0-40mm Lift
<b>Load-Up Kit</b>				LU8015	1kt	
<b>ReadyStrut</b>	<i>ReadyStruts come complete with Strut, Spring &amp; Upper Mounts. No dismantling required</i>					
<b>Formula Struts &amp; King Springs</b>	RANGER24-FOR, RANGER24H-FOR, RANGER24HH-FOR				1pr	
<b>RAW Struts &amp; King Springs</b>	RANGER24-NMRAW, RANGER24H-NMRAW				1pr	
<b>Bilstein Struts &amp; King Springs</b>	RANGER24-BIL, RANGER24H-BIL				1pr	
<b>FORMULA 4X4 KITS</b>	<b>It is highly recommended to fit TRC8560/TRC6560 FUCA when lifting this vehicle</b>					
	Refer above on part quantities and specifications					
<b>Formula Lift Kit</b>	RANG-309		40012, 50002, KFFR-24, FLS-005, FUB-004, KIT168SK, SPF4659K, SPF4848K			
<b>Formula Lift Kit with ReadyStruts</b>	RANG-309R		RANGER24-FOR, 50002, FLS-005, FUB-004, KIT168SK, SPF4659K, SPF4848K			
<b>Bilstein Lift Kit</b>	RANG-308		24-317726, 24-231534, KFFR-24, FLS-005, FUB-004, KIT168SK, SPF4659K, SPF4848K			
<b>Bilstein Lift Kit with ReadyStruts</b>	RANG-308R		RANGER24-BIL, 24-231534, FLS-005, FUB-004, KIT168SK, SPF4659K, SPF4848K			
<b>Formula Load Kit</b>	RANG-311		40012, 50002, KFFR-24, FLS-006, FUB-004, KIT168SK, SPF4659K, SPF4848K			
<b>Formula Load Kit with ReadyStruts</b>	RANG-311R		RANGER24-FOR, 50002, FLS-006, FUB-004, KIT168SK, SPF4659K, SPF4848K			
<b>Formula F4R Kit</b>	RANG-400-2		91003, 92002, FLS-005, FUB-004, KIT168SK, SPF4659K			
	Formula F4R Adjustable Remote Reservoir Kit is set to: Front: 63mm or 2.5" Lift with Bull Bar & Winch (adjustment up to 75mm or 3" or to be lowered if required); Rear: 63mm or 2.5"					



FORD Ranger		PY, P703		2022 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40017	2ea	0-50mm Lift	50036	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KFFR-122SP	1pr	40-45mm Lift			
	KFFR-122	1pr	50mm Lift			
	KFFR-122T	1pr	50mm Lift Comfort Taper			
	KFFR-122H	1pr	50mm Lift 50-100kg			
	KFFR-122HT	1pr	50mm Lift 50-100kg Comfort Taper			
	KFFR-122HH	1pr	50mm Lift 100-250kg			
<b>LEAF SPRING</b>						
Formula				FLS-153	2ea	45mm Lift 150kg Constant Load
				FLS-154	2ea	40mm Lift 300kg Constant Load
				FLS-155	2ea	40mm Lift 500kg Constant Load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-253	1ea	FLS-153 x 2, FUB-005 x 4, KIT168SK x 1			
	FLSKIT-254	1ea	FLS-154 x 2, FUB-005 x 4, KIT168SK x 1			
	FLSKIT-255	1ea	FLS-155 x 2, FUB-005 x 4, KIT168SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-015	2ea	Greaseable (grease nipple to inside)
U Bolts				FUB-005	4ea	
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arms	TRC6750	1pr	to suit vehicles with Aluminium Steering Knuckles (does not suit Raptor, XL & XLS models)			
	TRC6751	1pr	to suit vehicles with Steel Steering Knuckles (XL & XLS models)			
Sway Bar Link	TRC0049	1pr	avoids contact of sway bar on FLCA			
Sway Bar	RC0129FZ-33	1kt	33mm 2 Position Adj. Sway Bar			
<b>SuperPro</b> For individual bushes refer to the SuperPro Catalogue						
Centre Bearing Alignment Kit				TRC0048	1ea	
Headlight Sensor Bracket Spacer				SPF5719K	1ea	
Fixed Pin Protection Cap				SPF4848K	1kt	
Greaseable Pin and Bush Kit - Front Eye				SPF4462K	1kt	
Spring Eye & Shackle Bush Kit				KIT168K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT168SK	1kt	Greaseable Shackles, Pins & Bushes
Headlight Sensor Bracket Spacer				SPF5719K	1kt	
<b>AIRBAG</b>						
Polyair Bellows Kit				88277R	1kt	2" Lift
Ride Rite Airbag Kit				RR4737	1kt	2" Lift
<b>ReadyStrut</b> ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required						
Formula Struts & King Springs	RANGER122-FOR RANGER122H-FOR RANGER122HH-FOR RANGER122HT-FOR RANGER122SP-FOR RANGER122T-FOR	1pr				
<b>FORMULA 4X4 KITS</b> It is highly recommended to fit TRC6750 FUCA when lifting this vehicle Refer above on part quantities and specifications						
Formula Lift Kit	RANG-312		40017, 50036, KFFR-122, FLS-153, FUB-005, KIT168SK, SPF4848K, TRC0048, TRC0049, SPF5719K			
Formula Lift Kit with ReadyStruts	RANG-312R		RANGER122-FOR, 50036, FLS-153, FUB-005, KIT168SK, SPF4848K, TRC0048, TRC0049, SPF5719K			
Bilstein Lift Kit (Bilstein B8/B5100)	RANG-314		RANGERNXTGENFR, RANGERNXTGENRR, BCS-BILRANXTGEN, FLS-153, FUB-005, KIT168SK, TRC0048, SPF4848K, SPF5719K			

**FORD Ranger Raptor** **PY, P703** **2022 - on**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>COIL SPRING</b>						
<i>King Springs</i>	KFFR-123	1pr	40-45mm Lift	KFRR-124	1pr	20-25mm Lift
	KFFR-123B	1pr	40-45mm Lift Black	KFRR-124B	1pr	20-25mm Lift Black
<b>FORMULA 4X4 KITS</b>	Refer above on part quantities and specifications					
<i>Formula Lift Kit</i>	RAPTOR-002C (yellow)			KFFR-123, KFRR-124		
	RAPTOR-002CB (black)			KFFR-123B, KFRR-124B		



FOTON Tunland		P201		2012 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Bilstein</i>	BES-D563	2ea	0-50mm Lift	BES-D564	2ea	0-50mm Lift
<i>Formula</i>	40008	2ea	0-50mm Lift	50001	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6324	1pr	0-50mm Lift	G6014Y	2ea	0-50mm Lift
<i>Raw Nitro Max</i>	NM324 ReadyStruts Only	1pr	0-50mm Lift	NM326	2ea	0-50mm Lift
<i>Sachs Max</i>	316 293	2ea	0-40mm	314 070	2ea	0-40mm
<i>Koni Heavy Track</i>	82-2560	2ea	Std Height	82-2561	2ea	Std Height
<i>Koni Heavy Track Raid</i>	88-1713	2ea	0-50mm Lift	90-5410	2ea	0-50mm Lift
<b>COIL SPRING</b>						
<i>King Springs</i>	KTFR-101	1pr	Raised			
	KTFR-101T	1pr	Raised Comfort			
	KTFR-101H	1pr	Raised 50-100kg			
	KTFR-101HT	1pr	Raised Comfort 50-100kg			
	KTFR-101HD	1pr	Raised 100-250kg			
	KTFR-101HDT	1pr	Raised Comfort 100-250kg			
<b>LEAF SPRING</b>						
<i>Formula</i>				FLS-001 *	2ea	Approx 40mm Lift at 100kg Dual Cab
				FLS-001 *	2ea	Approx 40mm Lift at 200kg SingleCab
				FLS-003	2ea	Approx 40mm Lift at 300kg Dual Cab
				FLS-003	2ea	Approx 40mm Lift at 400kg Single Cab
				FLS-004 *	2ea	Approx 40mm Lift at 400kg Dual Cab
			FLS-004 *	2ea	Approx 40mm Lift at 500kg Single Cab	
* Note: When fitting these springs to Auto vehicles recommend fitting Castor wedges (CW603) to eliminate vibration. Suggest fitting to manual vehicles as a precaution.						
<b>LEAF SPRING KIT</b>						
<i>Formula</i>	FLSKIT-001	1ea	FLS-001 x 2, FUB-006 x 4, KITO96SK x 1			
	FLSKIT-002	1ea	FLS-003 x 2, FUB-006 x 4, KITO96SK x 1			
	FLSKIT-003	1ea	FLS-004 x 2, FUB-006 x 4, KITO96SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
<i>Greaseable Pin</i>				FSP-001	2ea	Greaseable
<i>Swing Shackle</i>				FSK-002	2ea	Greaseable
<i>U Bolts</i>				FUB-001	4ea	Post 07 Vehicles may require longer U/bolts
				FUB-006	4ea	Longer version of FUB-001
<i>Caster Wedges</i>				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
<b>ROLL CONTROL</b>						
<i>Adjustable Upper Control Arm</i>	TRC8470	1pr	adjustment range of between +0.5 to +3.5 degrees caster and -1.5 to +1.5 degrees camber over OE			
<i>Fixed Offset Upper Control Arm</i>	TRC8470	1pr	up to +2.8 degrees of caster and up to -0.1 degrees of camber			
<i>Standard Lower Control Arm</i>	TRC471	1pr	Complete Arm Assemblies with Standard SuperPro Bushings, Uprated Ball Joints & Camber Pins			
<i>Adjustable Lower Control Arm</i>	TRC472	1pr	Additional +/- 2 Deg. Camber			
<i>Sway Bar</i>	RC0016FZ-33	1kt	33mm Adj. Sway Bar	RC0016RZ-20	1kt	20mm Adj. Sway Bar. Cannot be used with Airbags
<i>SuperPro Easy-Lift Kit</i>	TRC096FLK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. 2 x Front Strut Spacers Only			
	TRC096LK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Rear Raising Blocks, 4 x U Bolts & Brake Hose Extension Kit.			



FOTON Tunland		P201 - continued		2012 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SuperPro</b>						
For individual bushes refer to the SuperPro Catalogue						
<b>Strut Fitting Kit</b>	SPF4907K	1kt	Contains bushes & washers			
<b>Brake Hose to Diff Extension Mount</b>				SPF4359K	1kt	
<b>Brake Proportioning Valve - Extension Bolt Kit</b>				W93206	1kt	
<b>Spring Eye &amp; Shackle Bush Kit</b>				KIT096K	1kt	Bushes Only
<b>Shackle, Pin &amp; Bush Kit</b>				KIT096SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIR BAGS</b>						
<b>Polyair Red Bag Kit</b>				75795	1kt	2" Lift - Light Duty
				88203	1kt	30-40mm Lift - No Drill Kit
<b>Polyair Bellows Kit</b>				85103R	1kt	2" Lift
				88103R	1kt	2" Lift - No Drill Kit
<b>Ride Rite Airbag Kit</b>				RR4622	1kt	Std Height
				RR4733	1kt	Lift
<b>Load-Up Kit</b>				LU8022	1kt	
<b>Brake Bias Extension</b>						
<b>EFS</b>	10-1076	1ea	Brake proportioning valve extension bracket. Must be installed models prior 2014			
<b>ReadyStrut</b>			ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required			
<b>ReadyStrut Top Caps</b>	RS002	2ea	Strut Cap, Spring Seat, Nuts & Washers			
<b>Formula Struts &amp; King Springs</b>	HILUX101-FOR HILUX101T-FOR HILUX101H-FOR HILUX101HT-FOR HILUX101HD-FOR				1pr	
<b>RAW Struts &amp; King Springs</b>	HILUX101-RAW, HILUX101T-RAW, HILUX101H-RAW, HILUX101HT-RAW, HILUX08-NMRAW, HILUX08H-NMRAW, HILUX08HT-NMRAW, HILUX08HD-NMRAW, HILUX08HDT-NMRAW				1pr	
<b>Bilstein Struts &amp; King Springs</b>	HILUX101-BIL HILUX101T-BIL HILUX101H-BIL HILUX101HT-BIL HILUX101HD-BIL HILUX101HDT-BIL HILUX101HHD-BIL				1pr	
<b>Bilstein Adjustable Struts &amp; King Springs</b>	HILUX101ADJ-BIL				1pr	
<b>FORMULA 4x4 KITS</b>	<b>It is highly recommended to fit TRC6470/TRC6470 FUCA when lifting this vehicle</b>					
Refer above on part quantities and specifications						
<b>Formula Lift Kit</b>	HILUX-016			40008, 50001, KTFR-101, FLS-001, FUB-006, KIT096SK		
<b>Formula Lift Kit with ReadyStruts</b>	HILUX-016R			HILUX101-FOR, 50001, FLS-001, FUB-006, KIT096SK		
<b>RAW Lift Kit</b>	HILUX-011			G6324, G6014Y, KTFR-101, FLS-001, FUB-006, KIT096SK		
<b>RAW Lift Kit with ReadyStruts</b>	HILUX-011R			HILUX101-RAW, G6014Y, FLS-001, FUB-006, KIT096SK		
<b>Bilstein Lift Kit</b>	HILUX-012			BE5-D563, BE5-D564, KTFR-101, FLS-001, FUB-006, KIT096SK, SPF4907K		
<b>Bilstein Lift Kit with ReadyStruts</b>	HILUX-012R			HILUX101-BIL, BE5-D564, FLS-001, FUB-006, KIT096SK		
<b>Bilstein Lift Kit (H/Duty)</b>	HILUX-012HD			BE5-D563, BE5-D564, KTFR-101HD, FLS-001, FUB-006, KIT096SK, SPF4907K		
<b>Bilstein Lift Kit (H/Duty) with ReadyStruts</b>	HILUX-012HDR			HILUX101HD-BIL, BE5-D564, FLS-001, FUB-006, KIT096SK		
<b>Bilstein Lift Kit with adjustable ReadyStruts</b>	HILUX-012ADJ			HILUX101ADJ-BIL, BE5-D564, FLS-001, FUB-006, KIT096SK		
<b>RAW Load Kit with ReadyStruts</b>	HILUX-024R			HILUX08HD-NMRAW, NM326, FLS-004, FUB-006, CW603, KIT096SK		

**GREAT WALL V-Series**

**V200 & V240**

**2009 - 2015**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50022	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Raw Nitro	G6833BY	2ea	0-50mm Lift	G6010Y	2ea	0-50mm Lift
Raw NitroMax	NM608	2ea	0-50mm Lift	NM626	2ea	0-50mm Lift
Sachs Max	313 140	2ea	0-40mm	314 062	2ea	0-40mm
Koni Heavy Track	82-2591	2ea		82-2138	2ea	
Bilstein	B46-2076	2ea	50mm Lift	B46-0258	2ea	50mm Lift
<b>TORSION BAR</b>						
EFS	TB-1550	1pr	30mm OD, 1142mm Long			
<b>LEAF SPRING</b>						
Formula				FLS-010	2ea	Approx 40mm lift at 200kg load
				FLS-011	2ea	Approx 40mm lift at 300kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-010	1ea	FLS-010 x 2, FUB-004 x 4, KIT070SK x 1			
	FLSKIT-011	1ea	FLS-011 x 2, FUB-009 x 4, KIT070SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-004	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-004	4ea	
				FUB-009	4ea	to be used with FLS-011
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT070K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT070SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIRBAG</b>						
Polyair Bellows Kit				85105	1kt	0-25mm Lift
Ride Rite Airbag Kit				RR4599	1kt	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	ROD-011		50022, 50003, FLS-010, FUB-004, KIT070SK			
RAW Lift Kit	ROD-003		G6833BY, G6010Y, FLS-010, FUB-004, KIT070SK			
Koni Lift Kit	ROD-005		82-2591, 82-2138, TB-1550, FLS-010, FUB-004, KIT070SK			
Bilstein Lift Kit	ROD-007		B46-2076, B46-0258, TB-1550, FLS-010, FUB-004, KIT070SK			
Formula Load Kit	ROD-012		50022, 50003, TB-1550, FLS-011, FUB-009, KIT070SK			
RAW Load Kit	ROD-006		G6833BY, G6010Y, TB-1550, FLS-011, FUB-009, KIT070SK			

**GREAT WALL X240**

2010 - 2016



Description	FRONT		Qty	Notes	REAR		Qty	Notes	
<b>SHOCK ABSORBER</b>									
Raw Nitro	G6833BY	2ea	0-50mm Lift	G6756M2Y	2ea	0-50mm Lift			
<b>TORSION BAR</b>									
EFS	TB-1550	1pr							
<b>COIL SPRING</b>									
King Springs					KDRS-39	1pr			
<b>AIRBAG</b>									
Coil Rite Airbag Kit					CR5099	1kt	Std Height		
<b>FORMULA 4X4 KITS</b>	Refer above on part quantities and specifications								
<b>RAW Lift Kit</b>	GRE-001	G6833BY, G6756M2Y, TB-1550, KDRS-39							

GWM Ute, Cannon

2020 - on



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40016	2ea	0-50mm Lift	50032	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KTFR-101	1pr	Raised			
	KTFR-101H	1pr	Raised Bull Bar & Winch			
<b>LEAF SPRING</b>						
Formula				FLS-151	2ea	Approx 40mm lift at 150kg load
				FLS-152	2ea	Approx 40mm lift at 300kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-251	1ea	FLS-151 x 2, FUB-004 x 4, KIT247K x 1			
	FLSKIT-252	1ea	FLS-152 x 2, FUB-004 x 4, KIT247K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
U Bolts				FUB-004	4ea	
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT247K	1kt	Bushes Only
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6690	1pr	provides between 4-5 degrees caster and between 0 and -1 degrees camber at 50mm lift			
<b>AIRBAG</b>						
Ride Rite Airbag Kit				RR4736	1kt	Std Height
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
ReadyStrut Top Caps	RS013	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	GWM101-FOR GWM101H-FOR				1pr	
<b>It is highly recommended to fit TRC6690 FUCA when lifting this vehicle</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	GWM-001		40016, KTFR-101, 50032, FLS-151, FUB-004, KIT247K			
Formula Lift Kit with ReadyStruts	GWM-001R		GWM101-FOR, 50032, FLS-151, FUB-004, KIT247K			
Formula Lift Kit (Bull Bar & Winch)	GWM-002		40016, KTFR-101HD, 50032, FLS-151, FUB-004, KIT247K			
Formula Lift Kit with ReadyStruts (Bull Bar & Winch)	GWM-002R		GWM101H-FOR, 50032, FLS-151, FUB-004, KIT247K			
Formula Load Kit	GWM-003		40016, KTFR-101, 50032, FLS-152, FUB-004, KIT247K			
Formula Load Kit with ReadyStruts	GWM-003R		GWM101-FOR, 50032, FLS-152, FUB-004, KIT247K			
Formula Load Kit (Bull Bar & Winch)	GWM-004		40016, KTFR-101HD, 50032, FLS-152, FUB-004, KIT247K			
Formula Load Kit with ReadyStruts (Bull Bar & Winch)	GWM-004R		GWM101H-FOR, 50032, FLS-152, FUB-004, KIT247K			



GWM Tank 300		2022 - on			
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>SHOCK ABSORBER</b>					
Formula	40016	2ea	0-50mm Lift	50019-TKIT	1 0-50mm Lift (Kit includes TRC1285)
<b>COIL SPRING</b>					
King Springs	KTFR-101	1pr	Raised	KTRR-102	1pr Raised
	KTFR-101H	1pr	Raised 50-100kg	KTPR-102	1pr Raised 100-300kg
				KTRR-102HD	1pr Raised 300kg+
SuperPro	For individual bushes refer to the SuperPro Catalogue				1kt
<b>ROLL CONTROL</b>					
Fixed Offset Upper Control Arm	TRC6690	1pr	provides between 4-5 degrees caster and between 0 and -1 degrees camber at 50mm lift		
Trailing Arm Upper - Adjustable Kit				TRC498	1pr Off-car adjustable
Trailing Arm Lower - Adjustable Kit				TRC497	1pr Off-car adjustable
Panhard Rod - Adjustable				TRC499	1pr Off-car adjustable
Sway Bar	RC0121FZ-33	1	33mm Heavy Duty 2 Point Adjustable	RC0121RZ-24	1 24mm Heavy Duty 3 Point Adjustable
<b>AIRBAG</b>					
Coil Rite Airbag Kit				CR5034HP	1kt 50mm Lift
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required				
ReadyStrut Top Caps	RS013	2ea	Strut Cap, Spring Seat, Nuts & Washers		
Formula Struts & King Springs	GWM101-FOR GWM101H-FOR				1pr
<b>FORMULA 4X4 KITS</b> <i>It is highly recommended to fit TRC6690 FUCA when lifting this vehicle</i> Refer above on part quantities and specifications					
Formula Lift Kit	TANK-001	40016, 50019-T, KTFR-101, KTRR-102, TRC1285			
Formula Lift Kit with ReadyStruts	TANK-001R	GWM101-FOR, 50019-T, KTRR-102, TRC1285			

**HOLDEN Adventra**

VY, VZ

2003 - 2009



Description	FRONT		Qty	Notes	REAR		Qty	Notes
<b>COIL SPRING</b>								
King Springs	KHFR-64		1pr	Raised	KHRR-65		1pr	Raised
<b>AIRBAG</b>								
Polyair Red Bag Kit					12494		1kt	standard height
Coil Rite Airbag Kit					CR5014/HP		1kt	standard height



HOLDEN Colorado		RC		2008 - 2012		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50022	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Raw Nitro	G6833BY	2ea	0-50mm Lift	G6010Y	2ea	0-50mm Lift
Raw Nitro Max				NM626	2ea	0-50mm Lift
Bilstein	B46-2076	2ea	50mm Lift	B46-0258	2ea	50mm Lift
Sachs Max	313 140	2ea	0-40mm Lift	313 919	2ea	0-40mm Lift
<b>TORSION BAR</b>						
EFS	TB-1550	1pr	30mm OD, 1142mm Long			
<b>LEAF SPRING</b>						
Formula				FLS-010	2ea	Approx 40mm Lift at 200kg Load
				FLS-011	2ea	Approx 40mm Lift at 300kg Load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-010	1ea	FLS-010 x 2, FUB-004 x 4, KIT070SK x 1			
	FLSKIT-011	1ea	FLS-011 x 2, FUB-009 x 4, KIT070SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-004	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-004	4ea	
				FUB-009	4ea	to be used with FLS-011
<b>ROLL CONTROL</b>						
Sway Bar				RC0027RZ-18	1kt	18mm Adj. Sway Bar. Cannot be used with Airbags
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT070K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT070SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIRBAG</b>						
Polyair Red Bag Kit				78095	1kt	Light Duty Kit
Polyair Bellows Kit				85105	1kt	
				85105R	1kt	Raised
Ride Rite Airbag Kit				RR4527	1kt	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	ROD-011		50022, 50003, FLS-010, FUB-004, KIT070SK			
RAW Lift Kit	ROD-003		G6833BY, G6010Y, FLS-010, FUB-004, KIT070SK			
Bilstein Lift Kit	ROD-007		B46-2076, B46-0258, TB-1550, FLS-010, FUB-004, KIT070SK			
Formula Load Kit	ROD-012		50022, 50003, TB-1550, FLS-011, FUB-009, KIT070SK			
RAW Load Kit	ROD-006		G6833BY, G6010Y, TB-1550, FLS-011, FUB-009, KIT070SK			



HOLDEN Colorado		RG		2012 - 03/2013		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40003	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Bilstein	24-230780	2ea	0-50mm Lift	B46-0258	2ea	0-50mm Lift
Raw Nitro	G6302	2ea	0-40mm Lift	G6027M3Y	2ea	0-50mm Lift
Raw Nitro Max				NM654M2	2ea	0-50mm Lift
Sachs Max	317 636	2ea	0-40mm Lift	316 381	2ea	0-40mm Lift
<b>COIL SPRING</b>						
King Springs	KHFR-168	1pr	Raised			
	KHFR-168T	1pr	Raised Comfort			
	KHFR-168H	1pr	Raised 50-100kg			
	KHFR-168HT	1pr	Raised Comfort 50-100kg			
<b>LEAF SPRING</b>						
Formula				FLS-020	2ea	40mm Lift at 0-300kg Load
				FLS-021	2ea	40mm Lift at 300kg Constant Load
				FLS-026	2ea	40mm Lift at 500kg Constant Load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-020	1ea	FLS-020 x 2, FUB-001 x 4, KIT185SK x 1			
	FLSKIT-021	1ea	FLS-021 x 2, FUB-006 x 4, KIT185SK x 1			
	FLSKIT-026	1ea	FLS-026 x 2, FUB-006 x 4, KIT185SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-001	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-001	4ea	
				FUB-006	4ea	Use for FLS-021 or FLS-026 and with a caster wedge
Caster Wedges				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6620	1pr	providing an increase of 2 degrees of caster over the OE UCA			
Sway Bar				RC0031RZ-20	1kt	20mm 3 Position Adj. Sway Bar. Cannot be used with Airbags
SuperPro Easy-Lift Kit	TRC185LK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Rear Raising Blocks, 4 x U Bolts & Hand Brake Bracket Mount Extension Kit			
Diff Drop Kit	TRCCOLDD	1kt	Corrects the front differential by 25mm			
<b>SuperPro</b>						
Strut Fitting Kit	SPF4907K	1kt	Contains bushes & washers			
Hand Brake Cable Extension Kit				SPF4801K	1kt	Required when fitting lifted, high load carrying leaf spring packs
Hand Brake Relocation & Cable Extension Kit				TRC0046	1kt	
Spring Eye & Shackle Bush Kit				KIT185K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT185SK	1kt	Greaseable Shackles, Pins & Bushes



HOLDEN Colorado		RG - continued		2012 - 03/2013		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIRBAG</b>						
Polyair Bellows Kit				88206-2	1kt	0-30mm Lift
				88206-2R	1kt	30-50mm Lift - No Drill Kit
Ride Rite Airbag Kit				RR4642	1kt	Std Height
				RR4717	1kt	Lift
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
ReadyStrut Top Caps	RS005	2ea	(flat ground coil) Strut Cap, Spring Seat, Nuts & Washers			
	RS012	2ea	(full wire coil) Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	COL168-FOR	COL168T-FOR	COL168H-FOR	COL168HT-FOR	1pr	
RAW Struts & King Springs	COL168-RAW	COL168T-RAW	COL168H-RAW	COL168HT-RAW	1pr	
Bilstein Struts & King Springs	COL168-BIL	COL168T-BIL	COL168H-BIL	COL168HT-BIL	1pr	
Bilstein Adjustable Struts & King Springs	COL168ADJ-BIL				1pr	
<b>FORMULA 4X4 KITS</b>	<b>It is highly recommended to fit TRC6620 FUCA when lifting this vehicle</b>					
	Refer above on part quantities and specifications					
Formula Lift Kit	COL-011		40003, 50003, KHFR-168, FLS-020, FUB-001, KIT185SK, TRC0046			
Formula Lift Kit with ReadyStruts	COL-011R		COL168-FOR, 50003, FLS-020, FUB-001, KIT185SK, TRC0046			
RAW Lift Kit	COL-004		G6302, G6027M3Y, KHFR-168, FLS-020, FUB-001, KIT185SK, SPF3757K, TRC0046			
RAW Lift Kit with ReadyStruts	COL-004R		COL168-RAW, G6027M3Y, FLS-020, FUB-001, KIT185SK, TRC0046			
Bilstein Lift Kit	COL-003		24-230780, B46-0258, KHFR-168T, FLS-020, FUB-001, KIT185SK, SPF4907K, TRC0046			
Bilstein Lift Kit with ReadyStruts	COL-003R		COL168T-BIL, B46-0258, FLS-020, FUB-001, KIT185SK, TRC0046			
Bilstein Lift Kit with adjustable ReadyStruts	COL-003ADJ		COL168ADJ-BIL, B46-0258, FLS-020, FUB-001, KIT185SK, TRC0046			
RAW Load Kit	COL-014		G6302, NM654M2, KHFR-168, FLS-021, FUB-006, KIT185SK, SPF3757K, TRC0046			
RAW Load Kit with ReadyStruts	COL-014R		COL168H-RAW, NM654M2, FLS-021, FUB-006, KIT185SK, TRC0046			



HOLDEN Colorado		RG		04/2013 - 06/2016		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40003	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Bilstein	24-230780	2ea	0-50mm Lift	B46-0258	2ea	0-50mm Lift
Raw Nitro	G6302	2ea	0-40mm Lift	G6027M3Y	2ea	0-50mm Lift
Raw Nitro Max				NM654M2	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KHFR-168SP	1pr	Raised			
	KHFR-168TSP	1pr	Raised Comfort			
	KHFR-168HSP	1pr	Raised 50-100kg			
	KHFR-168HTSP	1pr	Raised Comfort 50-100kg			
<b>LEAF SPRING</b>						
Formula				FLS-020	2ea	40mm Lift at 0-300kg Load
				FLS-021	2ea	40mm Lift at 300kg Constant Load
				FLS-026	2ea	40mm Lift at 500kg Constant Load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-020	1ea	FLS-020 x 2, FUB-001 x 4, KIT185SK x 1			
	FLSKIT-021	1ea	FLS-021 x 2, FUB-006 x 4, KIT185SK x 1			
	FLSKIT-026	1ea	FLS-026 x 2, FUB-006 x 4, KIT185SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-001	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-001	4ea	
				FUB-006	4ea	Use for FLS-021 or FLS-026 and with a caster wedge
Caster Wedges				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6620	1pr	providing an increase of 2 degrees of caster over the OE UCA			
Sway Bar				RC0031RZ-20	1kt	20mm 3 Position Adj. Sway Bar. Cannot be used with Airbags
SuperPro Easy-Lift Kit	TRC185FLK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 Front Strut Spacers			
	TRC185LK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Rear Raising Blocks, 4 x U Bolts & Hand Brake Bracket Mount Extension Kit			
Diff Drop Kit	TRCCOLDD	1kt	Corrects the front differential by 25mm			
<b>SuperPro</b>						
Strut Fitting Kit	SPF4907K	1kt	Contains bushes & washers			
Hand Brake Cable Extension Kit				SPF4801K	1kt	Required when fitting lifted, high load carrying leaf spring packs
Hand Brake Relocation & Cable Extension Kit				TRC0046	1kt	
Spring Eye & Shackle Bush Kit				KIT185K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT185SK	1kt	Greaseable Shackles, Pins & Bushes

HOLDEN Colorado		RG - continued		04/2013 - 06/2016		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIRBAG</b>						
Polyair Bellows Kit				88206-2	1kt	0-30mm Lift
				88206-2R	1kt	30-50mm Lift - No Drill Kit
Ride Rite Airbag Kit				RR4642	1kt	Std Height
				RR4717	1kt	Lift
ReadyStrut			ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required			
ReadyStrut Top Caps	RS005	2ea	(flat ground coil) Strut Cap, Spring Seat, Nuts & Washers			
	RS012	2ea	(full wire coil) Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	COL168-FOR	COL168T-FOR	COL168H-FOR	COL168HT-FOR	1pr	
RAW Struts & King Springs	COL168-RAW	COL168T-RAW	COL168H-RAW	COL168HT-RAW	1pr	
Bilstein Struts & King Springs	COL168-BIL	COL168T-BIL	COL168H-BIL	COL168HT-BIL	1pr	
Bilstein Adjustable Struts & King Springs	COL168ADJ-BIL				1pr	
<b>FORMULA 4X4 KITS</b>	<b>It is highly recommended to fit TRC6620 FUCA when lifting this vehicle</b>					
	Refer above on part quantities and specifications					
Formula Lift Kit	COL-012		40003, 50003, KHFR-168SP, FLS-020, FUB-001, KIT185SK, TRC0046			
Formula Lift Kit with ReadyStruts	COL-011R		COL168-FOR, 50003, FLS-020, FUB-001, KIT185SK, TRC0046			
RAW Lift Kit	COL-007		G6302, G6027M3Y, KHFR-168SP, FLS-020, FUB-001, KIT185SK, SPF3757K, TRC0046			
RAW Lift Kit with ReadyStruts	COL-004R		COL168-RAW, G6027M3Y, FLS-020, FUB-001, KIT185SK, TRC0046			
Bilstein Lift Kit	COL-008		24-230780, B46-0258, KHFR-168TSP, FLS-020, FUB-001, KIT185SK, SPF4907K, TRC0046			
Bilstein Lift Kit	COL-009		24-230780, B46-0258, KHFR-168SP, FLS-020, FUB-001, KIT185SK, SPF4907K, TRC0046			
Bilstein Lift Kit with ReadyStruts	COL-003R		COL168T-BIL, B46-0258, FLS-020, FUB-001, KIT185SK, TRC0046			
Bilstein Lift Kit with adjustable ReadyStruts	COL-003ADJ		COL168ADJ-BIL, B46-0258, FLS-020, FUB-001, KIT185SK, TRC0046			
RAW Load Kit	COL-015		G6302, NM654M2, KHFR-168SP, FLS-021, FUB-006, KIT185SK, SPF3757K, TRC0046			
RAW Load Kit with ReadyStruts	COL-014R		COL168-RAW, NM654M2, FLS-021, FUB-006, KIT185SK, TRC0046			

**HOLDEN Colorado**
**RG**
**07/2016 - 2020**


Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula</i>	40003	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
<i>Bilstein</i>	24-230780	2ea	0-50mm Lift	B46-0258	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6302	2ea	0-40mm Lift	G6027M3Y	2ea	0-50mm Lift
<i>Raw Nitro Max</i>				NM654M2	2ea	0-50mm Lift
<b>COIL SPRING</b>						
<i>King Springs</i>	KHFR-168	1pr	Raised			
	KHFR-168T	1pr	Raised Comfort			
	KHFR-168H	1pr	Raised 50-100kg			
	KHFR-168HT	1pr	Raised Comfort 50-100kg			
<b>LEAF SPRING</b>						
<i>Formula</i>				FLS-020	2ea	40mm Lift at 0-300kg Load
				FLS-021	2ea	40mm Lift at 300kg Constant Load
				FLS-026	2ea	40mm Lift at 500kg Constant Load
<b>LEAF SPRING KIT</b>						
<i>Formula</i>	FLSKIT-020	1ea	FLS-020 x 2, FUB-001 x 4, KIT185SK x 1			
	FLSKIT-021	1ea	FLS-021 x 2, FUB-006 x 4, KIT185SK x 1			
	FLSKIT-026	1ea	FLS-026 x 2, FUB-006 x 4, KIT185SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
<i>Swing Shackle</i>				FSK-001	2ea	Greaseable
<i>Fixed Pin</i>				FSP-001	2ea	Greaseable
<i>U Bolts</i>				FUB-001	4ea	
				FUB-006	4ea	Use for FLS-021 or FLS-026 and with a caster wedge
<b>ROLL CONTROL</b>						
<i>Fixed Offset Upper Control Arm</i>	TRC6610	1pr	providing an increase of 2 degrees of caster over the OE UCA			
<i>Sway Bar</i>				RC0031RZ-20	1kt	20mm 3 Position Adj. Sway Bar. Cannot be used with Airbags
<i>SuperPro Easy-Lift Kit</i>	TRC185FLK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 Front Strut Spacers			
	TRC185LK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Rear Raising Blocks, 4 x U Bolts & Hand Brake Bracket Mount Extension Kit			
<i>Diff Drop Kit</i>	TRCCOLDD	1kt	Corrects the front differential by 25mm			
<b>SuperPro</b>						
<i>Strut Fitting Kit</i>	SPF4907K	1kt	Contains bushes & washers			
<i>Hand Brake Cable Extension Kit</i>				SPF4801K	1kt	Required when fitting lifted, high load carrying leaf spring packs
<i>Hand Brake Relocation &amp; Cable Extension Kit</i>				TRC0046	1kt	
<i>Spring Eye &amp; Shackle Bush Kit</i>				KIT185K	1kt	Bushes Only
<i>Shackle, Pin &amp; Bush Kit</i>				KIT185SK	1kt	Greaseable Shackles, Pins & Bushes

HOLDEN Colorado		RG - continued		07/2016 - 2020		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIRBAG</b>						
Polyair Bellows Kit				88206-2	1kt	0-30mm Lift
				88206-2R	1kt	30-50mm Lift - No Drill Kit
Ride Rite Airbag Kit				RR4642	1kt	Std Height
				RR4717	1kt	Lift
ReadyStrut			ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required			
ReadyStrut Top Caps	RS005	2ea	(flat ground coil) Strut Cap, Spring Seat, Nuts & Washers			
	RS012	2ea	(full wire coil) Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	COL168-FOR	COL168T-FOR	COL168H-FOR	COL168HT-FOR	1pr	
RAW Struts & King Springs	COL168-RAW	COL168T-RAW	COL168H-RAW	COL168HT-RAW	1pr	
Bilstein Struts & King Springs	COL168-BIL	COL168T-BIL	COL168H-BIL	COL168HT-BIL	1pr	
Bilstein Adjustable Struts & King Springs	COL168ADJ-BIL				1pr	
<b>FORMULA 4X4 KITS</b>	<b>It is highly recommended to fit TRC6810 FUCA when lifting this vehicle</b>					
	Refer above on part quantities and specifications					
Formula Lift Kit	COL-011		40003, 50003, KHFR-168, FLS-020, FUB-001, KIT185SK, TRC0046			
Formula Lift Kit with ReadyStruts	COL-011R		COL168-FOR, 50003, FLS-020, FUB-001, KIT185SK, TRC0046			
RAW Lift Kit	COL-004		G6302, G6027M3Y, KHFR-168, FLS-020, FUB-001, KIT185SK, SPF3757K, TRC0046			
RAW Lift Kit with ReadyStruts	COL-004R		COL168-RAW, G6027M3Y, FLS-020, FUB-001, KIT185SK, TRC0046			
Bilstein Lift Kit	COL-003		24-230780, B46-0258, KHFR-168T, FLS-020, FUB-001, KIT185SK, SPF4907K, TRC0046			
Bilstein Lift Kit with ReadyStruts	COL-003R		COL168T-BIL, B46-0258, FLS-020, FUB-001, KIT185SK, TRC0046			
Bilstein Lift Kit with adjustable ReadyStruts	COL-003ADJ		COL168ADJ-BIL, B46-0258, FLS-020, FUB-001, KIT185SK, TRC0046			
RAW Load Kit	COL-014		G6302, NM654M2, KHFR-168, FLS-021, FUB-006, KIT185SK, SPF3757K, TRC0046			
RAW Load Kit with ReadyStruts	COL-014R		COL168H-RAW, NM654M2, FLS-021, FUB-006, KIT185SK, TRC0046			



HOLDEN Colorado 7		RG		2012 - 2020		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40003	2ea	0-50mm Lift	50028	2ea	0-50mm Lift
Bilstein	24-230780	2ea	0-40mm Lift	24-258210	2ea	0-40mm Lift
Sachs Max	317 636	2ea	0-40mm Lift	317 231	2ea	0-40mm Lift
<b>COIL SPRING</b>						
King Springs	KHFR-168	1pr	Raised	KHRR-96	1pr	Raised
	KHFR-168T	1pr	Raised Comfort	KHRR-96HD	1pr	Raised 100-300kg
	KHFR-168HT	1pr	Raised Comfort 50-100kg			
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6620	1pr	to suit vehicles up to 08/2016 providing an increase of 2 degrees of caster over the OE UCA			
	TRC6610	1pr	to suit vehicles from 08/2016-on providing an increase of 2 degrees of caster over the OE UCA			
Diff Drop Kit	TRCCOLDD	1	Corrects the front differential by 25mm			
<b>AIRBAG</b>						
Polyair Red Bag Kit				11092	1kt	2" Lift
Polyair Ultimate Kit				11092ULT	1kt	2" Lift - 60PSI Heavy Duty Kit
Coil Rite Airbag Kit				CR5122	1kt	Lift
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
ReadyStrut Top Caps	RS005	2ea	(flat ground coil) Strut Cap, Spring Seat, Nuts & Washers			
	RS012	2ea	(full wire coil) Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	COL168-FOR	COL168T-FOR	COL168H-FOR	COL168HT-FOR	1pr	
Bilstein Struts & King Springs	COL168-BIL	COL168T-BIL	COL168H-BIL	COL168HT-BIL	1pr	
Bilstein Adjustable Struts & King Springs	COL168ADJ-BIL				1pr	
<b>FORMULA 4X4 KITS</b>	<b>It is highly recommended to fit TRC6610/TRC6620 FUCA when lifting this vehicle</b>					
	Refer above on part quantities and specifications					
Formula Lift Kit	COL-016		40003, 50028, KHFR-168, KHRR-96			
Formula Lift Kit with ReadyStruts	COL-016R		COL168-FOR, 50028, KHRR-96			
Bilstein Lift Kit	COL-013		24-230780, 24-258210, KHFR-168, KHRR-96			
Bilstein Lift Kit with ReadyStruts	COL-013R		COL168-BIL, 24-258210, KHRR-96			
Bilstein Lift Kit with adjustable ReadyStruts	COL-013ADJ		COL168ADJ-BIL, 24-258210, KHRR-96			

HOLDEN Drover

Refer Suzuki Sierra



**HOLDEN Frontera**

**UT**

**1995 - 1999**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6833BY	2ea	0-50mm Lift	G6029Y	2ea	
Koni Heavy Track Gas	30-1565	2ea	Std Height	30-1566	2ea	Std Height
Sachs	313 140	2ea	0-40mm Lift	280 327	2ea	
<b>COIL SPRING</b>						
King Springs				KHRS-90	1pr	Std Height
				KHRR-90	1pr	Raised
<b>TORSION BAR</b>						
Generic	HOLD-011	1pr				
<b>AIRBAG</b>						
Polyair Red Bag Kit				61994	1kt	
Coil Rite Airbag Kit				CR5011	1kt	

**HOLDEN Frontera**

**MX**

**1999 - 2004**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6833BY	2ea	0-50mm Lift	G6019M4Y	2ea	
Koni Heavy Track Gas	30-1663	2ea	Std Height	30-1664	2ea	Std Height
Sachs	313 140	2ea		280 327	2ea	
<b>COIL SPRING</b>						
King Springs				KDRL-39	1pr	LWB Raised
<b>AIRBAG</b>						
Polyair Red Bag Kit				61994	1kt	
Coil Rite Airbag Kit				CR5011	1kt	



HOLDEN Jackaroo / Isuzu Trooper		UBS I LWB		1981 - 1992		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea		50003	2ea	81-10/86
Raw Nitro	G6897BY	2ea		G6010Y	2ea	81-10/86
				G6019M3Y	2ea	11/86-04/92
Raw Nitro Max				NM626	2ea	81-10/86
Sachs Max	316 541	2ea	0-40mm Lift	316 542	2ea	0-40mm Lift
Koni Heavy Track Gas	30-1363	2ea	Std Height	30-1366	2ea	Std Height
<b>TORSION BAR</b>						
EFS	TB-1546A	1pr	27mm 11/81 - 7/88, 928mm long			
	TB-1548	1pr	25.5mm 8/88 - 4/92, 998mm long			
<b>LEAF SPRING</b>						
Formula				FLS-113	2ea	Approx 45mm lift at 0-300kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-113	1ea	FLS-113 x 2, C451 x 4, KIT070SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-004	2ea	Greaseable
Fixed Pin				GR792	2ea	Greaseable Suits 1981-10/86
				FSP-001	2ea	Greaseable Suits 11/86-On
U Bolts				C451	4ea	
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT069K	kit	Suits 1981-10/86
Spring Eye & Shackle Bush Kit				KIT070K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT070SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIRBAG</b>						
Polyair Red Bag Kit				75703	1kt	
Ride Rite Airbag Kit				RR4598	1kt	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
RAW Lift Kit (up to 10/86)	JACK-001		G6897BY, G6010Y, FLS-113, FSK-004, GR792, C451, KIT069K			
RAW Lift Kit (11/86-04/92)	JACK-002		G6897BY, G6019M3Y, FLS-113, C451, KIT070SK			





HOLDEN Jackaroo / Isuzu Trooper		UBS II		1992 - 2004		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea	0-50mm Lift			
Raw Nitro	G6833BY	2ea	0-50mm Lift	G6029Y	2ea	
Bilstein	B46-1738	2ea	H/Duty	B46-1739	2ea	H/Duty
Sachs	313 140	2ea	0-40mm Lift	280 327	2ea	0-40mm Lift
Koni Heavy Track Gas	30-1565	2ea	Std Height Only	30-1566	2ea	Std Height Only
<b>COIL SPRING</b>						
King Springs				KHRR-92	1pr	Raised 5/92-3/01
				KHRR-92HD	1pr	Raised 4/01-1/04
<b>TORSION BAR</b>						
EFS	TB-1549	1pr	29mm OD, 1220mm long			
<b>AIRBAG</b>						
Polyair Red Bag Kit				11093	1kt	Std Height
				11193	1kt	Lift
Coil Rite Airbag Kit				CR5022	1kt	
<b>FORMULA 4X4 KITS</b> Refer above on part quantities and specifications						
RAW Lift Kit	JACK-003			G6833BY, G6029Y, KHRR-92,		
Bilstein Lift Kit	JACK-004			B46-1738, B46-1739, KHRR-92, TB-1549		



HOLDEN Rodeo / Isuzu		KB4, KBD4, TF		1981 - 1988		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Raw Nitro	G6897BY	2ea	0-50mm Lift	G6010Y	2ea	0-50mm Lift
Raw Nitro Max				NM626	2ea	0-50mm Lift
Koni Heavy Track	80-2553	2ea	Std Height	80-1904	2ea	Std Height
<b>TORSION BAR</b>						
Generic	MAZDA005	1pr	26mm OD, 928mm long			
<b>LEAF SPRING</b>						
Formula				FLS-114	2ea	Approx 30mm lift at const. 250kg load
				FLS-103	2ea	Approx 30mm lift at const. 500kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-114	1ea	FLS-114 x 2, C453-3 x 4, FSP-001 x 2, FSK-004 x 2			
	FLSKIT-103	1ea	FLS-103 x 2, C453-3 x 4, FSP-001 x 2, FSK-004 x 2			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-004	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				C453-3	4ea	
<b>AIRBAG</b>						
Polyair Red Bag Kit				75703	1kt	
Ride Rite Airbag Kit				RR4599	1kt	

**HOLDEN Rodeo/D-Max**
**TFS**
**1988 - 2003**


Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula</i>	50025	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6897BY	2ea	0-50mm Lift	G6010Y	2ea	0-50mm Lift
<i>Sachs Max</i>	313 143	2ea	0-40mm Lift	316 376	2ea	0-40mm Lift
<i>Koni Heavy Track Gas</i>	30-1365	2ea	Std Height	30-1366	2ea	Std Height
<b>TORSION BAR</b>						
<i>EFS</i>	TB-1547	1pr	26mm OD, 1002mm long			
	TB-1556	1pr	27mmOD, 998mm long H/Duty			
<b>LEAF SPRING</b>						
<i>Formula</i>				FLS-008	2ea	Approx 40mm lift at 0-150kg load
				FLS-009	2ea	Approx 40mm lift at const.300kg load
<b>LEAF SPRING KIT</b>						
<i>Formula</i>	FLSKIT-008	1ea	FLS-008 x 2, C453-3 x 4, KIT070SK x 1			
	FLSKIT-009	1ea	FLS-009 x 2, C453-3 x 4, KIT070SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
<i>Swing Shackle</i>				FSK-004	2ea	Greaseable
<i>Fixed Pin</i>				FSP-001	2ea	Greaseable
<i>U Bolts</i>				C453-3	4ea	
<i>SuperPro</i>	For individual bushes refer to the SuperPro Catalogue					
<i>Spring Eye &amp; Shackle Bush Kit</i>				KIT070K	1kt	Bushes Only
<i>Shackle, Pin &amp; Bush Kit</i>				KIT070SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIRBAG</b>						
<i>Polyair Red Bag Kit</i>				75095	1kt	1988 - 1996
				75903	1kt	1997 - 2002
				75103	1kt	2" Lift - 1997 - 2002
<i>Ride Rite Airbag Kit</i>				RR4599	1kt	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
<i>Formula Lift Kit</i>	ROD-013		50025, 50003, FLS-008, C453-3, KIT070SK			
<i>RAW Lift Kit</i>	ROD-002		G6897BY, G6010Y, FLS-008, C453-3, KIT070SK			
<i>Formula Load Kit</i>	ROD-014		50025, 50003, TB-1556, FLS-009, C453-3, KIT070SK			
<i>RAW Load Kit</i>	ROD-004		G6897BY, G6010Y, TB-1556, FLS-009, C453-3, KIT070SK			

HOLDEN Rodeo		RA		2003 - 2008		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50022	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Raw Nitro	G6833BY	2ea	0-50mm Lift	G6010Y	2ea	0-50mm Lift
Bilstein	B46-2076	2ea	50mm Lift	B46-0258	2ea	50mm Lift
Sachs Max	313 140	2ea	0-40mm Lift	313 919	2ea	0-40mm Lift
Koni Heavy Track Gas	30-1663	2ea	Std Height	30-1664	2ea	Std Height
Koni Heavy Track	82-2591	2ea	Std Height	82-2138	2ea	Std Height
<b>TORSION BAR</b>						
EFS	TB-1550	1pr	30mm OD, 1142mm Long			
<b>LEAF SPRING</b>						
Formula				FLS-010	2ea	Approx 40mm lift at 200kg load
				FLS-011	2ea	Approx 40mm lift at 300kg load
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-004	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-004	4ea	
<b>ROLL CONTROL</b>						
Sway Bar				RC0027RZ-18	1kt	18mm Adj. Sway Bar. Cannot be used with Airbags
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT070K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT070SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIRBAG</b>						
Polyair Red Bag Kit				78095	1kt	Light Duty Kit
Polyair Bellows Kit				85105	1kt	
Ride Rite Airbag Kit				85105R	1kt	Lift
				RR4527	1kt	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	ROD-011	50022, 50003, FLS-010, FUB-004, KIT070SK				
RAW Lift Kit	ROD-003	G6833BY, G6010Y, FLS-010, FUB-004, KIT070SK				
Koni Lift Kit	ROD-005	82-2591, 82-2138, TB-1550, FLS-010, FUB-004, KIT070SK				
Bilstein Lift Kit	ROD-007	B46-2076, B46-0258, TB-1550, FLS-010, FUB-004, KIT070SK				
Formula Load Kit	ROD-012	50022, 50003, TB-1550, FLS-011, FUB-009, KIT070SK				
RAW Load Kit	ROD-006	G6833BY, G6010Y, TB-1550, FLS-011, FUB-009, KIT070SK				






HOLDEN Trailblazer		RG		2016 - 2020		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40003	2ea	0-50mm Lift	50031	2ea	0-50mm Lift
Bilstein	24-230780	2ea	0-40mm Lift	24-258210	2ea	0-40mm Lift, up to 2018
				24-258210TB	2ea	0-40mm Lift, 2018-on
<b>COIL SPRING</b>						
King Springs	KHFR-168	1pr	Raised	KHRR-96	1pr	Raised
	KHFR-168T	1pr	Raised Comfort	KHRR-96HD	1pr	Raised 100-300kg Load
	KHFR-168HT	1pr	Raised Comfort 50-100kg			
<b>ROLL CONTROL</b>						
Diff Drop Kit	TRCCOLDD	1	Corrects the front differential by 25mm			
<b>AIRBAG</b>						
Polyair Red Bag Kit				11092	1kt	2" Raised
Polyair Ultimate Kit				11092ULT	1kt	2" Raised - 60PSI Heavy Duty Kit
Coil Rite Airbag Kit				CR5122	1kt	Lift
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
ReadyStrut Top Caps	RS005	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	COL168-FOR	COL168T-FOR	COL168H-FOR	COL168HT-FOR	1pr	
Bilstein Struts & King Springs	COL168-BIL	COL168T-BIL	COL168H-BIL	COL168HT-BIL	1pr	
Bilstein Adjustable Struts & King Springs	COL168ADJ-BIL				1pr	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	BLAZER-001		40003, 50031, KHFR-168, KHRR-96			
Formula Lift Kit with ReadyStruts	BLAZER-001R		COL168-FOR, 50031, KHRR-96			
Bilstein Lift Kit (up to 2018)	COL-013		24-230780, 24-258210, KHFR-168, KHRR-96			
Bilstein Lift Kit with ReadyStruts (up to 2018)	COL-013R		COL168-BIL, 24-258210, KHRR-96			
Bilstein Lift Kit with adjustable ReadyStruts (up to 2018)	COL-013ADJ		COL168ADJ-BIL, 24-258210, KHRR-96			


<b>HONDA CR-V</b>		<b>RD1-RD3</b>		<b>1995 - 2002</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	313 186	2ea		313 281	2ea	
Koni Heavy Track Sport	8041-1243SPT	2ea		8040-1244SPT	2ea	
<b>COIL SPRING</b>						
King Springs	KHFR-83	1pr	Raised (1997-2001)	KHRR-84	1pr	Raised (1997-2001)



<b>HONDA HRV</b>		<b>1999 - 2002</b>				
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	280 645	1ea	LHS	280 649	2ea	
	280 646	1ea	RHS			



<b>HUMMER H2</b>		<b>2002 - 2009</b>			
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>AIRBAG</b>					
Coil Rite Airbag Kit				CR5016HP	1kt standard height

<b>HUMMER H3</b>		<b>2006 - 2010</b>			
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>SHOCK ABSORBER</b>					
Koni Heavy Track Raid	90-5445	2ea	Std Height	90-5446	2ea Std Height
<b>AIRBAG</b>					
Ride Rite Airbag Kit				RR4621	1kt standard height

HYUNDAI Santa Fe		SM		2000 - 2006		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	315 306	1ea	LHS	315 308	2ea	
	315 307	1ea	RHS			
<b>COIL SPRING</b>						
King Springs	KHFR-136	1pr	Raised approx. 30mm Lift	KHRR-137	1pr	Raised approx 30mm Lift
<b>AIRBAG</b>						
Polyair Red Bag Kit				61698	1kt	
Coil Rite Airbag Kit				CR5010	1kt	



HYUNDAI Santa Fe		CM		2006-2012		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>COIL SPRING</b>						
King Springs	KHFR-138	1pr	Raised approx. 30mm Lift	KHRR-139	1pr	Raised approx 30mm Lift
<b>AIRBAG</b>						
Polyair Red Bag Kit				19592	1kt	
Coil Rite Airbag Kit				CR5062	1kt	



HYUNDAI Terracan		HP		2001 - 2007		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6897BY	2ea	0-40mm Lift	G6009Y	2ea	0-40mm Lift
Koni Heavy Track Oil	82-2520	2ea		82-2521	2ea	
Sachs	312 961	2ea		312 962	2ea	
<b>COIL SPRING</b>						
King Springs				KCRR-23	1pr	Raised
<b>TORSION BAR</b>						
Generic	HYUND-004	1pr				
<b>AIRBAG</b>						
Polyair Red Bag Kit				15694	1kt	Std Height
				15794	1kt	Raised
Coil Rite Airbag Kit				CR5000	1kt	Std Height
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
RAW Lift Kit	TER-001			G6897BY, G6009Y, KCRR-23		





ISUZU D-Max		TFS		2002 - 2012		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50022	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Raw Nitro	G6833BY	2ea	0-50mm Lift	G6010Y	2ea	0-50mm Lift
Raw Nitro Max				NM626	2ea	0-50mm Lift
Bilstein	B46-2076	2ea	50mm Lift	B46-0258	2ea	50mm Lift
Sachs Max	313 140	2ea	0-40mm Lift	313 919	2ea	0-40mm Lift (LS Models)
				314 062	2ea	0-40mm Lift (SX Models)
Koni Heavy Track	82-2591	2ea		82-2138	2ea	
<b>TORSION BAR</b>						
EFS	TB-1550	1pr	30mm OD, 1142mm Long			
<b>LEAF SPRING</b>						
Formula				FLS-010	2ea	Approx 40mm Lift at 200kg Load
				FLS-011	2ea	Approx 40mm Lift at 300kg Load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-010	1ea	FLS-010 x 2, FUB-004 x 4, KIT070SK x 1			
	FLSKIT-011	1ea	FLS-011 x 2, FUB-009 x 4, KIT070SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-004	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-004	4ea	
				FUB-009	4ea	to be used with FLS-011
<b>ROLL CONTROL</b>						
Sway Bar				RC0027RZ-18	1kt	18mm Adj. Sway Bar. Cannot be used with Airbags
For individual bushes refer to the SuperPro Catalogue						
Spring Eye & Shackle Bush Kit				KIT070K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT070SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIRBAG</b>						
Polyair Red Bag Kit				78095	1kt	Light Duty Kit
Polyair Bellows Kit				85105	1kt	Std Height
				85105R	1kt	2" Lift
Ride Rite Airbag Kit				RR4527	1kt	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	ROD-011		50022, 50003, FLS-010, FUB-004, KIT070SK			
RAW Lift Kit	ROD-003		G6833BY, G6010Y, FLS-010, FUB-004, KIT070SK			
Koni Lift Kit	ROD-005		82-2591, 82-2138, TB-1550, FLS-010, FUB-004, KIT070SK			
Bilstein Lift Kit	ROD-007		B46-2076, B46-0258, TB-1550, FLS-010, FUB-004, KIT070SK			
Formula Load Kit	ROD-012		50022, 50003, TB-1550, FLS-011, FUB-009, KIT070SK			
RAW Load Kit	ROD-006		G6833BY, G6010Y, TB-1550, FLS-011, FUB-009, KIT070SK			





ISUZU D-Max		TFS		2012 - 2020		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40003	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Bilstein	24-230780	2ea	0-50mm Lift	B46-0258	2ea	0-50mm Lift
Raw Nitro	G6302	2ea	0-40mm Lift	G6027M3Y	2ea	0-50mm Lift
Raw Nitro Max				NM654M2	2ea	0-50mm Lift
Sachs Max	317 636	2ea	0-40mm Lift	317 231	2ea	0-40mm Lift
<b>COIL SPRING</b>						
King Springs	KHFR-168H	1pr	Raised			
	KHFR-168HT	1pr	Raised Comfort			
	KTFR-101	1pr	Raised 50-100kg			
	KTFR-101T	1pr	Raised Comfort 50-100kg			
<b>LEAF SPRING</b>						
Formula				FLS-020	2ea	40mm Lift at 0-300kg load
				FLS-021	2ea	40mm Lift at 300kg Const. load
				FLS-026	2ea	40mm Lift at 500kg Const. load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-020	1ea	FLS-020 x 2, FUB-001 x 4, KIT185SK x 1			
	FLSKIT-021	1ea	FLS-021 x 2, FUB-006 x 4, KIT185SK x 1			
	FLSKIT-026	1ea	FLS-026 x 2, FUB-006 x 4, KIT185SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-001	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-001	4ea	
				FUB-006	4ea	Use for FLS-021 or FLS-026 and with a caster wedge
Caster Wedges				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6620	1pr	providing an increase of 2 degrees of caster over the OE UCA			
Sway Bar				RC0031RZ-20	1kt	20mm 3 Position Adj. Sway Bar. Cannot be used with Airbags
SuperPro Easy-Lift Kit	TRC185FLK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 Front Strut Spacers			
	TRC185LK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Rear Raising Blocks, 4 x U Bolts & Hand Brake Bracket Mount Extension Kit			
Diff Drop Kit	TRCCOLDD	1	Corrects the front differential by 25mm			
<b>SuperPro</b>						
Front Shock Absorber Upper Bush	SPF375TK	1kt	OEM Bushes should never be re-used			
Hand Brake Cable Extension Kit				SPF4801K	1kt	Required when fitting lifted, high load carrying leaf spring packs.
Hand Brake Relocation & Cable Extension Kit				TRC0046	1kt	
Rear Brake Line Spacer				SPF5319K	1ea	
Spring Eye & Shackle Bush Kit				KIT185K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT185SK	1kt	Greaseable Shackles, Pins & Bushes

ISUZU D-Max		TFS - continued		2012 - 2020		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIRBAG</b>						
Polyair Bellows Kit				88206-2	1kt	0-30mm Lift - No Drill Kit
				88206-2R	1kt	30-50mm Lift - No Drill Kit
Ride Rite Airbag Kit				RR4707	1kt	Std Height
				RR4717	1kt	Lift
ReadyStrut			ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required			
ReadyStrut Top Caps	RS005	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	ISUZ101-FOR ISUZ101T-FOR ISUZ168H-FOR ISUZ168HT-FOR				1pr	
RAW Struts & King Springs	ISUZ101-RAW ISUZ101T-RAW ISUZ168H-RAW ISUZ168HT-RAW				1pr	
Bilstein Struts & King Springs	ISUZ101-BIL ISUZ101T-BIL ISUZ168H-BIL ISUZ168HT-BIL				1pr	
Bilstein Adjustable Struts & King Springs	ISUZ168ADJ-BIL				1pr	
<b>FORMULA 4X4 KITS</b>						
<i>It is highly recommended to fit TRC6620 FUCA when lifting this vehicle</i>						
Refer above on part quantities and specifications						
Formula Lift Kit	ISUZ-006		40003, 50003, KHFR-168H, FLS-020, FUB-001, KIT185SK, TRC0046			
Formula Lift Kit with ReadyStruts	ISUZ-006R		ISUZ168H-FOR, 50003, FLS-020, FUB-001, KIT185SK, TRC0046			
RAW Lift Kit	ISUZ-004		G6302, G6027M3Y, KHFR-168H, FLS-020, FUB-001, KIT185SK, SPF3757K, TRC0046			
RAW Lift Kit with ReadyStruts	ISUZ-004R		ISUZ168H-RAW, G6027M3Y, FLS-020, FUB-001, KIT185SK, TRC0046			
Bilstein Lift Kit	ISUZ-005		24-230780, B46-0258, KHFR-168H, FLS-020, FUB-001, KIT185SK, SPF3757K, TRC0046			
Bilstein Lift Kit with ReadyStruts	ISUZ-005R		ISUZ168H-BIL, B46-0258, FLS-020, FUB-001, KIT185SK, TRC0046			
Bilstein Lift Kit with adjustable ReadyStruts	ISUZ-005ADJ		ISUZ168ADJ-BIL, B46-0258, FLS-020, FUB-001, KIT185SK, TRC0046			
RAW Load Kit	ISUZ-008		G6302, NM654M2, KHFR-168H, FLS-021, FUB-006, KIT185SK, SPF3757K, TRC0046			
RAW Load Kit with ReadyStruts	ISUZ-008R		ISUZ168H-RAW, NM654M2, FLS-021, FUB-006, KIT185SK, TRC0046			



ISUZU D-Max		TFS, RG01		2020 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40015	2ea	0-50mm Lift	50030	2ea	0-50mm Lift
Bilstein	24-230780	2ea	0-50mm Lift	24-322577	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KTFR-101	1pr	Raised			
	KTFR-101T	1pr	Raised Comfort			
	KTFR-101HT	1pr	Raised 50-100kg			
<b>LEAF SPRING</b>						
Formula				FLS-148	2ea	40mm Lift at 150kg load
				FLS-149	2ea	40mm Lift at 300kg Const. load
				FLS-150	2ea	40mm Lift at 500kg Const. load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-248	1ea	FLS-148 x 2, FUB-001 x 4, KIT246SK x 1			
	FLSKIT-249	1ea	FLS-149 x 2, FUB-001 x 4, KIT246SK x 1			
	FLSKIT-250	1ea	FLS-150 x 2, FUB-006 x 4, KIT246SK x 1			
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-016	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-001	4ea	
				FUB-006	4ea	to be used with FLS-150
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6590	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
Steering Knuckle Kit	TRC6680	1pr	Bump Steer Correction			
Sway Bar Relocation Kit	TRC0042K	1kt	to relocate the sway bar on a vehicle with bigger wheels and tires			
Bash Guard Chassis Saver	TRC9014	1kt				
Sway Bar				RC0113RZ-18	1kt	18mm 3 Position Adj. Sway Bar
<b>SuperPro</b>						
Rear Brake Line Spacer				SPF5319K	1ea	
Spring Bush Kit				KIT246K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT246SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIRBAG</b>						
Polyair Bellows Kit				88220	1kt	Std Height
				88220R	1kt	2" Lift
Ride Rite Airbag Kit				RR4727	1kt	Std Height
				RR4730	1kt	Lift
ReadyStrut			ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required			
ReadyStrut Top Caps	RS005	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	ISUZ101N-FOR ISUZ101TN-FOR ISUZ101HN-FOR ISUZ101HTN-FOR ISUZ101HDN-FOR				1pr	
Bilstein Struts & King Springs	ISUZ101T-BIL ISUZ168HT-BIL					
<b>FORMULA 4X4 KITS</b>						
<b>It is highly recommended to fit TRC6590 &amp; TRC6680 when lifting this vehicle</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	ISUZ-014		40015, 50030, KTFR-101, FLS-148, FUB-001, KIT246K, SPF5319K			
Formula Lift Kit with ReadyStruts	ISUZ-014R		ISUZ101N-FOR, 50030, FLS-148, FUB-001, KIT246K, SPF5319K			
Bilstein Load Kit	ISUZ-016		24-230780, 24-322577, KTFR-101T, FLS-149, FUB-001, KIT246K, SPF5319K			
Bilstein Load Kit with ReadyStruts	ISUZ-016R		ISUZ101T-BIL, 24-322577, FLS-149, FUB-001, KIT246K, SPF5319K			



ISUZU MU-X		UCS, RF		2013 - 2021		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula</i>	40003	2ea	0-50mm Lift	50028	2ea	0-50mm Lift
<i>Bilstein</i>	24-230780	2ea	0-40mm Lift	24-258210	2ea	0-40mm Lift
<i>Sachs Max</i>	317 636	2ea	0-40mm Lift	317 231	2ea	0-40mm Lift
<b>COIL SPRING</b>						
<i>King Springs</i>	KHFR-168H	1pr	Raised	KIRR-02	1pr	Raised
	KHFR-168HT	1pr	Raised Comfort	KIRR-02HD	1pr	Raised 100-300kg
	KTFR-101	1pr	Raised 50-100kg			
	KTFR-101T	1pr	Raised Comfort 50-100kg			
<b>ROLL CONTROL</b>						
<i>Fixed Offset Upper Control Arm</i>	TRC6620	1pr	providing an increase of 2 degrees of caster over the OE UCA			
<i>Diff Drop Kit</i>	TRCCOLLDD	1	Corrects the front differential by 25mm			
<b>AIRBAG</b>						
<i>Polyair Red Bag Kit</i>				11092	1kt	2" Lift
<i>Polyair Ultimate Kit</i>				11092ULT	1kt	2" Lift - 60PSI Heavy Duty Kit
<i>Coil Rite Airbag Kit</i>				CR5133	1kt	Lift
				CR5133HP	1kt	Lift High Pressure
<i>ReadyStrut</i>	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
<i>ReadyStrut Top Caps</i>	RS005	2ea	Strut Cap, Spring Seat, Nuts & Washers			
<i>Formula Struts &amp; King Springs</i>	ISUZ101-FOR ISUZ101T-FOR ISUZ168H-FOR ISUZ168HT-FOR				1pr	
<i>Bilstein Struts &amp; King Springs</i>	ISUZ101-BIL ISUZ101T-BIL ISUZ168H-BIL ISUZ168HT-BIL				1pr	
<i>Bilstein Adjustable Struts &amp; King Springs</i>	ISUZ168ADJ-BIL				1pr	
<b>FORMULA 4x4 KITS</b> <i>It is highly recommended to fit TRC6620 FUCA when lifting this vehicle</i> Refer above on part quantities and specifications						
<i>Formula Lift Kit</i>	ISUZ-009	40003, 50028, KHFR-168, KIRR-02				
<i>Formula Lift Kit with ReadyStruts</i>	ISUZ-009R	ISUZ168H-FOR, 50028, KIRR-02				
<i>Bilstein Lift Kit</i>	ISUZ-007	24-230780, 24-258210, KHFR-168, KIRR-02				
<i>Bilstein Lift Kit with ReadyStruts</i>	ISUZ-007R	ISUZ168H-BIL, 24-258210, KIRR-02				
<i>Bilstein Lift Kit with adjustable ReadyStruts</i>	ISUZ-007ADJ	COL168ADJ-BIL, 24-258210, KIRR-02				



ISUZU MU-X		RJ		2021 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40015	2ea	0-50mm Lift	50031	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KTFR-101	1pr	Raised	KIRS-02	1pr	Raised
				KIRR-02	1pr	Raised 100-200kg
				KIRR-02HD	1pr	Raised 200kg+
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6590	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
Steering Knuckle Kit	TRC6680	1pr	Bump Steer Correction			
Sway Bar Relocation Kit	TRC0042K	1kt	to relocate the sway bar on a vehicle with bigger wheels and tires			
<b>AIRBAG</b>						
Coil Rite Airbag Kit				CR5122	1kt	Raised
				CR5122HP	1kt	Raised High Pressure
<b>FORMULA 4X4 KITS</b>						
<i>It is highly recommended to fit TRC6590 &amp; TRC6680 when lifting this vehicle</i>						
Refer above on part quantities and specifications						
ReadyStrut Top Caps	RS005	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	ISUZ101N-FOR				1pr	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	ISUZ-015		40015, 50031, KTFR-101, KIRS-02			
Formula Lift Kit with ReadyStruts	ISUZ-015R		ISUZ101N-FOR, 50031, KIRS-02			

**JEEP Cherokee**

**XJ**

**1988 - 2001**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6776Y	2ea	0-50mm Lift	G6777Y	2ea	0-50mm Lift
Bilstein	B46-1798	2ea		BE5-2579	2ea	
Sachs Max	313 139	2ea	0-40mm Lift	313 138	2ea	0-40mm Lift
Koni Heavy Track Gas	30-1348	2ea				
<b>COIL SPRING</b>						
King Springs	KJFR-20	1pr	Raised approx 35mm Lift			
<b>LEAF SPRING</b>						
Formula				FLS-088	2ea	Approx 40mm Lift at 150kg
				FLS-087	2ea	Approx 40mm Lift at 300kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-088	1ea	FLS-088 x 2, C673 x 4, KIT071K x 1			
	FLSKIT-087	1ea	FLS-087 x 2, C673 x 4, KIT071K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
U Bolts				C673	4ea	
				C674	4ea	to be used with 76mm Axle housing
Caster Wedges				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Coil Spring Spacer	SPF1735-15K	1ea	15mm Lift			
	SPF1735-30K	1ea	30mm Lift			
SuperPro Bush Kit				KIT071K	1kt	63mm Wide OE Springs
				KIT084K	1kt	65mm Wide After Market Springs
<b>AIRBAG</b>						
Polyair Sleeve Kit				34007	1kt	Std Height
<b>OTHER COMPONENTS</b>						
Gearbox Spacer				10-1006	1kt	25mm Gear Box Spacer Kit
<b>ADJUSTABLE PANHARD ROD</b>						
Whiteline	KPR062	1ea	RHD - heavy duty off-car adjustable			
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
RAW Lift Kit	JEEP-002B		G6776Y,G6777Y, KJFR-20, FLS-088, C673, KIT084K, 10-1006			
Bilstein Lift Kit	JEEP-002		B46-1798, BE5-2579, KJFR-20, FLS-088, C673, KIT084K, 10-1006			

JEEP Cherokee		KJ		2001 - 2008		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs Max	317 816	2ea	0-40mm Lift	317 817	2ea	0-40mm Lift
Koni Heavy Track Gas	8240-1201SPX	2ea		8240-1202SPX	2ea	
<b>COIL SPRING</b>						
King Springs	KJFR-27	1pr	Raised Petrol	KJRR-28	1pr	Raised
	KJFR-27HD	1pr	Raised Diesel			
<b>AIRBAG</b>						
Polyair Red Bag Kit				15495	1kt	Std Height
Coil Rite Airbag Kit				CR5009	1kt	Std Height
<b>FORMULA 4X4 KITS</b> Refer above on part quantities and specifications						
Koni Lift Kit (Petrol)	JEEP-003A			8240-1201SPX, 8240-1202SPX, KJFR-27, KJRR-28		
Koni Lift Kit (Diesel)	JEEP-003B			8240-1201SPX, 8240-1202SPX, KJFR-27HD, KJRR-28		



JEEP Cherokee		KK		2007 - 2013		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs Max	317 816	2ea	0-40mm Lift	317 817	2ea	0-40mm Lift
Koni Heavy Track Gas	8240-1201SPX	2ea		8240-1202SPX	2ea	
<b>COIL SPRING</b>						
King Springs	KJFR-39	1pr	Raised Petrol	KJRR-40	1pr	Raised
<b>AIRBAG</b>						
Coil Rite Airbag Kit				CR5092	1kt	Std Height
<b>FORMULA 4X4 KITS</b> Refer above on part quantities and specifications						
Koni Lift Kit (Petrol)	JEEP-003C			8240-1201SPX, 8240-1202SPX, KJFR-39, KJRR-40		



JEEP Commander

refer Grand Cherokee WH, WK

2005 - 2010



JEEP Gladiator		JT		2020 - on	
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>SHOCK ABSORBER</b>					
Raw Nitro Max	NM965M1	2ea	0-40mm Lift	NM997M3	2ea 0-40mm Lift
<b>COIL SPRING</b>					
King Springs	KJFR-49	1pr	Raised	KJRR-50 KJRR-50HD	1pr Raised 1pr Raised 300-500kg
<b>ROLL CONTROL</b>					
Extended Adjustable Sway Bar Links				TRC4304	2ea suits Vehicles up to 8" Lift
<b>AIRBAG</b>					
Polyair Ultimate Kit				92091RULT	1kt 2" Raised
Coil Rite Airbag Kit				CR5170/CR5170HP	1kt 2" Raised
<b>ADJUSTABLE PANHARD ROD</b>					
Whiteline				KPR191	1ea Heavy duty off-car adjustable
<b>FORMULA 4X4 KITS</b>					
Refer above on part quantities and specifications					
RAW Lift Kit	JEEP-021			NM965M1, NM997M3, KJFR-49, KJRR-50	



JEEP Grand Cherokee		ZJ, ZG		1996 - 1999	
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>SHOCK ABSORBER</b>					
Raw Nitro	G6776Y	2ea	0-40mm Lift	G6777M2Y	2ea 0-40mm Lift
Sachs Max	317 237	2ea	0-40mm Lift	317 815	2ea 0-40mm Lift
Bilstein	B46-1798	2ea		B46-1799	2ea
Koni Heavy Track Gas	30-1624	2ea	Std Height	30-1625	2ea Std Height
Koni Heavy Track	8240-1198SPX	2ea		8240-1199SPX	2ea
<b>COIL SPRING</b>					
King Springs	KJFR-20	1pr	Raised	KJRR-21	1pr Raised
<b>AIRBAG</b>					
Polyair Red Bag Kit				11691	1kt Std Height
Coil Rite Airbag Kit				CR5025	1kt Std Height
<b>ADJUSTABLE PANHARD ROD</b>					
Whiteline	KPR062	1ea	RHD - heavy duty off-car adjustable		
<b>FORMULA 4X4 KITS</b>					
Refer above on part quantities and specifications					
RAW Lift Kit	JEEP-016			G6776Y, G6777M2Y, KJFR-20, KJRR-21	
Bilstein Lift Kit	JEEP-004B			B46-1798, B46-1799, KJFR-20, KJRR-21	



JEEP Grand Cherokee		WJ, WG		1999 - 2005		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6776Y	2ea	STD	G6777M3Y	2ea	STD
Sachs Max	317 238	2ea	0-40mm Lift	317 628	2ea	0-40mm Lift
Bilstein	BE5-6102	2ea		BE5-6103	2ea	
Koni Heavy Track Gas	8240-1176SPX	2ea		8240-1177SPX	2ea	
<b>COIL SPRING</b>						
King Springs	KJFR-25	1pr	Raised	KJRR-26	1pr	Raised
<b>STEERING DAMPER</b>						
Replacement Damper	SS5924-P/S	1ea				
<b>AIRBAG</b>						
Polyair Red Bag Kit				92494	1kt	Std Height
Coil Rite Airbag Kit				CR5071	1kt	Std Height
				CR5075	1kt	Suits 50mm Lift
<b>FORMULA 4x4 KITS</b>						
Refer above on part quantities and specifications						
Bilstein Lift Kit	JEEP-004			BE5-6102, BE5-6103, KJFR-25, KJRR-26		
Koni Lift Kit	JEEP-004C			8240-1176SPX, 8240-1177SPX, KJFR-25, KJRR-26		



JEEP Grand Cherokee		WH, WK		2005 - 2010		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Bilstein	BE5-D272	2ea	0-20mm Lift	BE5-D273	2ea	0-20mm Lift
Sachs Max	317 818	2ea	0-40mm Lift	317 837	2ea	0-40mm Lift
Koni Heavy Track	8240-1264	2ea	0-20mm Lift	8240-1265	2ea	0-20mm Lift
<b>COIL SPRING</b>						
King Springs	KJFR-29	1pr	Raised	KJRR-30	1pr	Raised
	KJFR-29HD	1pr	Raised 50-100kg	KJRR-30HD	1pr	Raised 100-300kg
<b>AIRBAG</b>						
Polyair Red Bag Kit				15492	1kt	Std Height
Coil Rite Airbag Kit				CR5044	1kt	
				CR5121	1kt	Suits 50mm Lift
<b>FORMULA 4x4 KITS</b>						
Refer above on part quantities and specifications						
Bilstein Lift Kit	JEEP-006			BE5-D272, BE5-D273, KJFR-29, KJRR-30		
Bilstein Lift Kit (Extra Heavy Duty)	JEEP-006HD			BE5-D272, BE5-D273, KJFR-29HD, KJRR-30HD		





<b>JEEP Grand Cherokee</b>		<b>WK, WK2</b>		<b>2010 - on</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Bilstein</i>	24-225434	2ea	0-40mm Lift (suits up to 5/2015)	24-225441	2ea	0-40mm Lift (suits up to 5/2015)
<i>Sachs Max</i>	317 819	2ea	0-40mm Lift (suits up to 5/2015)	317 820	2ea	0-40mm Lift (suits up to 5/2015)
<b>COIL SPRING</b>						
<i>King Springs</i>	KJFR-43	1pr	Raised Diesel	KJRR-44	1pr	Raised Diesel
				KJRR-42	1pr	Raised Petrol
<b>AIRBAG</b>						
<i>Polyair Red Bag Kit</i>				11993	1kt	2" Raised
<i>Coil Rite Airbag Kit</i>				CR5145	1kt	Raised
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
<i>Bilstein Lift Kit (Diesel up to 05/15)</i>	JEEP-020			24-225434, 24-225441, KJFR-43, KJRR-44		



<b>JEEP Wrangler</b>		<b>TJ</b>		<b>1996 - 2007</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Raw Nitro</i>	G6776Y	2ea	0-40mm	G6777M1Y	2ea	0-40mm
<i>Sachs</i>	317 237	2ea	Std Height (Pin/Yoke)	317 630	2ea	Std Height
	317 239	2ea	Std Height (Pin/Eye)			
<i>Bilstein</i>	BE5-2442	2ea	Std Height	BE5-2443	2ea	Std Height
<i>Koni Heavy Track Gas</i>	30-1348	2ea	Std Height	30-1630	2ea	Std Height
<b>COIL SPRING</b>						
<i>King Springs</i>	KJFR-23	1pr	Raised	KJRR-24	1pr	Raised
<i>SuperPro</i>			For individual bushes refer to the SuperPro Catalogue			
<i>Coil Spring Spacer</i>	SPF1735-15K	1ea	15mm Lift	SPF1996-10K	1ea	10mm Lift
	SPF1735-30K	1ea	30mm Lift	SPF1996-30K	1ea	30mm Lift
<i>Trailing Arm Kit</i>	TRC1193	1ea	Lower	TRC1193	1ea	Lower
	TRC1194	1ea	Upper	TRC1195	1ea	Upper
<i>Panhard Rod</i>				TRC1196	1ea	
<b>ROLL CONTROL</b>						
<i>Extended Adjustable Sway Bar Links</i>	TRC4315	1ea	heavy duty adjustable with quick release pin to suit 75 - 100mm lifted vehicles			
<b>AIRBAG</b>						
<i>Polyair Red Bag Kit</i>				15692	1kt	Std Height
<i>Coil Rite Airbag Kit</i>				CR5044	1kt	Std Height
<b>ADJUSTABLE PANHARD ROD</b>						
<i>Whiteline</i>	KPR062	1ea	RHD - heavy duty off-car adjustable	WB2688	1ea	RHD - heavy duty off-car adjustable
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
<i>RAW Lift Kit</i>	JEEP-018			G6776Y, G6777M1Y, KJFR-23, KJRR-24		
<i>Bilstein Lift Kit</i>	JEEP-007			BE5-2442, BE5-2443, KJFR-23, KJRR-24		

JEEP Wrangler		JK		2007 - 2018		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro Max	NM1027	2ea	0-50mm Lift	NM1028	2ea	0-50mm Lift
Bilstein	BE5-E670	2ea	0-50mm Lift	BE5-E671	2ea	0-50mm Lift
Sachs Max	317 629	2ea	0-40mm Lift	317 633	2ea	0-40mm Lift
Koni Heavy Track	8240-1262	2ea	Std Height	8240-1263	2ea	Std Height
<b>STEERING DAMPER</b>						
	SV5926	1ea				
<b>COIL SPRING</b>						
King Springs	KJFR-31	1pr	Raised SWB Petrol	KJRR-35	1pr	Raised SWB Petrol/Diesel
	KJFR-33	1pr	Raised LWB Petrol	KJRR-36	1pr	Raised LWB Petrol/Diesel
	KJFR-34	1pr	Raised LWB Diesel			
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Coil Spring Spacer	SPF1735-15K	1ea	15mm Lift			
	SPF1735-30K	1ea	30mm Lift			
Trailing Arm Kit	TRC1188	1ea	Upper	TRC1187	1ea	Lower
	TRC1189	1ea	Lower	TRC1186	1ea	Upper
Panhard Rod	TRC1191	1ea		TRC1192	1ea	
<b>AIRBAG</b>						
Polyair Red Bag Kit				12894	1kt	2" Raised
				11894	1kt	2" Raised - Narrow Coil Version
Coil Rite Airbag Kit				CR5100/CR5100HP	1kt	Raised 96mm ID Coil
				CR5107/CR5107HP	1kt	Raised 100-105mm ID Coil
				CR5104/CR5104HP	1kt	Raised 120mm ID Coil
<b>ADJUSTABLE PANHARD ROD</b>						
Whiteline	KPR076	1ea	RHD - heavy duty off-car adjustable	KPR040	1ea	Heavy duty off-car adjustable
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
RAW Lift Kit (SWB Petrol)	JEEP-008			NM1027, NM1028, KJFR-31, KJRR-35		
RAW Lift Kit (LWB Petrol)	JEEP-010			NM1027, NM1028, KJFR-33, KJRR-36		
RAW Lift Kit (LWB Diesel)	JEEP-011			NM1027, NM1028, KJFR-34, KJRR-36		



JEEP Wrangler		JL		2017 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Bilstein	24-286350	2ea	Std Height	24-286367	2ea	Std Height
	33-292625	2ea	0-40mm Lift	33-292632	2ea	0-40mm Lift
<b>COIL SPRING</b>						
King Springs	KJFR-45	1pr	Raised LWB Diesel	KJRR-46	1pr	Raised LWB Diesel
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Trailing Arm Kit				TRC1186	1ea	Upper
<b>AIRBAG</b>						
Polyair Red Bag Kit				12899	1kt	2" Raised Rubicon
				12894	1kt	2" Raised Sport & Sahara
Coil Rite Airbag Kit				CR5100/CR5100HP	1kt	Raised 96mm ID Coil
				CR5107/CR5107HP	1kt	Raised 100-105mm ID Coil
				CR5104/CR5104HP	1kt	Raised 120mm ID Coil
<b>ADJUSTABLE PANHARD ROD</b>						
Whiteline				KPR082	1ea	Heavy duty off-car adjustable
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Bilstein Lift Kit (LWB Diesel)	JEEP-022			33-292625, 33-292632, KJFR-45, KJRR-46		



KIA Sorento		BL		2002 - 2009		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Bilstein</i>	BE5-B104	2ea		BE5-B105	2ea	Eye/Eye Only
<i>Koni Heavy Track</i>	8240-1214	2ea		8240-1215	2ea	
<b>COIL SPRING</b>						
<i>King Springs</i>	KKFR-08	1pr	Raised Petrol	KKRR-11	1pr	Raised Petrol & Diesel (115mm ID) Suits 7/07-09
	KKFR-08H	1pr	Raised Diesel	KKRR-09	1pr	Raised (130mm ID) Suits 03-6/07
<b>AIRBAG</b>						
<i>Polyair Red Bag Kit</i>				12895	1kt	2002-2006
<i>Coil Rite Airbag Kit</i>				19697	1kt	2007-2009
				CR5056	1kt	



KIA Sorento		XM		2009 - 2015		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Bilstein</i>	35-191353	1ea	up to 09/2012	24-191371	2ea	up to 09/2012
	35-191360	1ea	up to 09/2012			
<i>Koni Special Active</i>	8745-1358L	1ea	up to 12/2012	8245-1359	2ea	up to 12/2012
	8745-1358R	1ea	up to 12/2012			
	8745-1362L	1ea	from 12/2012	8245-1379	2ea	from 12/2012
	8745-1362R	1ea	from 12/2012			
<b>COIL SPRING</b>						
<i>King Springs</i>	KHFR-141	1pr	Raised	KKRR-21	1pr	Raised
<b>AIRBAG</b>						
<i>Coil Rite Airbag Kit</i>				CR5032	1kt	Petrol Only
				CR5062	1kt	Diesel Only



<b>KIA Sportage</b>		<b>JA</b>		<b>1993 - 2004</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	313 782	1ea	RHS from 1/1999	311 237	2ea	1994-2003
	313 783	1ea	LHS from 1/1999			
Koni Heavy Track Gas	8641-1318SPT	2ea	Original struts only Series 1 only to 7/99	8240-1148SPT	2ea	Original struts only Series 1 only to 7/99
<b>COIL SPRING</b>						
King Springs	KKFR-01	1pr	Raised	KKRR-02	1pr	Raised
<b>AIRBAG</b>						
Polyair Red Bag Kit				12490	1kt	standard height



<b>KIA Sportage</b>		<b>JE, KM</b>		<b>2005 - 2010</b>		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Koni Heavy Track	8641-1503	2ea	External Adjustment	8641-1504	2ea	External Adjustment
<b>COIL SPRING</b>						
King Springs	KKFR-14	1pr	Raised	KKRR-15	1pr	Raised



LAND ROVER		Series II, IIA, III		1956 - 1986		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Monroe Gas Magnum	16-0198	1pr	All Ex Military	16-0199	1pr	LWB Only Ex Military
<b>STEERING DAMPER</b>						
Replacement Damper	14022	1ea	Eye - Eye			
Formula Big Bore	30008	1ea	Pin - Pin			
SuperPro			For individual bushes refer to the SuperPro Catalogue			
Shackle/Shock Bush Kit	KIT041K	1kt	Fits Front & Rear (only with Fr Upper Shackle bush at 38mm OD)			



LAND ROVER County		110, 130		1983 - 1992		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6003Y	2ea		G6004M1Y	2ea	
<b>STEERING DAMPER</b>						
Tough Dog 35mm Foam Cell	EXT5009	1ea				
Bilstein	B36-0110	1ea				
<b>COIL SPRING</b>						
King Springs	KRFR-01	1pr	Std Height Petrol	KLRS-04	1pr	Std Height Wagon
	KRRS-02	1pr	Raised Petrol	KLRR-04	1pr	Raised Wagon
	KRRS-02	1pr	Std Height Diesel	KLRS-05	1pr	Std Height Tray Back
	KRRR-02	1pr	Raised Diesel	KLRR-05	1pr	Raised Tray Back
<b>AIRBAG</b>						
Polyair Red Bag Kit				95098	1kt	110 Series - Std Height
				95095	1kt	110 Series - 2" Raised
Coil Rite Airbag Kit				94091	1kt	130 Series - 4 Coils Rear
On Air Airbag Kit				CR5028	1kt	Light Duty
				0A4515	1kt	Heavy Duty





LAND ROVER County/Defender		110, 130		1992 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6003Y	2ea		G6004M1Y	2ea	2/99 - on
				G6004Y	2ea	5/92 - 1/99
Bilstein	BE5-6540	2ea	0-50mm Lift 130 Series Only	BE5-6529	2ea	0-50mm Lift 130 Series Only
Koni Heavy Track Raid	90-5374	2ea	0-50mm Lift	90-5375	2ea	0-40mm Lift
				90-5401	2ea	40-60mm Lift
<b>STEERING DAMPER</b>						
Tough Dog 35mm Foam Cell	EXT5009	1ea				
Koni	026-1580	1ea				
Bilstein	B36-0110	1ea				
<b>COIL SPRING</b>						
King Springs	KRFR-03	1pr	Raised	KLRR-05	1pr	Raised 110 Series 100kg
				KLRR-05HD	1pr	Raised 110 Series 300-500kg Raised 130 Series 100kg
				KLRR-05EHD	1pr	Raised 130 Series 500kg+
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Radius Arm & P/hard Rod Bush Kit	KIT043AK	1kt	Fits Front & Rear			
<b>AIRBAG</b>						
Polyair Red Bag Kit				95098	1kt	110 Series - Std Height
				95095	1kt	110 Series - 2" Raised
				94091	1kt	130 Series - 4 Coils Rear
Coil Rite Airbag Kit				CR5028	1kt	Light Duty
On Air Airbag Kit				OA4515	1kt	Heavy Duty
<b>ADJUSTABLE PANHARD ROD</b>						
Whiteline	PRLAND01FT	1ea				
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
RAW Lift Kit (up to 01/99)	LAN-001A			G6003Y, G6004Y, KRFR-03, KLRR-05		
RAW Lift Kit (02/99-on)	LAN-001B			G6003Y, G6004M1Y, KRFR-03, KLRR-05		



**LAND ROVER Discovery**
**Series I**
**1989 - 1998**


Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Raw Nitro</i>	G6003Y	2ea	0-50mm Lift	G6004Y	2ea	89 - 5/95 0-50mm Lift
				G6004M1Y	2ea	6/95 - 12/98 0-50mm Lift
<i>Bilstein</i>	B46-0243	2ea		B46-0253	2ea	89 - 5/95
				B46-0255	2ea	6/95 - 12/98
<i>Koni Heavy Track Raid</i>	90-5374SP1	2ea	0-50mm Lift	90-5375SP1	2ea	0-40mm Lift
				90-5401	2ea	40-60mm Lift
<b>STEERING DAMPER</b>						
<i>Formula Big Bore</i>	30008	1ea				
<b>COIL SPRING</b>						
<i>King Springs</i>	KRFS-01	1pr	Std Height	KRRS-04	1pr	Std Height P/Rate
	KRFR-01	1pr	Raised	KRRR-04	1pr	Raised P/Rate
	KRFR-03T		Raised 50-100kg	KRRR-04HD	1pr	Raised EHD P/Rate 100-300kg
<i>SuperPro</i>	For individual bushes refer to the SuperPro Catalogue					
<i>Coil Spring Spacer</i>				SPF1725K	1ea	20mm Lift
				SPF962K	1ea	30mm Lift
<i>Radius Arm &amp; Phard Rod Bush Kit</i>	KIT043AK	1kt	Fits Front & Rear			
<b>AIRBAG</b>						
<i>Polyair Red Bag Kit</i>				92099	1kt	Std Height
				92096	1kt	2" Raised
<i>Coil Rite Airbag Kit</i>				CR5026	1kt	Std Height
				CR5027	1kt	50mm Raised
<b>ADJUSTABLE PANHARD ROD</b>						
	PRLAND01FT	1ea				
<b>FORMULA 4X4 KITS</b>						
	Refer above on part quantities and specifications					
<i>RAW Lift Kit (up to 05/95)</i>	LAN-002A			G6003Y, G6004Y, KRFR-01, KRRR-04		
<i>RAW Lift Kit (06/95-12/98)</i>	LAN-002B			G6003Y, G6004M1Y, KRFR-01, KRRR-04		
<i>Bilstein Lift Kit (up to 05/95)</i>	LAN-003A			B46-0243, B46-0253, B36-0245, KRFR-01, KRRR-04		
<i>Bilstein Lift Kit (06/95-12/98)</i>	LAN-003B			B46-0243, BE5-0255, B46-0245, KRFR-01, KRRR-04		



LAND ROVER Discovery		Series II		1998 - 2004		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Bilstein	BE5-6046	2ea	Heavy Duty	BE5-6047	2ea	Heavy Duty
	BE5-B994	2ea	50mm Lift	BE5-B995	2ea	50mm Raised
Koni Heavy Track Raid	90-5452	2ea	0-30mm Lift	90-5453	2ea	0-30mm Lift
<b>STEERING DAMPER</b>						
Bilstein	BE3-A580	1ea				
Tough Dog 35mm Foam Cell	EXT5003	1ea				
<b>COIL SPRING</b>						
King Springs	KRFS-06	1pr	Std Height	KRRS-04	1pr	Std Height
	KRFR-06	1pr	Raised	KRRR-04	1pr	Raised
				KRRR-04HD	1pr	Raised 100-300kg
<b>AIRBAG</b>						
Polyair Red Bag Kit				92896	1kt	Std Height
				92096	1kt	2" Raised
Coil Rite Airbag Kit				CR5026	1kt	Std Height
				CR5027	1kt	50mm Raised
<b>ADJUSTABLE PANHARD ROD</b>						
	PRLAND01FT	1ea				
<b>FORMULA 4X4 KITS</b>						
			Refer above on part quantities and specifications			
Bilstein Lift Kit	LAN-004A		BE5-B994, BE5-B995, BE3-A580, KRFR-06, KRRR-04			



LAND ROVER Discovery		Series III		2004 - 2009		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Bilstein	BE5-D670	2ea	Suits Air Suspension Only	BE5-D671	2ea	Suits Air Suspension Only
<b>COIL SPRING</b>						
King Springs	KRFR-13	1pr	Raised	KRRR-14	1pr	Raised
	KRFR-13HD	1pr	Raised 50-100kg	KRRR-14HD	1pr	Raised 300-500kg

LAND ROVER Freelander		XE Series		1998 - 2000		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	313 406	1ea	LHS	310 024	1ea	LHS
	313 405	1ea	RHS	310 023	1ea	RHS
<b>COIL SPRING</b>						
King Springs	KLFR-08	1pr	Raised	KLRR-09	1pr	Raised



LAND ROVER Freelander		ES, SE		2000 - 2006		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	313 406	1ea	LHS	310 024	1ea	LHS
	313 405	1ea	RHS	310 023	1ea	RHS
<b>COIL SPRING</b>						
King Springs	KLFR-12	1pr	Raised	KLRR-09	1pr	Raised





LDV D90		SV		2017 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40025	2ea	0-50mm Lift	50037	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KTFR-101	1pr	Raised	KHRR-96	1pr	Raised
	KTFR-101H	1pr	Raised 50-100kg	KHRR-96HD	1pr	Raised 100-300kg Load
	KTFR-101HD	1pr	Raised 100-250kg			
	KTFR-101HT	1pr	Raised Comfort 50-100kg			
	KTFR-101HDT	1pr	Raised Comfort 100-250kg			
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6620	1pr	providing an increase of 2 degrees of caster over the OE UCA			
<b>AIRBAG</b>						
Polyair Red Bag Kit				19895ULT	1kt	2" Raised
Coil Rite Airbag Kit				CR5099/CR5099HP	1kt	2" Raised
<b>ReadyStrut</b>						
ReadyStrut Top Caps	RS016	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	LDV101-FOR LDV168H-FOR				1pr	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	LDV-003	40025, 50037, KTFR-101, KHRR-96				
Formula Lift Kit with ReadyStruts	LDV-003R	LDV168H-FOR, 50037, KTFR-101, KHRR-96				

LDV T60 (excl. T60 MAX)

SK

2017 - on



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula</i>	40025	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
<i>Bilstein</i>	24-230780	2ea	0-50mm Lift	B46-0258	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6302	2ea	0-40mm Lift	G6027M3Y	2ea	0-50mm Lift
<i>Raw Nitro Max</i>				NM654M2	2ea	0-50mm Lift
<b>COIL SPRING</b>						
<i>King Springs</i>	KHFR-168H	1pr	Raised			
	KHFR-168HT	1pr	Raised Comfort			
	KTFR-101	1pr	Raised 50-100kg			
	KTFR-101T	1pr	Raised Comfort 50-100kg			
<b>LEAF SPRING</b>						
<i>Formula</i>				FLS-020	2ea	40mm Lift at 0-300kg load
				FLS-021	2ea	40mm Lift at 300kg Const. load
				FLS-026	2ea	40mm Lift at 500kg Const. load
<b>LEAF SPRING KIT</b>						
<i>Formula</i>	FLSKIT-020	1ea	FLS-020 x 2, FUB-001 x 4, KIT185SK x 1			
	FLSKIT-021	1ea	FLS-021 x 2, FUB-006 x 4, KIT185SK x 1			
	FLSKIT-026	1ea	FLS-026 x 2, FUB-006 x 4, KIT185SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
<i>Swing Shackle</i>				FSK-001	2ea	Greaseable
<i>Fixed Pin</i>				FSP-001	2ea	Greaseable
<i>U Bolts</i>				FUB-001	4ea	
				FUB-006	4ea	Use for FLS-021 or FLS-026 and with a caster wedge
<i>Caster Wedges</i>				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
<b>SuperPro</b>						
<i>Front Shock Absorber Upper Bush</i>	SPF3757K	1kt	OEM Bushes should never be re-used			
<i>Hand Brake Cable Extension Kit</i>				SPF4801K	1kt	Required when fitting lifted, high load carrying leaf spring packs
<i>Headlight &amp; ABS Extension Kit</i>				SPF5144K	1kt	
<i>Centre Bearing Alignment Kit</i>				TRC0048	1ea	
<i>Spring Eye &amp; Shackle Bush Kit</i>				KIT185K	1kt	Bushes Only
<i>Shackle, Pin &amp; Bush Kit</i>				KIT185SK	1kt	Greaseable Shackles, Pins & Bushes
<b>ROLL CONTROL</b>						
<i>Fixed Offset Upper Control Arm</i>	TRC6620	1pr	providing an increase of 2 degrees of caster over the OE UCA			

LDV T60 (excl. T60 MAX)		SK - continued		2017 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIRBAG</b>						
Polyair Bellows Kit				88206-2LDV	1kt	0-30mm Lift - No Drill Kit
				88206-2RLDV	1kt	30-50mm Lift - No Drill Kit
Ride Rite Airbag Kit				RR4713	1kt	Std Height
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
ReadyStrut Top Caps	RS016	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	LDV101-FOR	LDV168H-FOR			1pr	
RAW Struts & King Springs	ISUZ101-RAW	ISUZ101T-RAW	ISUZ168H-RAW	ISUZ168HT-RAW	1pr	
Bilstein Struts & King Springs	ISUZ101-BIL	ISUZ101T-BIL	ISUZ168H-BIL	ISUZ168HT-BIL	1pr	
Bilstein Adjustable Struts & King Springs	ISUZ168ADJ-BIL				1pr	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	LDV-001		40025, 50003, KHFR-168H, FLS-020, FUB-001, KIT185SK, SPF5144K, TRC0048			
Formula Lift Kit with ReadyStruts	LDV-001R		LDV168H-FOR, 50003, KHFR-168H, FLS-020, FUB-001, KIT185SK, SPF5144K, TRC0048			
Bilstein Lift Kit	LDV-002		24-230780, B46-0258, KHFR-168H, FLS-020, FUB-001, KIT185SK, SPF5144K, SPF3757K			
Bilstein Lift Kit with adjustable ReadyStruts	LDV-002ADJ		ISUZ168ADJ-BIL, B46-0258, FLS-020, FUB-001, KIT185SK, SPF5144K			
Bilstein Lift Kit with ReadyStruts	LDV-002R		ISUZ168-BIL, B46-0258, FLS-020, FUB-001, KIT185SK, SPF5144K			

LDV T60 MAX		SK		2017 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40025	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Bilstein	24-230780	2ea	0-50mm Lift	B46-0258	2ea	0-50mm Lift
Raw Nitro	G6302	2ea	0-40mm Lift	G6027M3Y	2ea	0-50mm Lift
Raw Nitro Max				NM654M2	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KHFR-168H	1pr	Raised			
	KHFR-168HT	1pr	Raised Comfort			
	KTFR-101	1pr	Raised 50-100kg			
	KTFR-101T	1pr	Raised Comfort 50-100kg			
<b>LEAF SPRING</b>						
Formula				FLS-020	2ea	40mm Lift at 0-300kg load
				FLS-021	2ea	40mm Lift at 300kg Const. load
				FLS-026	2ea	40mm Lift at 500kg Const. load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-020	1ea	FLS-020 x 2, FUB-001 x 4, KIT185SK x 1			
	FLSKIT-021	1ea	FLS-021 x 2, FUB-006 x 4, KIT185SK x 1			
	FLSKIT-026	1ea	FLS-026 x 2, FUB-006 x 4, KIT185SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-001	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-001	4ea	
				FUB-006	4ea	Use for FLS-021 or FLS-026 and with a caster wedge
Caster Wedges				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
<b>SuperPro</b>						
Hand Brake Cable Extension Kit				SPF4801K	1kt	Required when fitting lifted, high load carrying leaf spring packs
Headlight & ABS Extension Kit				SPF5144K	1kt	
Centre Bearing Alignment Kit				TRC0048	1ea	
Spring Eye & Shackle Bush Kit				KIT185K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT185SK	1kt	Greaseable Shackles, Pins & Bushes
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6620	1pr	providing an increase of 2 degrees of caster over the OE UCA			

LDV T60 MAX		SK - continued		2022 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIRBAG</b>						
Polyair Bellows Kit				88206-2LDV	1kt	0-30mm Lift - No Drill Kit
				88206-2RLDV	1kt	30-50mm Lift - No Drill Kit
Ride Rite Airbag Kit				RR4713	1kt	Std Height
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
ReadyStrut Top Caps	RS016	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	LDV101-FOR	LDV168H-FOR			1pr	
RAW Struts & King Springs	ISUZ101-RAW	ISUZ101T-RAW	ISUZ168H-RAW	ISUZ168HT-RAW	1pr	
Bilstein Struts & King Springs	ISUZ101-BIL	ISUZ101T-BIL	ISUZ168H-BIL	ISUZ168HT-BIL	1pr	
Bilstein Adjustable Struts & King Springs	ISUZ168ADJ-BIL				1pr	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	LDV-001		40025, 50003, KHFR-168H, FLS-020, FUB-001, KIT185SK, SPF5144K, TRC0048			
Formula Lift Kit with ReadyStruts	LDV-001R		LDV168H-FOR, 50003, KHFR-168H, FLS-020, FUB-001, KIT185SK, SPF5144K, TRC0048			
Bilstein Lift Kit	LDV-002		24-230780, B46-0258, KHFR-168H, FLS-020, FUB-001, KIT185SK, SPF5144K, SPF3757K			
Bilstein Lift Kit with adjustable ReadyStruts	LDV-002ADJ		ISUZ168ADJ-BIL, B46-0258, FLS-020, FUB-001, KIT185SK, SPF5144K			
Bilstein Lift Kit with ReadyStruts	LDV-002R		ISUZ168-BIL, B46-0258, FLS-020, FUB-001, KIT185SK, SPF5144K			



LEXUS LX 470

refer to TOYOTA LandCruiser 100 Series

1998 - 2007

LEXUS LX 570

refer to TOYOTA LandCruiser 200 Series

2007 - 2021

**MAHINDRA Pik Up**

2007 - 2017



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea	0-50mm Lift			
Raw Nitro	G6897BY	2ea	0-50mm Lift	G6026Y	2ea	Use SPF0427T x 4
<b>LEAF SPRING</b>						
Formula				FLS-086	2ea	40mm Lift at 250kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-086	1ea	FLS-086 x 2, 4117 x 4, GR353 x 2, SPF2260K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				GR353	2ea	
Fixed Pin						Re-use original Fixed pins
U Bolts				C419	4ea	
SuperPro						For individual bushes refer to the SuperPro Catalogue
Spring Eye & Shackle Bush Kit				SPF2260K	1kt	
<b>AIRBAG</b>						
Ride Rite Airbag Kit				RR4625*	1kt	Std Height, requires modification to upper mount

\*This Airbag kit should not be sold as DIY, requires professional fitting and rear sway to be removed and signed form to be sent to Airbag Man prior to sale.

**MAZDA B2600 / Bravo**
**B2500 / B2600**
**1987 - 2006**


Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50021	2ea	0-50mm Lift	50002	2ea	0-50mm Lift
Raw Nitro	G6897M2BY	2ea	0-50mm Lift	G6014M4Y	2ea	0-50mm Lift
Sachs Max	314 061	2ea	0-40mm Lift	317 118	2ea	0-40mm Lift
<b>TORSION BAR</b>						
EFS	TB-1546A	1pr	26mm OD, 927mm long			
<b>LEAF SPRING</b>						
Formula				FLS-085	2ea	Approx 35mm lift at 0-300kg load
				FLS-084	2ea	Approx 35mm lift at 300kg+ load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-185	1ea	FLS-085 x 2, FUB-002 x 4, FSK-008 x 2, 794 x 2, KIT065K x 1			
	FLSKIT-184	1ea	FLS-084 x 2, FUB-002 x 4, FSK-008 x 2, 794 x 2, KIT065K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-008	2ea	Greaseable
Fixed Pin				794	2ea	
U Bolts				FUB-002	4ea	
Caster Wedges				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT065K	1kt	
<b>AIRBAG</b>						
Polyair Red Bag Kit				75998	1kt	Std Height
Ride Rite Airbag Kit				RR4596	1kt	Std Height
FORMULA 4X4 KITS						
Refer above on part quantities and specifications						
Formula Lift Kit	COUR-003		50021, 50002, FLS-085, FSK-008, 794, FUB-002, KIT065K			
RAW Lift Kit	COUR-001		G6897M2BY, G6014M4Y, FLS-085, FSK-008, 794, FUB-002, KIT065K			
Formula Load Kit	COUR-004		50021, 50002, TB-1546A, FLS-084, FSK-008, 794, FUB-002, KIT065K			
RAW Load Kit	COUR-002		G6897M2BY, G6014M4Y, TB-1546A, FLS-084, FSK-008, 794, FUB-002, KIT065K			



MAZDA BT-50		UN		2006 - 2011		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50023	2ea	0-50mm Lift	50002	2ea	0-50mm Lift
Raw Nitro	G6011M1BY	2ea	0-40mm Lift	G6014M4Y	2ea	0-40mm Lift
Raw NitroMax				NM326M4	2ea	0-40mm Lift
Bilstein	B46-2076BT	2ea	0-40mm Lift	24-231534	2ea	0-40mm Lift
Sachs Max	317 632	2ea	0-40mm Lift	317 230	2ea	0-40mm Lift
<b>TORSION BAR</b>						
EFS	TB-1551	1pr	27mm OD, 1024mm Long			
<b>LEAF SPRING</b>						
Formula				FLS-083*	2ea	Approx 35mm Lift at 0-300kg load
				FLS-082*	2ea	Approx 35mm Lift at 300kg+ load
* Please Note - Original Eye Bushes cannot be removed without damage						
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-082	1ea	FLS-082 x 2, FUB-002 x 4, KIT145SK x 1			
	FLSKIT-083	1ea	FLS-083 x 2, FUB-002 x 4, KIT145SK x 1			
	FLSKIT-188	1ea	FLS-082 x 2, FUB-004 x 4, KIT145SK x 1			
	FLSKIT-183	1ea	FLS-083 x 2, FUB-004 x 4, KIT145SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-008	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts - Check Axle Housing OD				FUB-002	4ea	Axle Housing 83mm OD
				FUB-004	4ea	Axle Housing 88mm OD
Caster Wedges				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees

MAZDA BT-50		UP - continued		2006 - 2011	
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>MISC PARTS</b>					
Shock Tower Re-Inforcement	10-1003	1kt	Bracket Mount kit to provides support to shock tower		
SuperPro	For individual bushes refer to the SuperPro Catalogue				
Spring Eye & Shackle Bush Kit				KIT145K	1kt Bushes Only
Shackle, Pin & Bush Kit				KIT145SK	1kt Greaseable Shackles, Pins & Bushes
Centre Bearing Alignment Kit				SPF4361K	1ea
<b>AIRBAG</b>					
Polyair Red Bag Kit				75698	1kt Light Duty Kit
Polyair Bellows Kit				85126	1kt 0-30mm Lift
Ride Rite Airbag Kit				85126R	1kt 50mm+ Raised
Load-Up Kit				RR4596	1kt Std Height
				LUB013	1kt
<b>FORMULA 4X4 KITS</b>					
Refer above on part quantities and specifications					
Formula Lift Kit	RANG-083		50023, 50002, FLS-083, FUB-002, KIT145SK, SPF4361K		
	RANG-088		50023, 50002, FLS-083, FUB-004, KIT145SK, SPF4361K		
RAW Lift Kit	RANG-183		G6011M1BY, G6014M4Y, FLS-083, FUB-002, KIT145SK, SPF4361K		
	RANG-188		G6011M1BY, G6014M4Y, FLS-083, FUB-004, KIT145SK, SPF4361K		
Bilstein Lift Kit	RANG-383		B46-2076BT, 24-231534, TB-1551, FLS-083, FUB-002, KIT145SK, SPF4361K		
	RANG-388		B46-2076BT, 24-231534, TB-1551, FLS-083, FUB-004, KIT145SK, SPF4361K		
RAW Load Kit	RANG-283		G6011M1BY, G6014M4Y, TB-1551, FLS-082, FUB-002, KIT145SK, SPF4361K		
	RANG-288		G6011M1BY, G6014M4Y, TB-1551, FLS-082, FUB-004, KIT145SK, SPF4361K		



MAZDA BT-50		UP, UR		2011 - 2020		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40002	2ea	0-50mm Lift	50002	2ea	0-50mm Lift
Raw Nitro	G6898	2ea	0-50mm Lift	G6899	2ea	0-50mm Lift
Raw NitroMax	NM898	2ea	0-50mm Lift	NM326M4	2ea	0-40mm Lift
Bilstein	24-231527	2ea	0-50mm Lift	24-231534	2ea	0-50mm Lift
Sachs Max	317 632	2ea	0-40mm Lift	317 230	2ea	0-40mm Lift
<b>COIL SPRING</b>						
King Springs	KFFR-08	1pr	40mm Lift			
	KFFR-08T	1pr	40mm Lift Comfort			
	KFFR-08HD	1pr	40mm Lift 50-100kg			
	KFFR-08HT	1pr	40mm Lift Comfort 50-100kg			
	KFFR-08HHD	1pr	40mm Lift 100-250kg			
	KFFR-08HDT	1pr	40mm Lift Comfort 100-250kg			
<b>LEAF SPRING</b>						
Formula				FLS-005	2ea	50mm Lift 0-300kg Constant Load
				FLS-006	2ea	50mm Lift 300-500kg Constant Load
				FLS-007	2ea	50mm Lift 500kg + Constant Load
<i>Note: When fitting lifted rear springs it is advisable to use SPF4659K to re-align the centre bearing</i>						
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-005	1ea	FLS-005 x 2, FUB-002 x 4, KIT168SK x 1			
	FLSKIT-006	1ea	FLS-006 x 2, FUB-002 x 4, KIT168SK x 1			
	FLSKIT-007	1ea	FLS-007 x 2, FUB-009 x 4, KIT168SK x 1			
<b>Long travel SHOCK ABSORBERS must be fitted with the above part numbers.</b>						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-006	2ea	Greaseable (grease nipple to outside)
Fixed Pin				FSK-015	2ea	Greaseable (grease nipple to inside)
				FSP-001	2ea	Greaseable
U Bolts				FUB-002	4ea	
				FUB-009	4ea	Suits FLS-007
Caster Wedges				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
<b>ROLL CONTROL</b>						
Sway Bar	RC0009FZ-33	1kt	33mm Adj. Sway Bar	RC0009RZ-22	1kt	22mm Adj. Sway Bar
				RC0009RZ-20	1kt	20mm 3 Position Adj. Sway Bar
Adjustable Upper Control Arms	TRC8560	1pr	+/- 2.5 Degrees of Camber Adjustment and 0 to +3 Degrees of Caster Adjustment			
Fixed Offset Upper Control Arms	TRC6560	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
SuperPro Easy-Lift Kit	TRC168FLK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. 2 x Front Strut Spacers Only			
	TRC168LK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Rear Raising Blocks, 4 x U Bolts			
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Strut Fitting Kit	SPF4906K	1kt	Contains bushes & washers - Suits Bilstein & RAW Struts Only			
Spring Eye & Shackle Bush Kit				KIT168K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT168SK	1kt	Greaseable Shackles, Pins & Bushes
Centre Bearing Alignment Kit				SPF4659K	1ea	
Diff Drop Kit	TRCRANGDD	1	Corrects the front differential by 25mm			

MAZDA BT-50		UP, UR - continued		2011 - 2020		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIRBAG</b>						
Polyair Bellows Kit				88227-2	1kt	0-1" Lift - No Drill Kit
				88227-2R	1kt	2" Lift - No Drill Kit
Ride Rite Airbag Kit				RR4634	1kt	0-40mm Lift
Load-Up Kit				LU8015	1kt	
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
ReadyStrut Top Caps	RS006	2ea	Strut Cap, Spring Seat, Nuts & Washers (Suits RAW Predator & Bilstein Struts)			
	RS011	2ea	Strut Cap, Spring Seat, Nuts & Washers (Suits O.E. RAW Nitro Max & Rancho Struts)			
Formula Struts & King Springs	RANGER08-FOR, RANGER08T-FOR, RANGER08H-FOR, RANGER08HT-FOR, RANGER08HD-FOR, RANGER08HHD-FOR				1pr	
RAW Struts & King Springs	RANGER08-RAW, RANGER08T-RAW, RANGER08HT-RAW, RANGER08-NMRAW, RANGER08T-NMRAW, RANGER08HT-NMRAW, RANGER08HD-NMRAW				1pr	
Bilstein Struts & King Springs	RANGER08-BIL, RANGER08T-BIL, RANGER08H-BIL, RANGER08HT-BIL, RANGER08HD-BIL, RANGER08HHD-BIL, RANGER08HDT-BIL				1pr	
<b>FORMULA 4X4 KITS</b>						
<i>It is highly recommended to fit TRC8560/TRC6560 FUCA when lifting this vehicle</i>						
Refer above on part quantities and specifications						
Formula Lift Kit	RANG-306			40002, 50002, KFFR-08, FLS-005, FUB-002, KIT168SK, SPF4659K		
Formula Lift Kit with ReadyStruts	RANG-306R			RANGER08-FOR, 50002, FLS-005, FUB-002, KIT168SK, SPF4659K		
RAW Lift Kit	RANG-300			G6898, G6899, KFFR-08, FLS-005, FUB-002, KIT168SK, SPF4659K		
RAW Lift Kit with ReadyStruts	RANG-300R			RANGER08-RAW, G6899, FLS-005, FUB-002, KIT168SK, SPF4659K		
Bilstein Lift Kit	RANG-304			24-231527, 24-231534, KFFR-08T, FLS-005, FUB-002, KIT168SK, SPF4659K, SPF4906K		
Bilstein Lift Kit with ReadyStruts	RANG-304R			RANGE08T-BIL, 24-231534, FLS-005, FUB-002, KIT168SK, SPF4659K		
RAW Load Kit (300-500kg)	RANG-303			NM898, NM326M4, KFFR-08T, FLS-006, FUB-002, KIT168SK, SPF4659K		
RAW Load Kit with ReadyStruts (300-500kg)	RANG-303R			RANGER08HD-NMRAW, NM326M4, FLS-006, FUB-002, KIT168SK, SPF4659K		
RAW Load Kit (500kg+)	RANG-301			NM898, NM326M4, KFFR-08HD, FLS-007, FUB-009, KIT168SK, SPF4659K		
RAW Load Kit (500kg+) with ReadyStruts	RANG-301R			RANGER08HD-NMRAW, NM326M4, FLS-007, FUB-009, KIT168SK, SPF4659K		



MAZDA BT-50		TFS / RG04		2020 - On		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40015	2ea	0-50mm Lift	50030	2ea	0-50mm Lift
Bilstein	24-230780	2ea	0-50mm Lift	24-322577	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KTFR-101	1pr	Raised			
	KTFR-101T	1pr	Raised Comfort			
	KTFR-101HT	1pr	Raised 50-100kg			
<b>LEAF SPRING</b>						
Formula				FLS-148	2ea	40mm Lift at 150kg load
				FLS-149	2ea	40mm Lift at 300kg Const. load
				FLS-150	2ea	40mm Lift at 500kg Const. load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-248	1ea	FLS-148 x 2, FUB-001 x 4, KIT246SK x 1			
	FLSKIT-249	1ea	FLS-149 x 2, FUB-001 x 4, KIT246SK x 1			
	FLSKIT-250	1ea	FLS-150 x 2, FUB-006 x 4, KIT246SK x 1			
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-016	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-001	4ea	
				FUB-006	4ea	to be used with FLS-150
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6590	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
Steering Knuckle Kit	TRC6680	1pr	Bump Steer Correction			
Bash Guard Chassis Saver	TRC9014	1kt				
Sway Bar				RC0113RZ-18	1kt	18mm 3 Position Adj. Sway Bar
<b>SuperPro</b>						
Rear Brake Line Spacer				SPF5319K	1ea	
Spring Bush Kit				KIT246K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT246SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIRBAG</b>						
Polyair Bellows Kit				88220	1kt	Std Height
				88220R	1kt	2" Lift
Ride Rite Airbag Kit				RR4727	1kt	Std Height
				RR4730	1kt	Lift
<i>ReadyStruts come complete with Strut, Spring &amp; Upper Mounts. No dismantling required</i>						
ReadyStrut Top Caps	RS005	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	ISUZ101N-FOR ISUZ101TN-FOR ISUZ101HN-FOR ISUZ101HTN-FOR ISUZ101HDN-FOR				1pr	
Bilstein Struts & King Springs	ISUZ101T-BIL ISUZ168HT-BIL				1pr	
<b>FORMULA 4X4 KITS</b>						
<i>It is highly recommended to fit TRC6590 &amp; TRC6680 when lifting this vehicle</i>						
<i>Refer above on part quantities and specifications</i>						
Formula Lift Kit	ISUZ-014		40015, 50030, KTFR-101, FLS-148, FUB-001, KIT246K, SPF5319K			
Formula Lift Kit with ReadyStruts	ISUZ-014R		ISUZ101N-FOR, 50030, FLS-148, FUB-001, KIT246K, SPF5319K			
Bilstein Load Kit	ISUZ-016		24-230780, 24-322577, KTFR-101T, FLS-149, FUB-001, KIT246K, SPF5319K			
Bilstein Load Kit with ReadyStruts	ISUZ-016R		ISUZ101T-BIL, 24-322577, FLS-149, FUB-001, KIT246K, SPF5319K			

MAZDA Tribute		CU, YU		2001 - 2006		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Koni Heavy Track	8641-1480	2ea		8240-1220	2ea	
Sachs	317 101	1ea	LHS	312 589	2ea	
	317 102	1ea	RHS			
<b>COIL SPRING</b>						
King Springs	KMFR-54	1pr	Raised	KMRR-55	1pr	Raised
<b>AIRBAG</b>						
Coil Rite Airbag Kit				CR5014	1kt	



MERCEDES BENZ X-Class		470		2017 - 2020		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Bilstein	BES-D626-X	2ea	0-50mm Lift	24-257244	2ea	0-50mm Lift
Raw Nitro Max	NM397	2ea	0-50mm Lift	NM301	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KDFR-72HHD	1pr	Raised 4 Cyl	KMRR-118	1pr	Raised
	KMFR-117	1pr	Raised 6 Cyl	KDRR-73	1pr	Raised Comfort
	KMFR-117H	1pr	Raised 6 Cyl 50-100kg	KDRR-73HD	1pr	Raised 100-300kg
<b>AIRBAG</b>						
Polyair Red Bag Kit				12096	1kt	Std Height
				12096R	1kt	Raised
Polyair Ultimate Kit				12096ULT	1kt	60PSI Heavy Duty Kit
				12096RULT	1kt	Raised - 60PSI Heavy Duty Kit
<b>ADJUSTABLE PANHARD ROD</b>						
Whiteline				KPR189	1ea	Heavy duty off-car adjustable
<b>FORMULA 4x4 KITS</b>						
Refer above on part quantities and specifications						
RAW Lift Kit (4cyl)	MERC-001			NM397, NM301, KDFR-72HHD, KMRR-118		
RAW Lift Kit (6cyl)	MERC-002			NM397, NM301, KMFR-117, KMRR-118		
Bilstein Lift Kit (4cyl)	MERC-003			BES-D626-X, 24-257244, KDFR-72HHD, KMRR-118		
Bilstein Lift Kit (6cyl)	MERC-004			BES-D626-X, 24-257244, KMFR-117, KMRR-118		







MITSUBISHI Challenger		PA (Leaf Spring Rear)		1997 - 2000		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea	0-50mm Lift	50003	2ea	
Raw Nitro	G6897BY	2ea	0-50mm Lift	G6010Y	2ea	0-50mm Lift
Koni Heavy Track	30-1456	2ea	Std Height	82-2138	2ea	Std Height
<b>TORSION BAR</b>						
EFS	TB-203A	1pr	27.5mm OD, 1307mm Long			
<b>LEAF SPRING</b>						
Formula				FLS-080	2ea	approx 40mm lift at 150kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-080	1ea	FLS-080 x 2, C451 x 4, 795 x 2			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				795	2ea	
U Bolts				C451	4ea	
<b>AIRBAG</b>						
Polyair Red Bag Kit				72795C	1kt	Std Height
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	CHAL-001		50025, 50003, FLS-080, 795, C451, SPF1227K, SPF0187K, SPF0192K			
RAW Lift Kit	CHAL-002		G6897BY, G6010Y, FLS-080, 795, C451, SPF1227K, SPF0187K, SPF0192K			



MITSUBISHI Challenger		PA II (Coil Spring Rear)		2000 - 2007		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea	0-50mm Lift	50006	2ea	0-50mm Lift
Raw Nitro	G6897BY	2ea	0-50mm Lift	G6016Y	2ea	0-50mm Lift
Sachs Max	316 541	2ea	0-40mm Lift	316 377	2ea	0-40mm Lift
Koni Heavy Track Gas	30-1456	2ea	Std Height	30-1705	2ea	Std Height
Koni Heavy Track				82-2370	2ea	0-30mm Lift
<b>COIL SPRING</b>						
King Springs				KCRS-33	1pr	Raised
<b>TORSION BAR</b>						
EFS	TB-203A	1pr	27.5mm OD, 1307mm Long			
<b>AIRBAG</b>						
Polyair Red Bag Kit				95993	1kt	40mm Lift
Coil Rite Airbag Kit				CR5007	1kt	Std Height
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	CHAL-003		50025, 50006, KCRS-33			
RAW Lift Kit	CHAL-004		G6897BY, G6016Y, KCRS-33			

**MITSUBISHI Challenger**

**PB**

**2008-2015**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula</i>	40009	2ea	0-50mm Lift	50006	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6346	2ea	0-40mm Lift	G6016Y	2ea	0-40mm Lift
<i>Bilstein</i>	BE5-H842	2ea	0-40mm Lift	24-064255	2ea	0-40mm Lift
<i>Sachs Max</i>	316 380	2ea	0-40mm Lift	316 377	2ea	0-40mm Lift
<b>COIL SPRING</b>						
<i>King Springs</i>	KCFR-55		Raised	KCRS-23	1pr	Raised
	KCFR-55T		Raised Comfort			
<b>ROLL CONTROL</b>						
<i>Fixed Offset Control Arms</i>	TRC6500	1pr	<i>Fixed Offset, Approx 2" caster and approx an extra 1.5" of camber</i>			
<b>SuperPro</b>						
<i>Shortened Bump Stop</i>	SPF4633K	1kt	<i>Shortened Upper Bump Stop - Allows more droop travel for lifted vehicles, not to be used with Bilstein Shock Absorbers</i>			
<b>AIRBAG</b>						
<i>Polyair Red Bag Kit</i>				15795	1kt	
				15895C	1kt	Lift
<i>Coil Rite Airbag Kit</i>				CR5154	1kt	Lift
<b>ReadyStrut</b>						
<i>Formula Struts &amp; King Springs</i>	TRIT055-FOR TRIT055T-FOR				1pr	
<i>RAW Struts &amp; King Springs</i>	TRIT055-RAW TRIT055T-RAW				1pr	
<i>Bilstein Struts &amp; King Springs</i>	TRIT055-BIL TRIT055T-BIL				1pr	
<b>FORMULA 4x4 KITS</b>						
<b>It is highly recommended to fit TRC6500 FUCA when lifting this vehicle</b>						
<i>Refer above on part quantities and specifications</i>						
<i>Formula Lift Kit</i>	CHAL-005	40009, 50006, KCFR-55, KCRS-23, SPF4633K				
<i>Formula Lift Kit with ReadyStruts</i>	CHAL-005R	TRIT055-FOR, 50006, KCRS-23, SPF4633K				
<i>RAW Lift Kit</i>	CHAL-006	G6346, G6016Y, KCFR-55, KCRS-23, SPF4633K				
<i>RAW Lift Kit with ReadyStruts</i>	CHAL-006R	TRIT055-RAW, G6016Y, KCRS-23, SPF4633K				
<i>Bilstein Lift Kit</i>	CHAL-007	BE5-H842, 24-064255, KCFR-55, KCRS-23				
<i>Bilstein Lift Kit with ReadyStruts</i>	CHAL-007R	TRIT055-BIL, 24-064255, KCRS-23				


**MITSUBISHI Delica/L400**


**SF - SJ**

**1996 - 2005**



Description	FRONT		Qty	Notes	REAR		Qty	Notes
<b>SHOCK ABSORBER</b>								
<i>Bilstein</i>	<b>B46-2109</b>		2ea	0-40mm Lift	<b>B46-2110</b>		2ea	0-40mm Lift Eye-Eye
					<b>B46-2111</b>		2ea	0-40mm Lift Pin-Pin
<b>COIL SPRING</b>								
<i>King Springs</i>					<b>KCRR-13</b>		1pr	Raised
<b>TORSION BAR</b>								
<i>EFS</i>	<b>MITS031</b>		1pr	05/1994-05/1999 only, minimum 60mm downward suspension travel required after adjustment				
<b>AIRBAG</b>								
<i>Coil Rite Airbag Kit</i>					<b>CR5115 / CR5115HP</b>		1kt	Std Height
					<b>CR5116 / CR5116HP</b>		1kt	Lift
Not suitable for electronic suspension								

MITSUBISHI Pajero		NA - NG (LEAF SPRING REAR)		1983 - 1991		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6897M1BY	2ea	0-35mm Lift	G6010Y	2ea	0-35mm Lift
Raw Nitro Max	NM607M1	2ea	0-35mm Lift	NM626	2ea	0-35mm Lift
Sachs Max	316 540	2ea	0-40mm Lift	313 919	2ea	0-40mm Lift
Koni Heavy Track Gas	30-1318	2ea	Std Height	30-1319	2ea	Std Height
<b>TORSION BAR</b>						
EFS	TB-200A	1pr	26mm OD, 1282mm long			
<b>LEAF SPRING</b>						
Formula				FLS-081	2ea	approx 40mm lift at 150kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-081	1ea	FLS-081 x 2, C451 x 4, FSK-007 x 2, GR796 x 2, KIT072K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-007	2ea	Greaseable
Fixed Pin				GR796	2ea	18mm Pin only
U Bolts				C451	4ea	
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Complete Spring Bush Kit				KIT072K	1kt	
<b>AIRBAG</b>						
Polyair Red Bag Kit				72798	1kt	Std Height Only
Ride Rite Airbag Kit				RR4598	1kt	

MITSUBISHI Pajero		NA - NG (COIL SPRING REAR)		1983 - 1991		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula				50006	2ea	0-50mm Lift
Raw Nitro	G6897M1BY	2ea	0-35mm Lift	G6016Y	2ea	
Sachs Max	316 540	2ea	0-40mm Lift	316 377	2ea	0-40mm Lift
Koni Heavy Track Gas	30-1318	2ea	Std Height	30-1408	2ea	Std Height
<b>COIL SPRING</b>						
King Springs				KCRS-23	1pr	Std Height LWB P/Rate
				KCRR-23	1pr	Raised LWB P/Rate
				KCRR-23LR	1pr	Raised LWB Linear
				KCRR-23HD	1pr	Raised EHD LWB P/Rate
				KCRS-33	1pr	Std Height SWB P/Rate
				KCRR-33	1pr	Raised SWB P/Rate
<b>TORSION BAR</b>						
EFS	TB-200A	1pr	26mm OD, 1282mm long			
<b>AIRBAG</b>						
Polyair Red Bag Kit				15898	1kt	



MITSUBISHI Pajero		NH - NJ (Leaf Spring Rear)		1991 - 1996		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Raw Nitro	G6897BY	2ea	0-50mm Lift	G6010Y	2ea	0-50mm Lift
Raw Nitro Max				NM626	2ea	0-50mm Lift
Sachs Max	313 142	2ea	0-40mm Lift	313 919	2ea	0-40mm Lift
<b>TORSION BAR</b>						
EFS	TB-203A	1pr	27.5mm OD, 1307mm long			
<b>LEAF SPRING</b>						
Formula				FLS-081	2ea	approx 40mm lift at 150kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-181	1ea	FLS-081 x 2, C451 x 4, FSK-007 x 2, GR796 x 2, KIT072K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-007	2ea	Greaseable
Fixed Pin				GR796	2ea	18mm pin
U Bolts				C451	4ea	
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT072K	1kt	
<b>AIRBAG</b>						
Polyair Red Bag Kit				72798	1kt	Std Height
Ride Rite Airbag Kit				RR4598	1kt	Std Height
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	PAJ-006		50025, 50003, FLS-081, FSK-007, GR796, C451, KIT072K			
RAW Lift Kit	PAJ-002		G6897BY, G6010Y, FLS-081, FSK-007, GR796, C451, KIT072K			



MITSUBISHI Pajero		NF - NL (Coil Spring Rear)		1991 - 2000		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea	0-50mm Lift			
Raw Nitro	G6897BY	2ea	0-50mm Lift	G6018Y	2ea	0-50mm Lift
				G6669Y	2ea	0-50mm Lift H/D Option
Sachs	313 142	2ea	0-40mm Lift	290 091	2ea	0-40mm Lift
Koni Heavy Track Gas	30-1456	2ea	Std Height	30-1457	2ea	Std Height
<b>COIL SPRING</b>						
King Springs				KCRS-23	1pr	Std Height LWB P/Rate
				KCRR-23	1pr	Raised LWB P/Rate
				KCRR-23LR	1pr	Raised LWB Linear
				KCRR-23HD	1pr	Raised EHD LWB P/Rate 100-300kg
				KCRS-33	1pr	Std Height SWB P/Rate
				KCRR-33	1pr	Raised SWB P/Rate
<b>TORSION BAR</b>						
EFS	TB-200A	1pr	26mm OD, 1282mm long			
	TB-203A	1pr	27.5mm OD, 1307mm long			
Note: NJ models can take either Torsion Bar. Please check length before ordering						
<b>AIRBAG</b>						
Polyair Red Bag Kit				95893	1kt	NH-NJ Std Height
				95093	1kt	NH-NJ Lift
Coil Rite Airbag Kit				CR5154	1kt	Lift
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
RAW Lift Kit (LWB)	PAJ-003A			G6897BY, G6669Y, KCRR-23		
RAW Lift Kit (SWB)	PAJ-003B			G6897BY, G6669Y, KCRR-33		



MITSUBISHI Pajero		NM - NX		2000 -2022		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula</i>	40014	2ea	0-50mm Lift	50014	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6350	2ea	0-50mm Lift	G6009M3Y	2ea	0-50mm Lift
<i>Bilstein</i>	BE5-6271	2ea	0-50mm Lift	BE5-6272	2ea	0-50mm Lift
<i>Sachs Max</i>	316 378	2ea	0-40mm Lift	316 379	2ea	0-40mm Lift
<i>Koni Heavy Track Raid</i>	90-5443	2ea	Std Height	88-5389	2ea	Std Height
<i>Koni Heavy Track</i>	82-2505	2ea	Std Height	82-2506	2ea	Std Height
<b>COIL SPRING</b>						
<i>King Springs</i>	KCFS-34	1pr	Std Height Petrol	KCRS-35	1pr	Std Height LWB
	KCFR-34	1pr	Raised Petrol	KCRR-35	1pr	Raised P/Rate LWB
	KCFR-34	1pr	Std Height Diesel	KCRR-36HD	1pr	Raised P/Rate 100-300kg LWB
	KCFR-34HD	1pr	Raised Diesel	KCRS-35	1pr	Raised P/Rate SWB
	KCFR-34HHD	1pr	Raised Diesel 50-100kg			
<b>AIRBAG</b>						
<i>Polyair Red Bag Kit</i>				99697	1kt	Std Height
				99897	1kt	2" Lift
<i>Polyair Ultimate Kit</i>				99897ULT	1kt	Std Height 60PSI Heavy Duty
				99897ULT	1kt	2" Lift 60PSI Heavy Duty
<i>Coil Rite Airbag Kit</i>				CR5002	1kt	Std Height Only
				CR5130	1kt	Raised
<b>SuperPro</b>						
<i>Strut Fitting Kit</i>	SPF4909K	1kt	Contains bushes & washers			
<b>ROLL CONTROL</b>						
<i>Fixed Offset Upper Control Arms</i>	TRC6730	1pr	approx 4-5" caster & approx 0-0.5" of camber at 50mm lift			

MITSUBISHI Pajero		NM - NX - continued		2000 -2022		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>ReadyStrut</b>						
ReadyStrut Top Caps	RS007	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	PAJERO34-FOR PAJERO34H-FOR PAJERO34T-FOR PAJERO34HD-FOR PAJERO34HHD-FOR				1pr	
RAW Struts & King Springs	PAJERO34-RAW PAJERO34H-RAW PAJERO34T-RAW PAJERO34HD-RAW PAJERO34HHD-RAW				1pr	
Bilstein Struts & King Springs	PAJERO34-BIL PAJERO34HD-BIL PAJERO34HHD-BIL				1pr	
Sachs Struts & King Springs	PAJERO34-SACHS PAJERO34HD-SACHS				1pr	
<b>FORMULA 4X4 KITS</b>						
<b>It is highly recommended to fit TRC6730 FUCA when lifting this vehicle</b>						
Refer above on part quantities and specifications						
Formula Lift Kit (Petrol)	PAJ-010A			40014, 50014, KCFR-34, KCRR-35		
Formula Lift Kit with ReadyStruts (Petrol LWB)	PAJ-010AR			PAJERO34-FOR, 50014, KCRR-35		
Formula Lift Kit (Diesel LWB)	PAJ-010B			40014, 50014, KCFR-34HD, KCRR-35		
Formula Lift Kit with ReadyStruts (Diesel LWB)	PAJ-010BR			PAJERO34HD-FOR, 50014, KCRR-35		
Formula Lift Kit (Petrol LWB)	PAJ-011A			40014, 50014, KCFR-34, KCRS-35		
Formula Lift Kit with ReadyStruts (Petrol SWB)	PAJ-011AR			PAJERO34-FOR, 50014, KCRS-35		
Formula Lift Kit (Diesel SWB)	PAJ-011B			40014, 50014, KCFR-34HD, KCRS-35		
Formula Lift Kit with ReadyStruts (Diesel SWB)	PAJ-011BR			PAJERO34HD-FOR, 50014, KCRS-35		
RAW Lift Kit (Petrol LWB)	PAJ-004A			G6350, G6009M3Y, KCFR-34, KCRR-35		
RAW Lift Kit with ReadyStruts (Petrol LWB)	PAJ-004AR			PAJERO34-RAW, G6009M3Y, KCRR-35		
RAW Lift Kit (Diesel LWB)	PAJ-004B			G6350, G6009M3Y, KCFR-34HD, KCRR-35		
RAW Lift Kit with ReadyStruts (Diesel LWB)	PAJ-004BR			PAJERO34HD-RAW, G6009M3Y, KCRR-35		
Bilstein Lift Kit (Petrol LWB)	PAJ-005A			BE5-6271, BE5-6272, KCFR-34, KCRR-35, SPF4909K		
Bilstein Lift Kit with ReadyStruts (Petrol LWB)	PAJ-005AR			PAJERO34-BIL, BE5-6272, KCRR-35		
Bilstein Lift Kit (Diesel LWB)	PAJ-005B			BE5-6271, BE5-6272, KCFR-34HD, KCRR-35, SPF4909K		
Bilstein Lift Kit with ReadyStruts (Diesel LWB)	PAJ-005BR			PAJERO34HD-BIL, BE5-6272, KCRR-35		



**MITSUBISHI Pajero Sport**

**QE, QF**

**2015 - on**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula</i>	40009	2ea	0-50mm Lift	50006	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6346	2ea	0-40mm Lift	G6016Y	2ea	0-40mm Lift
<i>Bilstein</i>	BE5-H842	2ea	0-40mm Lift	24-064255	2ea	0-40mm Lift
<i>Sachs Max</i>	316 380	2ea	0-40mm Lift	316 377	2ea	0-40mm Lift
<b>COIL SPRING</b>						
<i>King Springs</i>	KCFR-55SP		Std Height	KCRR-38	1pr	Std Height
	KCFR-55H		Raised	KCRR-23	1pr	Raised
	KCFR-55HDT		Raised 100-250kg	KCRR-23HD	1pr	Raised 100-300kg
<b>ROLL CONTROL</b>						
<i>Sway Bar</i>	RC0098F-33	1kt	33mm Heavy Duty Non Adjustable Sway Bar	RC0098R-24	1kt	24mm Heavy Duty Non Adjustable Sway Bar
<i>Fixed Offset Upper Control Arms</i>	TRC6500	1pr	<i>suits QE only, Fixed Offset, Approx 2" caster and approx an extra 1.5" of camber</i>			
	TRC6505	1pr	<i>suits QF only, Fixed Offset, providing an increase of 1 degree of caster over the OE UCA</i>			
<b>SuperPro</b>						
<i>Strut Fitting Kit</i>	SPF4910K	1kt	Contains bushes & washers			
<i>Shortened Bump Stop</i>	SPF4633K	1kt	Shortened Upper Bump Stop - Allows more droop travel for lifted vehicles, not to be used with Bilstein Shock Absorbers			
<b>AIRBAG</b>						
<i>Polyair Red Bag Kit</i>				15795	1kt	Std Height
				15895C	1kt	2" Lift
<i>Coil Rite Airbag Kit</i>				CR6154	1kt	Raised
<i>ReadyStrut</i> ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required						
<i>ReadyStrut Top Caps</i>	RS004	2ea	Strut Cap, Spring Seat, Nuts & Washers			
<i>Formula Struts &amp; King Springs</i>	TRIT055H-FOR, TRIT055HDT-FOR				1pr	
<i>RAW Struts &amp; King Springs</i>	TRIT055H-RAW, TRIT055HDT-RAW				1pr	
<i>Bilstein Struts &amp; King Springs</i>	TRIT055H-BIL, TRIT055HDT-BIL				1pr	
<b>FORMULA 4X4 KITS</b>						
<i>It is highly recommended to fit TRC6500/TRC6505 FUCA when lifting this vehicle</i>						
Refer above on part quantities and specifications						
<i>Formula Lift Kit</i>	PAJ-009		40009, 50006, KCFR-55H, KCRR-23, SPF4633K			
<i>Formula Lift Kit with ReadyStruts</i>	PAJ-009R		TRIT055H-FOR, 50006, KCRR-23, SPF4633K			
<i>RAW Lift Kit</i>	PAJ-007		G6346, G6016Y, KCFR-55H, KCRR-23, SPF4633K			
<i>RAW Lift Kit with ReadyStruts</i>	PAJ-007R		TRIT055H-RAW, G6016Y, KCRR-23, SPF4633K			
<i>Bilstein Lift Kit</i>	PAJ-008		BE5-H842, 24-064255, KCFR-55H, KCRR-23			
<i>Bilstein Lift Kit with ReadyStruts</i>	PAJ-008R		TRIT055H-BIL, 24-064255, KCRR-23			

**MITSUBISHI Triton / L200**

**ME - MJ**

**1986 - 1996**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6897M1BY	2ea	0-50mm Lift	G6014M1Y	2ea	50mm
				G6010Y	2ea	Std Height
Sachs Max	316 540	2ea	0-40mm Lift	316 376	2ea	0-40mm Lift
Koni Heavy Track Gas	30-1318	2ea	Std Height	30-1319	2ea	Std Height
Koni Heavy Track	82-2354	2ea	Std Height	8240-1187SPX	2ea	Std Height
<b>TORSION BAR</b>						
EFS	TB-200A	1pr	ME-MH series. 26mm OD. 1282mm long			
	TB-204A	1pr	MJ series. 27.5mm OD. 1370mm long			
<b>LEAF SPRING</b>						
Formula				FLS-024	2ea	Approx 40mm lift at 150kg load
				FLS-025	2ea	Approx 40mm lift at 250kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-024	1ea	FLS-024 x 2, C451 x 4, FSK-007 x 2, FSP-001 x 2, KIT073K			
	FLSKIT-025	1ea	FLS-025 x 2, C451 x 4, FSK-007 x 2, FSP-001 x 2, KIT073K			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-007	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				C451	4ea	
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT073K	1kt	35mm ID Front eye
<b>AIRBAG</b>						
Polyair Red Bag Kit				72998	1kt	
Ride Rite Airbag Kit				RR4524	1kt	Leaf Under Axle
FORMULA 4X4 KITS						
Refer above on part quantities and specifications						
RAW Lift Kit All	TRI-002		G6897M1BY, G6014M1Y, FLS-024, FSK-007, FSP-001, C451, KIT073K			
RAW Load Kit (ME-MH)	TRI-003		G6897M1BY, G6014M1Y, TB-200A, FLS-025, FSK-007, FSP-001, C451, KIT073K			
RAW Load Kit (MJ)	TRI-004		G6897M1BY, G6014M1Y, TB-204A, FLS-025, FSK-007, FSP-001, C451, KIT073K			



MITSUBISHI Triton / L200		MK		1996 - 2006		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea	0-50mm Lift	50027	2ea	0-50mm Lift
Bilstein	B46-1794	2ea	0-50mm Lift	50003	2ea	Std Height
Raw Nitro	G6897BY	2ea	0-50mm Lift	B46-1036LT	2ea	0-50mm Lift (with SPF2357-16C2 x 4)
Sachs Max	316 541	2ea	0-40mm Lift	G6014M1Y	2ea	50mm Lift
				G6010Y	2ea	Std Height
				316 376	2ea	0-40mm Lift
<b>TORSION BAR</b>						
EFS	TB-204A	1pr	27.5mm OD. 1370mm long			
<b>LEAF SPRING</b>						
Formula				FLS-024	2ea	Approx 40mm lift at 150kg load
				FLS-025	2ea	Approx 40mm lift at 250kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-124	1ea	FLS-024 x 2, C451 x 4, KIT083SK x 1			
	FLSKIT-125	1ea	FLS-025 x 2, C451 x 4, KIT083SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-007	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				C451	4ea	
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT073K	1kt	Bushes Only 35mm ID Front eye OEM Spring & Formula Springs
				KIT083K	1kt	Bushes Only 41mm ID Front Eye OEM Spring
Shackle, Pin & Bush Kit				KIT083SK	1kt	Greaseable Shackles, Pins & Bushes 41mm ID Front Eye OEM Spring
<b>AIRBAG</b>						
Polyair Red Bag Kit				72098	1kt	Std Height
Ride Rite Airbag Kit				RR4524	1kt	Leaf Under Axle
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	TRI-018		50025, 50027, FLS-024, FSK-007, FSP-001, C451, KIT073K			
RAW Lift Kit	TRI-001		G6897BY, G6014M1Y, FLS-024, FSK-007, FSP-001, C451, KIT073K			
Formula Load Kit	TRI-019		50025, 50027, TB-204A, FLS-025, FSK-007, FSP-001, C451, KIT073K			
RAW Load Kit	TRI-005		G6897BY, G6014M1Y, TB-204A, FLS-025, FSK-007, FSP-001, C451, KIT073K			

**MITSUBISHI Triton**

**ML, MN**

**2006-2015**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula</i>	40009	2ea	0-25mm Lift	50003	2ea	0-50mm Lift
<i>Bilstein</i>	BE5-H842	2ea	0-25mm Lift	B46-0258	2ea	0-40mm Lift
<i>Raw Nitro</i>	G6346	2ea	0-25mm Lift	G6027M2Y	2ea	0-40mm Lift
<i>Raw Nitro Max</i>				NM654	2ea	0-40mm Lift
<i>Sachs Max</i>	316 380	2ea	0-40mm Lift	316 381	2ea	0-40mm Lift
<i>Koni Heavy Track</i>	8240-1270	2ea	Std Height	8240-1271	2ea	Std Height
<b>COIL SPRING</b>						
<i>King Springs</i>	KCFR-55	1pr	Raised			
	KCFR-55T	1pr	Raised Comfort			
	KCFR-55H	1pr	Raised 50-100kg			
	KCFR-55HD	1pr	Raised 100-250kg			
	KCFR-55HDT	1pr	Raised 100-250kg Comfort			
<b>LEAF SPRING</b>						
<i>Formula</i>				FLS-012	2ea	Approx 20mm lift at 150kg load
				FLS-013	2ea	Approx 20mm lift at 350kg load
Brake Line mounts require re-alignment and ABS cable mount extended by 12mm to allow full droop on raised rear						
<b>LEAF SPRING KIT</b>						
<i>Formula</i>	FLSKIT-012	1ea	FLS-012 x 2, FUB-003 x 4, KIT143SK x 1			
	FLSKIT-013	1ea	FLS-013 x 2, FUB-003 x 4, KIT143SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
<i>Swing Shackle</i>				FSK-007	2ea	Greaseable
<i>Fixed Pin</i>				FSP-001	2ea	Greaseable
<i>U Bolts</i>				FUB-003	4ea	
<b>ROLL CONTROL</b>						
<i>Sway Bar</i>				RC0024RZ-20	1kt	20mm Adj. Sway Bar. Cannot be used with Airbags
<i>SuperPro Easy-Lift Kit</i>	TRC143FLK	1kt	Kit contains 2 x Front Strut Spacers, 2 x Shortened Droop Stops. Use this Kit on a lifted vehicle to return the vehicle to the standard factory rake. Not to be used with Bilstein Shock Absorbers!			
	TRC143LK	1kt	This kit will lift the vehicle approx. 25mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Shortened Droop Stops, 2 x Rear Raising Blocks, 4 x U Bolts			
<i>Fixed Offset Upper Control Arms</i>	TRC6500	1pr	Fixed Offset, Approx 2" caster and approx an extra 1.5" of camber			
<b>SuperPro</b>						
<i>Strut Fitting Kit</i>	SPF4910K	1kt	Contains bushes & washers			
<i>Shortened Bump Stop</i>	SPF4633K	1kt	Shortened Upper Bump Stop - Allows more droop travel for lifted vehicles, not to be used with Bilstein Shock Absorbers			
<i>Spring Eye &amp; Shackle Bush Kit</i>				KIT143K	1kt	Bushes Only
<i>Shackle, Pin &amp; Bush Kit</i>				KIT143SK	1kt	Greaseable Shackles, Pins & Bushes
<i>Tailshaft Spacer Kit</i>				W93197	1kt	Reduces driveline vibration

MITSUBISHI Triton		ML, MN - continued		2006-2015	
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>AIRBAG</b>					
Polyair Red Bag Kit				72598T	1kt Std Height
				88122	1kt Std Height - No Drill Kit
Polyair Bellows Kit				88222	1kt 30-40mm Lift - No Drill Kit
				88122R	1kt 2" Lift - No Drill Kit
Ride Rite Airbag Kit				RR4593	1kt Std Height, Leaf Over Axle
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required				
ReadyStrut Top Caps	RS004	2ea	Strut Cap, Spring Seat, Nuts & Washers		
Formula Struts & King Springs	TRIT055-FOR TRIT055T-FOR TRIT055H-FOR TRIT055HD-FOR TRIT055HDT-FOR				1pr
RAW Struts & King Springs	TRIT055-RAW TRIT055T-RAW TRIT055H-RAW TRIT055HDT-RAW				1pr
Bilstein Struts & King Springs	TRIT055-BIL TRIT055T-BIL TRIT055H-BIL TRIT055HD-BIL TRIT055HDT-BIL				1pr
<b>FORMULA 4X4 KITS</b> <i>It is highly recommended to fit TRC6500 FUCA when lifting this vehicle</i> Refer above on part quantities and specifications					
Formula Lift Kit	TRI-015		40009, 50003, KCFR-55, FLS-012, FUB-003, KIT143S, SPF4633K		
Formula Lift Kit with ReadyStruts	TRI-015R		TRIT055-FOR, 50003, FLS-012, FUB-003, KIT143SK, SPF4633K		
RAW Lift Kit	TRI-007		G6346, G6027M2Y, KCFR-55, FLS-012, FUB-003, KIT143SK, SPF4633K		
RAW Lift Kit with ReadyStruts	TRI-007R		TRIT055-RAW, G6027M2Y, FLS-012, FUB-003, KIT143SK, SPF4633K		
Bilstein Lift Kit	TRI-010		BE5-H842, KCFR-55, B46-0258, FLS-012, FUB-003, KIT143SK, SPF4910K		
Bilstein Lift Kit with ReadyStruts	TRI-010R		TRIT055-BIL, B46-0258, FLS-012, FUB-003, KIT143SK		
Bilstein Lift Kit (Heavy Duty)	TRI-011		BE5-H842, KCFR-55H, B46-0258, FLS-013, FUB-003, KIT143SK, SPF4910K		
Bilstein Lift Kit with ReadyStruts (Heavy Duty)	TRI-011R		TRIT055H-BIL, B46-0258, FLS-013, FUB-003, KIT143SK		
RAW Load Kit	TRI-006		G6346, G6027M2Y, KCFR-55, FLS-013, FUB-003, KIT143SK, SPF4633K		
RAW Load Kit (Heavy Duty)	TRI-009		G6346, NM654, KCFR-55H, FLS-013, FUB-003, KIT143SK, SPF4633K		
RAW Load Kit with ReadyStruts (Heavy Duty)	TRI-009R		TRIT055H-RAW, NM654, FLS-013, FUB-003, KIT143SK, SPF4633K		



MITSUBISHI Triton		MQ, MR		2015 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40009	2ea	0-25mm Lift	50017	2ea	0-50mm Lift MQ only
		2ea	0-25mm Lift	50003	2ea	0-50mm Lift to MR only
Bilstein	BE5-H842	2ea	0-25mm Lift	B46-0258	2ea	0-40mm lift
				B46-1333	2ea	Std Height
Raw Nitro	G6346	2ea	0-20mm Lift	G6777M4Y	2ea	0-40mm Lift
Sachs Max	316 380	2ea	0-40mm Lift	316 381	2ea	0-40mm Lift
<b>COIL SPRING</b>						
King Springs	KCFR-55SP	1pr	Raised			
	KCFR-55	1pr	Raised 50-100kg			
<b>LEAF SPRING</b>						
Formula				FLS-097	2ea	Approx 40mm lift at 150kg load
				FLS-098	2ea	Approx 40mm lift at 250kg load
				FLS-119	2ea	Approx 40mm lift at 400kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-097	1ea	FLS-097 x 2, FUB-006 x 4, KIT218SK x 1, SPF4954K x 1			
	FLSKIT-098	1ea	FLS-098 x 2, FUB-006 x 4, KIT218SK x 1, SPF4954K x 1			
	FLSKIT-119	1ea	FLS-119 x 2, FUB-006 x 4, KIT218SK x 1, SPF4954K x 1			
***Please refer to Appendix 2 regarding solving vibration issues on these vehicles***						
***Brake Line mounts require re-alignment and ABS cable mount extended by 12mm to allow full droop on raised rear***						
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-013	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-006	4ea	
<b>ROLL CONTROL</b>						
Sway Bar	RC0098F-33	1kt	33mm Heavy Duty Non Adjustable Sway Bar	RC0073-RZ-20	1kt	20mm 3 Position Adj. Sway Bar. Cannot be used with Airbags
Upper Control Arms	TRC6500	1pr	MQ only; Fixed Offset, Approx 2" caster and approx an extra 1.5" of camber			
	TRC6505	1pr	MR only; Fixed Offset, providing an increase of 1 degree of caster over the OE UCA			
SuperPro Easy-Lift Kit	TRC143FLK	1kt	Kit contains 2 x Front Strut Spacers, 2 x Shortened Droop Stops. Use this Kit on a lifted vehicle to return the vehicle to the standard factory rake. Not to be used with Bilstein Shock Absorbers!			
	TRC218LK	1kt	This kit will lift the vehicle approx. 25mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Rear Raising Blocks, 4 x U Bolts			
<b>SuperPro</b>						
Strut Fitting Kit	SPF4910K	1kt	Contains bushes & washers			
Shortened Bump Stop	SPF4633K	1kt	Shortened Upper Bump Stop - Allows more droop travel for lifted vehicles			
Centre Bearing Offset Bracket	TRC0044	1kt	To Reduce Driveline Vibration			
ABS Cable Bracket Extension Kit				SPF4896K	1kt	
Brake Line Spacer Kit				SPF4954K	1kt	
Spring Eye & Shackle Bush Kit				KIT218K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT218SK	1kt	Greaseable Shackles, Pins & Bushes
Tailshaft Spacer Kit				WS3197	1kt	Reduces driveline vibration

MITSUBISHI Triton		MQ, MR - continued		2015 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIRBAG</b>						
Polyair Bellows Kit				88129	1kt	Std Height - No Drill Kit
				88229	1kt	30-40mm Lift - No Drill Kit
				88129R	1kt	2" Lift - No Drill Kit
Ride Rite Airbag Kit				RR4678	1kt	Std Height
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
ReadyStrut Top Caps	RS004	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	TRIT055SP-FOR TRIT055N-FOR				1pr	
RAW Struts & King Springs	TRIT055SP-RAW TRIT055N-RAW				1pr	
Bilstein Struts & King Springs	TRIT055SP-BIL TRIT055N-BIL				1pr	
<b>FORMULA 4x4 KITS</b>						
<i>It is highly recommended to fit TRC6500/TRC6505 FUCA when lifting this vehicle</i>						
<i>Refer above on part quantities and specifications</i>						
Formula Lift Kit (to suit MQ)	TRI-016		40009, 50017, KCFR-55SP, FLS-097, FUB-006, KIT218SK, SPF4633K, TRC0044, SPF4896K, SPF4954K			
Formula Lift Kit with ReadyStruts (to suit MQ)	TRI-016R		TRIT055SP-FOR, 50017, FLS-097, FUB-006, KIT218SK, SPF4633K, TRC0044, SPF4896K, SPF4954K			
Formula Lift Kit (to suit MR)	TRI-017		40009, 50003, KCFR-55SP, FLS-097, FUB-006, KIT218SK, SPF4633K, TRC0044, SPF4896K, SPF4954K			
Formula Lift Kit with ReadyStruts (to suit MR)	TRI-017R		TRIT055SP-FOR, 50003, FLS-097, FUB-006, KIT218SK, SPF4633K, TRC0044, SPF4896K, SPF4954K			
RAW Lift Kit	TRI-012		G6346, G6777M4Y, KCFR-55SP, FLS-097, FUB-006, KIT218SK, SPF4633K, TRC0044, SPF4896K, SPF4954K			
RAW Lift Kit with ReadyStruts	TRI-012R		TRIT055SP-RAW, G6777M4Y, FLS-097, FUB-006, KIT218SK, SPF4633K, TRC0044, SPF4896K, SPF4954K			
Bilstein Lift Kit	TRI-013		BES-H842,B46-0258,KCFR-55SP,FLS-097,FUB-006,KIT218SK,TRC0044,SPF4896K,SPF4910K,SPF4954K			
Bilstein Lift Kit with ReadyStruts	TRI-013R		TRIT055SP-BIL, B46-0258, FLS-097, FUB-006, KIT218SK, TRC0044, SPF4896K, SPF4954K			

**NISSAN Navara** **D21** **1985 - 1999**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50020	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Raw Nitro	G6897BY	2ea	0-50mm Lift	G6026Y	2ea	Std Height
				G6010Y	2ea	50mm Lift
Bilstein	B46-1099	2ea		B46-1100	2ea	
				B46-0258	2ea	H/Duty
Sachs Max	316 383	2ea	0-40mm Lift	314 062	2ea	0-40mm Lift
Koni Heavy Track Gas	30-1342	2ea	Std Height	30-1343	2ea	Std Height
<b>STEERING DAMPER</b>						
Replacement Damper Tough Dog	SD14035	1ea	Heavy Duty			
<b>TORSION BAR</b>						
EFS	TB-1456A	1pr	27mm OD, 1205mm long			
<b>LEAF SPRING</b>						
Formula				FLS-018	2ea	Approx 45mm lift at 0-200kg load
				FLS-019	2ea	Approx 45mm lift at 300kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-018	1ea	FLS-018 x 2, C660 x 4, KIT136SK x 1			
	FLSKIT-019	1ea	FLS-019 x 2, C660 x 4, KIT136SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-009	2ea	Greaseable
Fixed Pin				FSP-004	2ea	Greaseable
U Bolts				C660	4ea	
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT136K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT136SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIRBAG</b>						
Ride Rite Airbag Kit				RR4575	1kt	
<b>FORMULA 4x4 KITS</b> Refer above on part quantities and specifications						
Formula Lift Kit	NAV-017			50020, 50003, FLS-018, C660, KIT136SK		





NISSAN Navara		D22		1997 - 2015		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50020	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Raw Nitro	G6897BY	2ea	0-50mm Lift (1997-1999)	G6010Y	2ea	50mm Lift
	G6023BY	2ea	0-50mm Lift (1999-on)	G6026Y	2ea	Std Height
Bilstein	B46-1099	2ea		B46-1100	2ea	
				B46-0258	2ea	H/Duty
Sachs Max	313 141	2ea	0-40mm Lift	314 062	2ea	0-40mm Lift
Koni Heavy Track Gas	30-1342	2ea	Std Height	30-1343	2ea	Std Height
<b>TORSION BAR</b>						
EFS	TB-1446A	1pr	27mm OD, 892mm long. Check length before ordering			
<b>LEAF SPRING</b>						
Formula				FLS-018	2ea	Approx 45mm lift at 0-200kg load
				FLS-019	2ea	Approx 45mm lift at 300kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-018	1ea	FLS-018 x 2, C660 x 4, KIT136SK x 1			
	FLSKIT-019	1ea	FLS-019 x 2, C660 x 4, KIT136SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-009	2ea	Greaseable
Fixed Pin				FSP-004	2ea	Greaseable
U Bolts				C660	4ea	
SuperPro For individual bushes refer to the SuperPro Catalogue						
Spring Eye & Shackle Bush Kit				KIT136K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT136SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIRBAG</b>						
Polyair Red Bag Kit				75695	1kt	Std Height
Polyair Bellows Kit				85123R	1kt	2" Lift
Ride Rite Airbag Kit				RR4575	1kt	Std Height
<b>FORMULA 4X4 KITS</b> Refer above on part quantities and specifications						
Formula Lift Kit	NAV-017		50020, 50003, FLS-018, C660, KIT136SK			
RAW Lift Kit (1999-on)	NAV-002		G6023BY, G6010Y, FLS-018, C660, KIT136SK			
Bilstein Lift Kit	NAV-003		B46-1099, B46-0258, TB-1446A, FLS-018, C660, KIT136SK			
Formula Load Kit	NAV-018		50020, 50003, TB-1446A, FLS-019, C660, KIT136SK			
RAW Load Kit (1999-on)	NAV-004		G6023BY, G6010Y, TB-1446A, FLS-019, C660, KIT136SK			



NISSAN Navara		D40		2005 - 2015		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40005	2ea	0-50mm Lift	50005	2ea	0-50mm Lift
Bilstein	BE5-D626	2ea		B46-0424D40	2ea	Std Height
				B46-0258D40	2ea	Raised
Raw Nitro	G6397	2ea	0-50mm Lift	G6027M1Y	2ea	Raised
Raw Nitro Max	NM397	2ea	0-50mm Lift	NM654M1	2ea	0-50mm Lift
Sachs Max	316 384	2ea	0-40mm Lift	316 382	2ea	0-40mm Lift
Koni Heavy Track	82-2570	2ea	Std Height	82-2572	2ea	Std Height
<b>COIL SPRING</b>						
King Springs	KDFR-70	1pr	Raised			
	KDFR-70T	1pr	Raised Comfort			
	KDFR-70HD	1pr	Raised 50-100kg			
	KDFR-70HDT	1pr	Raised Comfort 50-100kg			
	KDFR-70EHD	1pr	Raised 100-250kg			
	KDFR-70HDSP	1pr	Raised V6 Diesel			
	KDFR-70EHDSP	1pr	Raised V6 Diesel 50-100kg			
<b>LEAF SPRING</b>						
Formula				FLS-014	2ea	Approx 35mm lift at 150kg load
				FLS-015	2ea	Approx 35mm lift at 250kg load
Beware of over extending brake / ABS lines						
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-014	1ea	FLS-014 x 2, FUB-001 x 4, KIT141SK x 1			
	FLSKIT-015	1ea	FLS-015 x 2, FUB-001 x 4, KIT141SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-005	2ea	Greaseable
Fixed Pin				FSP-002	2ea	Greaseable
U Bolts				FUB-001	4ea	
<b>ROLL CONTROL</b>						
Adjustable Upper Control Arms	TRC540	1pr	+/- 2 Deg. Camber and 0 to 4 Deg. Caster			
	TRC8540	1pr	+0.5 to +2.5 degrees caster and -2.0 to +1.0 degrees camber over the OE UCA.			
Fixed Offset Upper Control Arms	TRC6540	1pr	+/- 2 Deg. Camber and 0 to 4 Deg. Caster			
Standard Lower Control Arms	TRC550	1pr	to suit Thailand build manual vehicles only			
SuperPro Easy-Lift Kit	TRC141LK	1kt	This kit will lift the vehicle approx. 35mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Rear Raising Blocks, 4 x U Bolts			
	TRC141FLK	1kt	This kit will lift the vehicle approx. 35mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers			
	TRC141RLK	1kt	This kit will lift the vehicle approx. 35mm and retains the standard suspension. Kit contains 2 x Rear Raising Blocks, 4 x U Bolts			
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Strut Fitting Kit	SPF4911K	1kt	Contains bushes & washers			
Spring Eye & Shackle Bush Kit				KIT141K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT141SK	1kt	Greaseable Shackles, Pins & Bushes

NISSAN Navara		D40 - continued		2005 - 2015	
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>AIRBAG</b>					
Polyair Red Bag Kit				78595	1kt Light Duty Kit
				85124	1kt Std Height
Polyair Bellows Kit				88124	1kt Std Height - No Drill Kit
				88124	1kt 30-40mm Lift - No Drill Kit
				85124R	1kt 2" Lift
				88124R	1kt 2" Lift - No Drill Kit
Ride Rite Airbag Kit				RR4656	1kt Std Height
<b>ReadyStrut</b>					
ReadyStrut Top Caps	RS001	2ea	Strut Cap, Spring Seat, Nuts & Washers		
Formula Struts & King Springs	NAV070-FOR, NAV070T-FOR, NAV070HD-FOR, NAV070HDSP-FOR				1pr
RAW Struts & King Springs	NAV070-RAW, NAV070T-RAW, NAV070HD-NMRAW, NAV070HDSP-NMRAW, NAV070EHD-NMRAW, NAV070EHDSP-NMRAW				1pr
Bilstein Struts & King Springs	NAV070-BIL, NAV070T-BIL, NAV070HD-BIL, NAV070HDT-BIL, NAV070HDSP-BIL, NAV070EHD-BIL, NAV070EHDSP-BIL				1pr
<b>FORMULA 4x4 KITS</b> <i>It is highly recommended to fit TRC6540, TRC8540 or TRC540 FUCA when lifting this vehicle</i> Refer above on part quantities and specifications					
Formula Lift Kit	NAV-015		40005, 50005, KDFR-70, FLS-014, FUB-001, KIT141SK		
Formula Lift Kit with ReadyStruts	NAV-015R		NAV070-FOR, 50005, FLS-014, FUB-001, KIT141SK		
RAW Lift Kit	NAV-005		G6397, G6027M1Y, KDFR-70, FLS-014, FUB-001, KIT141SK		
RAW Lift Kit with ReadyStruts	NAV-005R		NAV070-RAW, G6027M1Y, FLS-014, FUB-001, KIT141SK		
Bilstein Lift Kit	NAV-006		BES-D626, B46-0258D40, KDFR-70, FLS-014, FUB-001, KIT141SK, SPF4911K		
Bilstein Lift Kit with ReadyStruts	NAV-006R		NAV070-BIL, B46-0258D40, FLS-014, FUB-001, KIT141SK		
RAW Load Kit	NAV-008		NM397, NM654M1, KDFR-70, FLS-015, FUB-001, KIT141SK		
RAW Load Kit with ReadyStruts	NAV-008R		NAV070-NMRAW, NM654M1, KDFR-70, FLS-015, FUB-001, KIT141SK		



NISSAN Navara		D23, NP300 Dual Cab Series 1 & 2		2015 - 2017		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40005	2ea	0-50mm Lift	50018	2ea	0-50mm Lift
Bilstein	BE5-D626	2ea	0-50mm Lift	24-257244	2ea	0-50mm Lift
Raw Nitro	G6397	2ea	Raised			
Raw Nitro Max	NM397	2ea	Raised	NM301	2ea	Raised
Sachs Max	316 384	2ea	0-40mm Lift	316 376	2ea	0-40mm Lift
<b>COIL SPRING</b>						
King Springs	KDFR-72	1pr	Raised	KDRR-73	1pr	Raised
	KDFR-72T	1pr	Raised Comfort	KDRR-73H	1pr	Raised Comfort 100-250kg
	KDFR-72HD	1pr	Raised 50-100kg	KDRR-73HD	1pr	Raised 100-300kg
	KDFR-72HDT	1pr	Raised Comfort 50-100kg	KDRR-73EHD	1pr	Raised 300-500kg
<b>ROLL CONTROL</b>						
Adjustable Upper Control Arms	TRC540	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
	TRC8540	1pr	+0.5 to +2.5 degrees caster and -2.0 to +1.0 degrees camber over the OE UCA.			
Fixed Offset Upper Control Arms	TRC6540	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
Sway Bar				RC0080RZ-22	1kt	22mm Sway Bar, 3 Position Adjustable with Sway Bar Links
Adjustable Sway Bar Links	TRC1225	1kt	recommended for lifted vehicle	TRC12200	1kt	recommended for lifted vehicle
Extended Adjustable Sway Bar Links				TRC4304	2ea	suits Vehicles up to 8" Lift
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Control Arm Lower Inner Bushes are required for lifted vehicles to correct Front Camber & Caster						
Strut Fitting Kit	SPF4911K	1kt	Contains bushes & washers			
Control Arm Lower Bushes	SPF4786K	1kt	4 x Offset bushings & 4 x Standard tubes			
	SPF4786XK	1kt	4 x Offset bushings & 4 x Offset tubes, for use where max adjustment is needed			
Bracket Extension Kit	SPF5290K	1kt	Extension Brackets for H/Light Sensor, Swaybar Links and Brake Lines			
<b>AIRBAG</b>						
Polyair Red Bag Kit				12096	1kt	
				12096R	1kt	Raised
Polyair Ultimate Kit				12096ULT	1kt	60PSI Heavy Duty Kit
				12096RULT	1kt	Raised 60PSI Heavy Duty Kit
Coil Rite Airbag Kit				CR5134	1kt	Std Height
				CR5135	1kt	Raised Suits lifts with Hub Centre to Guard 570-580mm
				CR5136	1kt	Raised Suits lifts with Hub Centre to Guard 590mm or more
				CR5134HP	1kt	Std Height Heavy Duty
				CR5135HP	1kt	Raised Heavy Duty Suits lifts with Hub Centre to Guard 570-580mm
				CR5136HP	1kt	Raised Suits lifts with Hub Centre to Guard 590mm or more

NISSAN Navara						D23, NP300 Dual Cab Series 1 & 2 - continued						2015 - 2017							
Description		FRONT			Qty			Notes			REAR			Qty			Notes		
<b>ReadyStrut</b>																			
<b>ReadyStrut Top Caps</b>		RS001			2ea			Strut Cap, Spring Seat, Nuts & Washers											
<b>Formula Struts &amp; King Springs</b>		NAV072-FOR			NAV072T-FOR			NAV072HD-FOR						1pr					
<b>RAW Struts &amp; King Springs</b>		NAV072-NMRAW			NAV072T-NMRAW			NAV072HD-NMRAW						1pr					
<b>Bilstein Struts &amp; King Springs</b>		NAV072-BIL			NAV072T-BIL			NAV072HD-BIL						1pr					
<b>ADJUSTABLE PANHARD ROD</b>																			
<b>Whiteline</b>								KPR189						1ea			Heavy duty off-car adjustable		
<b>FORMULA 4X4 KITS</b>		<p style="text-align: center;"><b>It is highly recommended to fit TRC6540, TRC8540 or TRC540 FUCA when lifting this vehicle</b></p> <p style="text-align: center;">Refer above on part quantities and specifications</p>																	
<b>Formula Lift Kit</b>		NAV-016			40005, 50018, KDFR-72T, KDRR-73, SPF4786K, SPF5290K														
<b>Formula Lift Kit with ReadyStruts</b>		NAV-016R			NAV072T-FOR, 50018, KDRR-73, SPF4786K, SPF5290K														
<b>RAW Lift Kit</b>		NAV-021			NM397, NM301, KDFR-72T, KDRR-73, SPF4786K, SPF5290K														
<b>RAW Lift Kit with ReadyStruts</b>		NAV-021R			NAV072T-NMRAW, NM301, KDRR-73, SPF4786K, SPF5290K														
<b>Bilstein Lift Kit</b>		NAV-011			BE5-D626, 24-257244, KDFR-72T, KDRR-73, SPF4786K, SPF4911K, SPF5290K														
<b>Bilstein Lift Kit with ReadyStruts</b>		NAV-011R			NAV072T-BIL, 24-257244, KDRR-73, SPF4786K, SPF5290K														



NISSAN Navara		D23, NP300 Dual Cab Series 3 & 4		2018 - 2022		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40005	2ea	0-25mm Lift	50018	2ea	0-25mm Lift
Bilstein	BE5-D626	2ea	0-25mm Lift	24-257244	2ea	0-25mm Lift
Raw Nitro	G6397	2ea	0-25mm Lift			
Raw Nitro Max	NM397	2ea	0-25mm Lift	NM301	2ea	0-25mm Lift
Sachs Max	316 384	2ea	0-20mm Lift	316 376	2ea	0-20mm Lift
<b>COIL SPRING</b>						
King Springs	KDFR-72	1pr	25mm Lift	KDRR-73	1pr	25mm Lift
	KDFR-72T	1pr	25mm Lift Comfort	KDRR-73H	1pr	25mm Lift Comfort 100-250kg
	KDFR-72HD	1pr	25mm Lift 50-100kg	KDRR-73HD	1pr	25mm Lift 100-300kg
	KDFR-72HDT	1pr	25mm Lift Comfort 50-100kg	KDRR-73EHD	1pr	25mm Lift 300-500kg
<b>ROLL CONTROL</b>						
Adjustable Upper Control Arms	TRC540	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
	TRC6540	1pr	+0.5 to +2.5 degrees caster and -2.0 to +1.0 degrees camber over the OE UCA.			
Fixed Offset Upper Control Arms	TRC6540	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
Sway Bar				RC0080RZ-22	1kt	22mm Sway Bar, 3 Position Adjustable with Sway Bar Links
Adjustable Sway Bar Links	TRC1225	1kt	recommended for lifted vehicle	TRC12200	1kt	recommended for lifted vehicle
Extended Adjustable Sway Bar Links				TRC4304	2ea	suits Vehicles up to 8" Lift
SuperPro	For individual bushes refer to the SuperPro Catalogue					
	Control Arm Lower Inner Bushes are required for lifted vehicles to correct Front Camber & Caster					
Strut Fitting Kit	SPF4911K	1kt	Contains bushes & washers			
Control Arm Lower Bushes	SPF4786K	1kt	4 x Offset bushings & 4 x Standard tubes			
	SPF4786XK	1kt	4 x Offset bushings & 4 x Offset tubes, for use where max adjustment is needed			
Bracket Extension Kit	SPF5290K	1kt	Extension Brackets for HiLight Sensor, Swaybar Links and Brake Lines			
<b>AIRBAG</b>						
Polyair Red Bag Kit				12096	1kt	
				12096R	1kt	Raised
Polyair Ultimate Kit				12096ULT	1kt	60PSI Heavy Duty Kit
				12096RULT	1kt	Raised 60PSI Heavy Duty Kit
Coil Rite Airbag Kit				CR5134	1kt	Std Height
				CR5135	1kt	Raised Suits lifts with Hub Centre to Guard 570-580mm
				CR5136	1kt	Raised Suits lifts with Hub Centre to Guard 590mm or more
				CR5134HP	1kt	Std Height Heavy Duty
				CR5135HP	1kt	Raised Heavy Duty Suits lifts with Hub Centre to Guard 570-580mm
				CR5136HP	1kt	Raised Suits lifts with Hub Centre to Guard 590mm or more
ReadyStrut						
ReadyStrut Top Caps	RS001	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	NAV072HDN-FOR				1pr	
<b>ADJUSTABLE PANHARD ROD</b>						
Whiteline				KPR189	1ea	Heavy duty off-car adjustable
<b>FORMULA 4X4 KITS</b>						
	Refer above on part quantities and specifications					
Formula Lift Kit with ReadyStruts	NAV-035R		NAV072HDN-FOR, 50018, KDRR-73SP3, TRC6540, SPF4786K, SPF5290K, TRC008-6			



NISSAN Navara		D23, NP300 Single & King Cab Series 1 & 2		2015 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40005	2ea	0-50mm Lift	50027	2ea	0-50mm Lift
Raw Nitro	G6397	2ea	0-50mm Lift	G6014M1Y	2ea	0-50mm Lift
Raw Nitro Max	NM397	2ea	0-50mm Lift	NM326M1	2ea	0-50mm Lift
Bilstein	BE5-D626	2ea	0-50mm Lift	B46-1036LT	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KDFR-72	1pr	Raised			
	KDFR-72T	1pr	Raised Comfort			
	KDFR-72HD	1pr	Raised 50-100kg			
	KDFR-72HDT	1pr	Raised Comfort 50-100kg			
<b>LEAF SPRING</b>						
Formula				FLS-096	2ea	Approx 45mm lift at 0-300kg load
				FLS-093	2ea	Approx 45mm lift at const. 300kg load
				FLS-094	2ea	Approx 45mm lift at const. 500kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-096	1ea	FLS-096 x 2, FUB-002 x 4, KIT211SK x 1			
	FLSKIT-093	1ea	FLS-093 x 2, FUB-002 x 4, KIT211SK x 1			
	FLSKIT-094	1ea	FLS-094 x 2, FUB-002 x 4, KIT211SK x 1			
<b>Long travel SHOCK ABSORBERS must be fitted with the above part numbers.</b>						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				FSK-011	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-002	4ea	
<b>ROLL CONTROL</b>						
Adjustable Upper Control Arms	TRC540	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
	TRC8540	1pr	+0.5 to +2.5 degrees caster and -2.0 to +1.0 degrees camber over the OE UCA.			
Fixed Offset Upper Control Arms	TRC6540	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
Adjustable Sway Bar Links	TRC1225	1kt	recommended for lifted vehicle			
Extended Adjustable Sway Bar Links				TRC4304	2ea	suits Vehicles up to 8" Lift
SuperPro Easy-Lift Kit	TRC141FLK	1kt	This kit will lift the vehicle approx. 35mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers			
For individual bushes refer to the SuperPro Catalogue						
Control Arm Lower Inner Bushes are required for lifted vehicles to correct Front Camber & Caster						
Strut Fitting Kit	SPF4911K	1kt	Contains bushes & washers			
Control Arm Lower Bushes	SPF4786K	1kt	4 x Offset bushings & 4 x standard tubes			
	SPF4786XK	1kt	4 x offset bushings & 4 x offset tubes, for use where max adjustment is needed			
Spring Eye & Shackle Bush Kit				KIT211K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT211SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIRBAG</b>						
Polyair Bellows Kit				88134	1kt	Std Height - No Drill Kit
				88234	1kt	30-40mm Raised - No Drill Kit
				88134R	1kt	2" Lift - No Drill Kit
Ride Rite Airbag Kit				RR4685	1kt	Std Height

NISSAN Navara 4x4 NP300 Single & King Cab Series 1 & 2 - continued 2015 - on						
Description	FRONT		Qty	Notes	REAR	
					Qty	Notes
<b>ReadyStrut</b>						
<b>ReadyStrut Top Caps</b>	RS001		2ea	Strut Cap, Spring Seat, Nuts & Washers		
<b>Formula Struts &amp; King Springs</b>	NAV072-FOR	NAV072T-FOR	NAV072HD-FOR		1pr	
<b>RAW Struts &amp; King Springs</b>	NAV072-NMRAW	NAV072T-NMRAW	NAV072HD-NMRAW		1pr	
<b>Bilstein Struts &amp; King Springs</b>	NAV072-BIL	NAV072T-BIL	NAV072HD-BIL		1pr	
<b>FORMULA 4X4 KITS</b>	It is highly recommended to fit TRC6540, TRC8540 or TRC540 FUCA when lifting this vehicle					
	Refer above on part quantities and specifications					
<b>Formula Lift Kit</b>	NAV-019			40005, 50027, KDFR-72, FLS-096, FUB-002, SPF4786K, KIT211SK		
<b>Formula Lift Kit with ReadyStruts</b>	NAV-019R			NAV072-FOR, 50027, FLS-096, FUB-002, SPF4786K, KIT211SK		
<b>RAW Lift Kit</b>	NAV-013			G6397, G6014M1Y, KDFR-72T, FLS-096, FUB-002, SPF4786K, KIT211SK		
<b>RAW Lift Kit with ReadyStruts</b>	NAV-013R			NAV072T-RAW, G6014M1Y, FLS-096, FUB-002, SPF4786K, KIT211SK		
<b>Bilstein Lift Kit</b>	NAV-014			BE5-D626, B46-0258, KDFR-72T, FLS-096, FUB-002, SPF4786K, KIT211SK, SPF4911K		
<b>Bilstein Lift Kit with ReadyStruts</b>	NAV-014R			NAV072T-BIL, B46-0258, FLS-096, FUB-002, SPF4786K, KIT211SK		
<b>RAW Load Kit</b>	NAV-020			NM397, NM326M1, KDFR-72HD, FLS-093, FUB-002, SPF4786K, KIT211SK		
<b>RAW Load Kit with ReadyStruts</b>	NAV-020R			NAV070HD-NMRAW, NM326M1, FLS-093, FUB-002, SPF4786K, KIT211SK		



NISSAN Pathfinder		WD21		1986 - 1995		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea	0-50mm Lift	50003	2ea	0-50mm Lift
Raw Nitro	G6897BY	2ea	0-50mm Lift	G6010Y	2ea	
Sachs Max	316 541	2ea	0-40mm Lift	316 376	2ea	0-40mm Lift
Koni Heavy Track Gas	30-1365	2ea	Std Height	30-1372	2ea	Std Height
<b>STEERING DAMPER</b>						
Replacement Damper	14035	1ea				
<b>COIL SPRING</b>						
King Springs				KDRR-39	1pr	Raised
<b>TORSION BAR</b>						
EFS	TB-1458A	1pr	26mm OD, 1230mm long			
<b>AIRBAG</b>						
Polyair Red Bag Kit				61996	1kt	
Coil Rite Airbag Kit				CR5022	1kt	



NISSAN Pathfinder		R50 Series I		1995 - 1999		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	312 190	1ea	LHS Std Height only	230 471	2ea	Std Height only
	312 189	1ea	RHS Std Height only			
Bilstein	RE3-5046	2ea	11/95-1/99 Series 1. Fits OEM Strut only Std Height Only	BE5-2345	2ea	
<b>COIL SPRING</b>						
Kings Springs	KDFS-66	1pr	Std Height!	KDRS-67	1pr	Std Height
	KDFR-66	1pr	Raised	KDRR-67	1pr	Raised
<b>AIRBAG</b>						
Polyair Red Bag Kit				12691	1kt	
Coil Rite Airbag Kit				CR5003	1kt	



NISSAN Pathfinder		R50 Series II		1999 - 2005		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	310 685	1ea	LHS Std Height only (02/99-10/01)	310 688	2ea	Std Height only (02/99-08/05)
	310 684	1ea	RHS Std Height only (02/99-10/01)			
Bilstein	RE3-5046S2	2ea	0-50mm, Fits OEM Strut Only	BE5-2345	2ea	Std Height
				BE5-D564	2ea	Raised - re-use OEM Tubes
<b>COIL SPRING</b>						
King Springs	KDFS-66	1pr	Std Height	KDRS-67	1pr	Std Height
	KDFR-66	1pr	Raised	KDRR-67	1pr	Raised
<b>AIRBAG</b>						
Polyair Red Bag Kit				12691	1kt	
Coil Rite Airbag Kit				CR5003	1kt	



NISSAN Pathfinder		R51		2005 - 2013		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40005	2ea	0-50mm Lift			
Raw Nitro Max	NM397	2ea	0-50mm Lift			
Koni Heavy Track	82-2570	2ea	Std Height	82-2571	2ea	Std Height
Bilstein	BE5-D626	2ea	0-50mm Lift	BE5-D627	2ea	
Sachs	316 384	2ea	0-40mm Lift	313 785	2ea	0-40mm Lift
<b>COIL SPRING</b>						
King Springs	KDFR-70	1pr	Raised	KDRR-71	1pr	Raised
	KDFR-70HD	1pr	Raised 50-100kg	KDRR-71HD	1pr	Raised 100-300kg
<b>ROLL CONTROL</b>						
Adjustable Upper Control Arms	TRC540	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
	TRC8540	1pr	+0.5 to +2.5 degrees caster and -2.0 to +1.0 degrees camber over the OE UCA.			
Fixed Offset Upper Control Arms	TRC6540	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
SuperPro			For individual bushes refer to the SuperPro Catalogue			
Strut Fitting Kit	SPF4911K	1kt	Contains bushes & washers			
<b>AIRBAG</b>						
Polyair Red Bag Kit				19898	1kt	Std Height
				19998	1kt	25-40mm Lift
Coil Rite Airbag Kit				CR5046	1kt	Std Height Only
				CR5077	1kt	Lift
It is highly recommended to fit TRC6540, TRC8540 or TRC540 FUCA when lifting this vehicle						
Refer above on part quantities and specifications						
Bilstein Lift Kit	PATH-001		BE5-D626, BE5-D627, KDFR-70, KDRR-71, SPF4911K			



NISSAN Patrol / Safari

G60

1974 - 1980



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Raw Nitro</i>	G6028Y	2ea	Std Height	G6028Y	2ea	Std Height
	G6005Y	2ea	Raised	G6005Y	2ea	Raised
<b>STEERING DAMPER</b>						
<i>Tough Dog 35mm Foam Cell</i>	EXT5005	1ea				
<b>SHACKLE / U BOLT</b>						
<i>Swing Shackle</i>	GR355K	2ea	Includes steel bush	GR355K	2ea	Includes steel bush
<i>Fixed Pins</i>	GR470	2ea		GR470	2ea	

**NISSAN Patrol / Safari**

**Model: MQ (Round Headlights)**

**1980 - 1983**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6028Y	2ea	Std Height	G6164Y	2ea	0-50mm Lift
	G6005Y	2ea	Raised			
Sachs Max	316 391	2ea	0-40mm Lift	316 392	2ea	0-40mm Lift
Koni Heavy Track	80-2577	2ea	Std Height	80-2539	2ea	Std Height
<b>STEERING DAMPER</b>						
Tough Dog 35mm Foam Cell	EXT5005	1ea				
<b>LEAF SPRING</b>						
Formula	FLS-074	2ea	LWB. Approx 50mm lift up to 55kg	FLS-116	1ea	SWB. RHS. Approx 50mm lift at 100kg
	FLS-074	2ea	SWB. Approx 50mm lift at 55-100kg	FLS-117	1ea	SWB. LHS. Approx 50mm lift at 100kg
	FLS-073	2ea	SWB. Approx 50mm lift up to 50kg	FLS-072	1ea	LWB. RHS. Approx 50mm lift at 200kg
				FLS-071	1ea	LWB. LHS. Approx 50mm lift at 200kg
				FLS-072	1ea	SWB. RHS. Approx 50mm lift at 250kg
			FLS-071	1ea	SWB. LHS. Approx 50mm lift at 250kg	
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-071	1ea	FLS-074 x 2, FLS-072 x 1, FLS-071 x 1, C452 x 2, C451 x 2, C453 x 4, GR664 x 2, GR355K x 2, GR470 x 4, KIT075K x 1			
	FLSKIT-072	1ea	FLS-073 x 2, FLS-072 x 1, FLS-071 x 1, C452 x 2, C451 x 2, C453 x 4, GR664 x 2, GR355K x 2, GR470 x 4, KIT075K x 1			
	FLSKIT-073	1ea	FLS-073 x 2, FLS-116 x 1, FLS-117 x 1, C452 x 2, C451 x 2, C453 x 4, GR664 x 2, GR355K x 2, GR470 x 4, KIT075K x 1			
	FLSKIT-074	1ea	FLS-074 x 2, FLS-116 x 1, FLS-117 x 1, C452 x 2, C451 x 2, C453 x 4, GR664 x 2, GR355K x 2, GR470 x 4, KIT075K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle	GR355K	2ea	Includes steel bush	GR664	2ea	
Fixed Pin	GR470	2ea		GR470	2ea	
U Bolts	C451	2ea	RHS	C453	4ea	
U Bolts	C452	2ea	LHS			
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit	KIT075K	1kt	Fits Front & Rear excluding Steel Bush Location			
<b>AIRBAG</b>						
Ride Rite Airbag Kit				RR4581	1kt	



NISSAN Patrol / Safari		MK (Square Headlights)		1983 - 1988		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6028Y	1pr	Std Height	G6164Y	1pr	up to 50mm lift
	G6005Y	1pr	Raised			
Sachs Max	316 391	2ea	0-40mm Lift	316 392	2ea	0-40mm Lift
Koni Heavy Track	80-2577	2ea	Std Height	80-2539	2ea	Std Height
<b>STEERING DAMPER</b>						
Tough Dog 35mm Foam Cell	EXT5005	1ea				
<b>LEAF SPRING</b>						
Formula	FLS-075	2ea	LWB. Approx 50mm lift up to 55kg	FLS-116	1ea	SWB. RHS. Approx 50mm lift at 100kg
	FLS-075	2ea	SWB. Approx 50mm lift at 60-100kg	FLS-117	1ea	SWB. LHS. Approx 50mm lift at 100kg
	FLS-118	2ea	SWB. Approx 50mm lift at 50kg	FLS-072	1ea	LWB. RHS. Approx 50mm lift at 200kg
				FLS-071	1ea	LWB. LHS. Approx 50mm lift at 200kg
				FLS-072	1ea	SWB. RHS. Approx 50mm lift at 250kg
			FLS-071	1ea	SWB. LHS. Approx 50mm lift at 250kg	
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-075 (LWB)	1ea	FLS-075 x 2, FLS-072 x 1, FLS-071 x 1, C452 x 2, C451 x 2, C453 x 4, GR664 x 2, GR665 x 2, GR470 x 4, KIT076K x 1			
	FLSKIT-116 (SWB)	1ea	FLS-118 x 2, FLS-116 x 1, FLS-117 x 1, C452 x 2, C451 x 2, C453 x 4, GR664 x 2, GR665 x 2, GR470 x 4, KIT076K x 1			
	FLSKIT-117 (SWB)	1ea	FLS-075 x 2, FLS-116 x 1, FLS-117 x 1, C452 x 2, C451 x 2, C453 x 4, GR664 x 2, GR665 x 2, GR470 x 4, KIT076K x 1			
	FLSKIT-118 (SWB)	1ea	FLS-118 x 2, FLS-072 x 1, FLS-071 x 1, C452 x 2, C451 x 2, C453 x 4, GR664 x 2, GR665 x 2, GR470 x 4, KIT076K x 1			
	FLSKIT-171 (SWB)	1ea	FLS-075 x 2, FLS-072 x 1, FLS-071 x 1, C452 x 2, C451 x 2, C453 x 4, GR664 x 2, GR665 x 2, GR470 x 4, KIT076K x 1			
<b>SHACKLE / U BOLT</b>						
Swing Shackle	GR665	2ea	Includes Upper Steel Bush	GR664	2ea	
Fixed Pin	GR470	2ea		GR470	2ea	
U Bolts	C452	2ea	RHS	C453	4ea	
U Bolts	C451	2ea	LHS			
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit	KIT076K	1kit	Fits Front & Rear Excluding Steel Bush Location			
<b>AIRBAG</b>						
Ride Rite Airbag Kit				RR4581	1kt	



NISSAN Patrol /Safari		GQ (Y60) Short Wheel Base		1988 - 1997		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula Big Bore</i>	60004	2ea	0-50mm Lift	60005	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6005Y	2ea	Std Height	G6006Y	2ea	0-50mm Lift
	G6003Y	2ea	50mm Lift			
<i>Raw Nitro Max</i>	NM294	2ea	0-50mm Lift	NM295	2ea	0-50mm Lift
	NM272M1	2ea	100mm Lift	NM503	2ea	100mm Lift
<i>Bilstein</i>	B46-1266C	2ea	0-50mm Lift Comfort	B46-1267	2ea	Std Height
	B46-1266	2ea	0-50mm Lift HiDuty (Use with Bar & Winch)	B46-1267LT	2ea	50mm Lift
	BE5-H422	2ea	50mm Lift			
<i>Koni Heavy Track Raid</i>	90-5370	2ea	0-50mm Lift	90-5371	2ea	0-50mm Lift
<i>Koni Heavy Track</i>	88-1686	2ea	0-50mm Lift	88-1687	2ea	0-50mm Lift
	82-2347SP1	2ea	Std Height	82-2348SP1	2ea	Std Height
	82-2347	2ea	0-50mm Lift	82-2348	2ea	0-50mm Lift
<b>STEERING DAMPER</b>						
<i>Tough Dog 35mm Foam Cell</i>	EXT 5005	1ea	1988-1989 - Eye-Eye			
<i>Formula Big Bore</i>	30004	1ea	1989-1997 - Pin-Pin			
MUST Check damper mounts.						
<b>COIL SPRING</b>						
<i>King Springs</i>	KDFS-40	1pr	Std Height	KDRS-41	1pr	Std Height
	KDFR-40	1pr	Raised	KDRR-41	1pr	Raised
	KDPR-40	1pr	Raised Comfort	KDPR-43	1pr	Raised Comfort
For individual bushes refer to the SuperPro Catalogue						
<i>Coil Spring Spacer</i>	SPF2364-30K	2ea	30mm Lift	SPF1736-30K	2ea	30mm Lift
	SPF1734K	2ea	15mm Lift	SPF1736-15K	2ea	15mm Lift
	SPF4998-10K	2ea	10mm Lift			
	SPF1734-5K	2ea	5mm Lift			
<i>Caster Correction</i>	SPF1721K	1kt	Approx. 2.0° Caster Change			
	SPF1721XK	1kt	Approx. 3.5° Caster Change			
<i>Trailing Arm &amp; P-Hard Rod Kit</i>	KIT059K	1kt	2/88 - 8/89 Complete Bush Kit Front & Rear Std Height			
	KIT060K	1kt	9/89 - 02 Complete Bush Kit Front & Rear Std Height			
<b>ROLL CONTROL</b>						
<i>Lift Correction Arm Kit</i>	TRC1015	1kt	for Lifted Vehicles with Caster Correction			
<i>Extended Adjustable Sway Bar Links</i>	TRC4307	2ea	suits Vehicles up to 8" Lift			
<i>Chassis Brace</i>				BOSS4PCB	1kt	

NISSAN Patrol /Safari		GQ (Y60) Short Wheel Base - continued		1988 - 1997	
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>AIRBAG</b>					
Polyair Red Bag Kit				95997	1kt Std Height
Coil Rite Airbag Kit	CR5035	1kt		CR5040	1kt Std Height
	CR5034	1kt	50mm (2") Raise	CR5042	1kt 50mm (2") Raised
On-Air Airbag Kit	OA4513	1kt	Full Air 25-50mm Lift	OA4512	1kt Full Air 25-50mm (1-2") Raised
<b>ADJUSTABLE PANHARD ROD</b>					
Whiteline	KPR004	1ea	Heavy duty off-car adjustable	KPR005	1ea Heavy duty off-car adjustable
<b>FORMULA 4X4 KITS</b>					
Refer above on part quantities and specifications					
Formula Big Bore Lift Kit	PAT-018			60004, 60005, KDFR-40, KDRR-41, SPF1721K	
RAW Lift Kit	PAT-002			G6003Y, G6006Y, KDFR-40, KDRR-41, SPF1721K	
Bilstein Lift Kit (09/89-on)	PAT-003			B46-1266C, B46-1267LT, KDFR-40, KDRR-41, SPF1721K	

**NISSAN Patrol Wagon**

**GQ (Y60) Long Wheel Base**

**1988 - 1997**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula Big Bore</i>	60004	2ea	0-50mm Lift	60005	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6006Y	2ea	Std Height	G6006Y	2ea	0-50mm Lift
	G6003Y	2ea	50mm Lift			
<i>Raw Nitro Max</i>	NM294	2ea	0-50mm Lift	NM295	2ea	0-50mm Lift
	NM272M1	2ea	100mm Lift	NM503	2ea	100mm Lift
<i>Bilstein</i>	B46-1266C	2ea	0-50mm Lift Comfort	B46-1267	2ea	Std Height
	B46-1266	2ea	0-50mm Lift HiDuty (Use with Bar & Winch)	B46-1267LT	2ea	50mm Lift
	BE5-H422	2ea	50mm Lift			
<i>Koni Heavy Track Raid</i>	90-5370	2ea	0-50mm Lift	90-5371	2ea	0-50mm Lift
<i>Koni Heavy Track</i>	88-1686	2ea	0-50mm Lift	88-1687	2ea	0-50mm Lift
	82-2347SP1	2ea	Std Height	82-2348SP1	2ea	Std Height
	82-2347	2ea	Raised up to 50mm	82-2348	2ea	Raised up to 50mm
<b>STEERING DAMPER</b>						
<i>Tough Dog 35mm Foam Cell</i>	EXT 5005	1ea	1988-1989 - Eye-Eye			
<i>Formula Big Bore</i>	30004	1ea	1989-1997 - Pin-Pin			
<b>MUST Check damper mounts.</b>						
<b>COIL SPRING</b>						
<i>King Springs</i>	KDFS-40	1pr	3 Ltr Std Height	KDRS-43	1pr	3 Ltr Std Height
	KDFR-40	1pr	3 Ltr Raised	KDRR-43	1pr	3 Ltr Raised
	KDPR-40	1pr	3 Ltr Raised Comfort	KDPR-43	1pr	3 Ltr Raised Comfort
	KDFS-42	1pr	4.2 Ltr Std Height	KDRS-43	1pr	4.2 Ltr Std Height
	KDFR-42	1pr	4.2 Ltr Raised	KDRR-43	1pr	4.2 Ltr Raised
	KDPR-42	1pr	4.2 Ltr Raised Comfort	KDPR-43	1pr	4.2 Ltr Raised Comfort
	KDFR-42HHD	1pr	4.2 Ltr Raised 50-100kg	KDPR-43HD	1pr	4.2 Ltr Raised Comfort 100-250kg
	KDFR-42HHD	1pr	4.2 Ltr Raised 100-250kg	KDPR-59SP	1pr	4.2 Ltr Raised Comfort 300-500kg
<i>SPF1721K recommended when fitting raised height coil springs to correct caster. Patrol GQ fitted with LPG tank. Special coils available.</i>						
<i>For individual bushes refer to the SuperPro Catalogue</i>						
<b>SuperPro</b>						
<i>Coil Spring Spacer</i>	SPF2364-30K	2ea	30mm Lift	SPF1736-30K	2ea	30mm Lift
	SPF1734K	2ea	15mm Lift	SPF1736-15K	2ea	15mm Lift
	SPF4998-10K	2ea	10mm Lift			
	SPF1734-5K	2ea	5mm Lift			
<i>Caster Correction</i>	SPF1721K	1kt	Approx. 2.0° adjust			
	SPF1721XK	1kt	Approx. 3.5° adjust			
<i>Trailing Arm &amp; P*Hard Rod Kit</i>	KIT059K	1kt	2/88 - 8/89 Complete Bush Kit Front & Rear. Std Height only			
	KIT060K	1kt	9/89 - 02 Complete Bush Kit Front & Rear. Std Height only			
<b>ROLL CONTROL</b>						
<i>Lift Correction Arm Kit</i>	TRC1015	1kt	for Lifted Vehicles with Caster Correction			
<i>Extended Adjustable Sway Bar Links</i>	TRC4307	2ea	suits Vehicles up to 8" Lift			
<i>Chassis Brace</i>				BOSS4PCB	1kt	



NISSAN Patrol Wagon		GQ (Y60) Long Wheel Base - continued		1988 - 1997	
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>AIRBAG</b>					
Polyair Red Bag Kit				95097	1kt Std Height
				95096	1kt 2" Lift
Polyair Ultimate Kit				95097ULT	1kt Std Height 60PSI Heavy Duty
				95096ULT	1kt 2" Lift 60PSI Heavy Duty
Coil Rite Airbag Kit	CR5035	1kt		CR5040	1kt Std Height
	CR5034	1kt	50mm (2") Raise	CR5042	1kt 50mm (2") Raised
On-Air Airbag Kit	QA4513	1kt	Full Air 25-50mm (1-2") Raised	QA4512	1kt Full Air 25-50mm (1-2") Raised
<b>ADJUSTABLE PANHARD ROD</b>					
Whiteline	KPR004	1ea	Heavy duty off-car adjustable	KPR005	1ea Heavy duty off-car adjustable
<b>FORMULA 4X4 KITS</b>					
Refer above on part quantities and specifications					
Formula Big Bore Lift Kit (4.2L)	PAT-019			60004, 60005, KDFR-42, KDRR-43, SPF1721K	
RAW Lift Kit (4.2L)	PAT-004			G6003Y, G6006Y, KDFR-42, KDRR-43, SPF1721K	
Bilstein Lift Kit (09/89-on 4.2L)	PAT-005			B46-1266C, B46-1267LT, 30004, KDFR-42, KDRR-43, SPF1721K	
RAW Load Kit	PAT-006A			G6003Y, G6006Y, KDFR-42, KDPR-43HD, SPF1721K	
RAW Load Kit (Steel Bar & Winch)	PAT-006B			NM294, NM295, KDFR-42HD, KDPR-43HD, SPF1721K	

NISSAN Patrol Cab Chassis		GQ (Y60) Leaf Spring		1988 -1997		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6007Y	2ea		G6008Y	2ea	
<b>STEERING DAMPER</b>						
Tough Dog 35mm Foam Cell	EXT5005	1ea	1988-1989 - Eye-Eye			
Formula Big Bore	30004	1ea	1989-1997 - Pin-Pin			
<b>MUST Check damper mounts.</b>						
<b>LEAF SPRING</b>						
Formula	FLS-079	2ea	Approx 50mm lift	FLS-078	1ea	RHS. Approx 50mm lift at 300kg load
				FLS-077	1ea	LHS. Approx 50mm lift at 300kg load
				FLS-076	2ea	Approx 50mm lift at 500kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-077	1ea	FLS-079 x 2, FLS-078 x 1, FLS-077 x 1, C436 x 4, C453 x 4, GR666 x 4, GR667 x 4, KIT067K x 1			
	FLSKIT-076	1ea	FLS-079 x 2, FLS-076 x 2, C436 x 4, C453 x 4, GR666 x 4, GR667 x 4, KIT067K x 1			
<b>Long travel SHOCK ABSORBERS must be fitted with the above part numbers.</b>						
<b>SHACKLE / U BOLT</b>						
Swing Shackle	GR666	2ea		GR666	2ea	
Fixed Pin	GR667	2ea		GR667	2ea	
U Bolts	C436	4ea		C453	4ea	
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit	KIT067K	1kt	Kit to suit Front and Rear Springs			
<b>AIRBAG</b>						
Polyair Red Bag Kit				72806	1kt	Std Height
Polyair Bellows Kit				85321	1kt	2" Lift
Ride Rite Air Bag Kit				RR4537	1kt	
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
RAW Lift Kit	PAT-001	G6007Y, G6008Y, FLS-079, FLS-078, FLS-077, GR666, GR667, GR667, C436, C453, KIT067K				
RAW Load Kit	PAT-016	G6007Y, G6008Y, FLS-079, FLS-076, GR666, GR667, C436, C453, KIT067K				



NISSAN Patrol Cab Chassis		GQ (Y60) Coil Spring		1988 - 1997		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula Big Bore</i>	60004	2ea	0-50mm Lift	60005	2ea	0-50mm Lift
	G6006Y	2ea	Std Height	G6006Y	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6003Y	2ea	50mm Lift			
<i>Raw Nitro Max</i>	NM294	2ea		NM295	2ea	
	B46-1266C	2ea	0-50mm Lift Comfort	B46-1267	2ea	0-50mm Lift
<i>Bilstein</i>	B46-1266	2ea	0-50mm Lift H/Duty (Use with Bar & Winch)	B46-1267LT	2ea	Extra Long Travel
	BE5-H422	2ea	50mm Lift			
<i>Koni Heavy Track Raid</i>	90-5370	2ea	0-50mm Lift	90-5371	2ea	0-50mm Lift
	88-1686	2ea	0-50mm Lift	88-1687	2ea	0-50mm Lift
<i>Koni Heavy Track</i>	82-2347SP1	2ea	Std Height	82-2348SP1	2ea	Std Height
	82-2347	2ea	Lift up to 50mm	82-2348	2ea	Lift up to 50mm
<b>STEERING DAMPER</b>						
<i>Tough Dog 35mm Foam Cell</i>	EXT5005	1ea	1988-1989 - Eye-Eye			
<i>Formula Big Bore</i>	30004	1ea	1989-1997 - Pin-Pin			
<b>MUST Check damper mounts.</b>						
<b>COIL SPRING</b>						
	KDFS-42	1pr	Std Height	KDPR-58	1pr	Std Height P/Rate
	KDFR-42	1pr	Raised	KDPR-43HD	1pr	Raised P/Rate
<i>King Springs</i>	KDFR-42HD	1pr	Raised 50-100kg	KDPR-58LP	1pr	Raised P/Rate 100-250kg
	KDFR-42HHD	1pr	Raised 100-250kg	KDPR-59SP	1pr	Raised P/Rate 300-500kg
				KDRR-43EHD	1pr	Raised 500kg +
<i>SPF1721K recommended when fitting raised height coil springs to correct caster. Patrol GQ fitted with LPG tank.</i>						
<i>Special coils available. Location of tank required.</i>						
<b>SuperPro</b>						
For individual bushes refer to the SuperPro Catalogue						
	SPF2364-30K	2ea	30mm Lift	SPF1736-30K	2ea	30mm Lift
<i>Coil Spring Spacer</i>	SPF1734K	2ea	15mm Lift	SPF1736-15K	2ea	15mm Lift
	SPF4998-10K	2ea	10mm Lift			
	SPF1734-5K	2ea	5mm Lift			
<i>Caster Correction</i>	SPF1721K	1kt	Approx. 2.0° adjust			
	SPF1721XK	1kt	Approx. 3.5° adjust			
<i>Trailing Arm &amp; P/Hard Rod Kit</i>	KIT059K	1kt	2/88 - 8/89 Complete Bush Kit Front & Rear. Std Height only			
	KIT060K	1kt	9/89 - 02 Complete Bush Kit Front & Rear. Std Height only			
<b>ROLL CONTROL</b>						
<i>Lift Correction Arm Kit</i>	TRC1015	1kt	for Lifted Vehicles with Caster Correction			
<i>Extended Adjustable Sway Bar Links</i>	TRC4307	2ea	suits Vehicles up to 8" Lift			
<i>Chassis Brace</i>				BOSS4PCB	1kt	



NISSAN Patrol Cab Chassis		GQ (Y60) Coil Spring - continued		1988 - 1997		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIRBAG</b>						
Polyair Red Bag Kit				95097	1kt	Std Height
				95096	1kt	2" Lift
Polyair Ultimate Kit				95097ULT	1kt	Std Height 60PSI Heavy Duty
				95096ULT	1kt	2" Lift 60PSI Heavy Duty
Coil Rite Airbag Kit	CR5035	1kt		CR5040	1kt	Std Height (Light Loads)
				CR5040HP	1kt	Std Height (Heavy Loads)
				CR5042	1kt	2" Raised (Light Loads)
	CR5034	1kt	50mm (2") Raise	CR5042HP	1kt	2" Raised (Heavy Loads)
On-Air Airbag Kit	OA4513	1kt	Full Air 25-50mm (1-2") Raised	OA4512	1kt	Full Air 25-50mm (1-2") Raised
<b>ADJUSTABLE PANHARD ROD</b>						
Whiteline	KPR004	1ea	Heavy duty off-car adjustable	KPR005	1ea	Heavy duty off-car adjustable
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Big Bore Lift Kit	PAT-020			60004, 60005, KDFR-42, KDPR-43HD, SPF1721K		
RAW Lift Kit	PAT-010			G6003Y, G6006Y, KDFR-42, KDPR-43HD, SPF1721K		
RAW Load Kit	PAT-011			G6003Y, G6006Y, KDFR-42, KDPR-59SP, SPF1721K		
RAW Load Kit (Steel Bar & Winch)	PAT-012			NM294, NM295, KDFR-42HD, KDPR-59SP, SPF1721K		

**NISSAN Patrol Wagon**

**GU (Y61) Long Wheel Base**

**1997-2016**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula Big Bore</i>	60004	2ea	0-50mm Lift	60005	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6005Y	2ea	Std Height	G6006Y	2ea	0-50mm Lift
	G6003Y	2ea	50mm Lift			
<i>Raw Nitro Max</i>	NM294	2ea	0-50mm Lift	NM295	2ea	0-50mm Lift
	NM272M1	2ea	100mm Lift	NM503	2ea	100mm Lift
<i>Bilstein</i>	B46-1266C	2ea	0-50mm Lift Comfort	B46-1267	2ea	0-50mm Lift
	B46-1266	2ea	0-50mm Lift HiDuty (Use with Bar & Winch)	B46-1267LT	2ea	Extra Long Travel
	BE5-H422	2ea	50mm Lift			
<i>Koni Heavy Track Raid</i>	90-5370	2ea	0-50mm Lift	90-5371	2ea	0-50mm Lift
<i>Koni Heavy Track</i>	88-1686	2ea	0-50mm Lift	88-1687	2ea	0-50mm Lift
	82-2347SP1	2ea	Std Height	82-2348SP1	2ea	Std Height
	82-2347	2ea	Lift up to 50mm	82-2348	2ea	Lift up to 50mm
ABS vehicles only: Brake hose may need repositioning with long travel shocks						
<b>STEERING DAMPER</b>						
<i>Formula Big Bore</i>	30008	1ea	up to 2000 - Pin-Pin			
	30002	1ea	2000-on - Eye-Eye			
MUST Check damper mounts.						
<b>COIL SPRING</b>						
<i>King Springs</i>	KDFS-42	1pr	Std Height 50-100kg	KDRS-45	1pr	Std Height
	KDFR-42	1pr	30mm Lift	KDRR-45	1pr	Raised
	KDPR-42	1pr	30mm Lift Comfort	KDPR-43LP	1pr	Raised Comfort
	KDFR-42HD	1pr	50mm Lift 50-100kg	KDPR-58LP	1pr	Raised Comfort 100-250kg
	KDFR-42HHD	1pr	50mm Lift 100-250kg	KDPR-59	1pr	Raised Comfort 300-500kg
<b>ROLL CONTROL</b>						
<i>Sway Bar</i>	RC0023F-24	1kt	24mm Heavy Duty Sway Bar Suits 05/02 - 06	RC0023R-24	1kt	24mm Heavy Duty Sway Bar Suits 05/02 - 06
	RC0023F-22	1kt	22mm Heavy Duty Sway Bar Suits 05/02 - 06	RC0023R-18	1kt	18mm Heavy Duty Sway Bar Suits 05/02 - 06
	RC0023F-20	1kt	20mm Heavy Duty Sway Bar Suits 05/02 - 06			
<i>Extended Adjustable Sway Bar Links</i>	TRC4307	2ea	suits Vehicles up to 8" Lift	TRC4304	1ea	LHS suits Vehicles up to 8" Lift
				TRC4307	1ea	RHS suits Vehicles up to 8" Lift
<i>Chassis Brace</i>				BOSS4PCB	1kt	
SPF1721K recommended when fitting raised height coil springs to correct caster.						
<b>SuperPro</b>						
For individual bushes refer to the SuperPro Catalogue						
<i>Lift Correction Arm Kit</i>	TRC1015	1kt	for Lifted Vehicles with Caster Correction			
<i>Coil Spring Spacer</i>	SPF2364-30K	2ea	30mm Lift	SPF1736-30K	2ea	30mm Lift
	SPF1734K	2ea	15mm Lift	SPF1736-15K	2ea	15mm Lift
	SPF4998-10K	2ea	10mm Lift			
	SPF1734-5K	2ea	5mm Lift			
<i>Caster Correction</i>	SPF1721K	1kt	Approx. 2.0° adjust			
	SPF1721XK	1kt	Approx. 3.5° adjust			
<i>Trailing Arm &amp; PHard Rod Kit</i>	KIT060K	1kt	Complete Bush Kit Front & Rear. PHard Rod bushed both ends. Std Height only			
	KIT107K	1kt	Complete Bush Kit Front & Rear. Suit spherical end PHard Rod. Std Height only			

NISSAN Patrol Wagon		GU (Y61) Long Wheel Base - continued		1997-2016	
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>AIRBAG</b>					
Polyair Red Bag Kit				95097	1kt Std Height
				95096	1kt 2" Lift
Polyair Ultimate Kit				95097ULT	1kt Std Height 60PSI Heavy Duty
				95096ULT	1kt 2" Lift 60PSI Heavy Duty
Coil Rite Airbag Kit	CR5035	1kt		CR5040	1kt Std Height
	CR5034	1kt	50mm (2") Raise	CR5042	1kt 50mm (2") Raised
On-Air Airbag Kit	OA4513	1kt	Full Air 25-50mm (1-2") Raised	OA4512	1kt Full Air 25-50mm (1-2") Raised
<b>ADJUSTABLE PANHARD ROD</b>					
Whiteline	KPR004	1ea	Bush Both Ends <4/2000	KPR005	1ea Bush Both Ends <4/2000
	KPR028X	1ea	Spherical End >2000	KPR029X	1ea Spherical End >2000
<b>Must check bush type for correct panhard rod</b>					
<b>FORMULA 4X4 KITS</b>					
Refer above on part quantities and specifications					
Formula Big Bore Lift Kit	PAT-021			60004, 60005, KDFR-42, KDRR-45, SPF1721K	
RAW Lift Kit	PAT-007			G6003Y, G6006Y, KDFR-42, KDRR-45, SPF1721K	
Bilstein Lift Kit (up to 01/00)	PAT-008A			B46-1266C, B46-1267LT, 30008, KDFR-42, KDRR-45, SPF1721K	
Bilstein Lift Kit (02/00-on)	PAT-008B			B46-1266C, B46-1267LT, 30002, KDFR-42, KDRR-45, SPF1721K	
RAW Load Kit	PAT-009A			G6003Y, G6006Y, KDFR-42, KDPR-58LP, SPF1721K	
RAW Load Kit (Steel Bar & Winch)	PAT-009B			NM294, NM295, KDFR-42HD, KDPR-58LP, SPF1721K	
Formula F4R Kit	PAT-400F4R			91021, 92021, KDRR-45, SP1721K	
	Formula F4R Adjustable Remote Reservoir Kit is set to: Front: 50mm or 2" Lift with Bull Bar & Winch (adjustment up to 75mm or 3" or to be lowered if required); Rear: 50mm or 2"				



NISSAN Patrol Cab Chassis		GU (Y61) Coil Front & Rear		1997-2016		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula Big Bore	60004	2ea	0-50mm Lift	60005	2ea	0-50mm Lift
Raw Nitro	G6005Y	2ea		G6006Y	2ea	0-50mm (99-06)
	G6003Y	2ea	50mm Lift			
Raw Nitro Max	NM294	2ea		NM295	2ea	
	NM272M1	2ea	100mm Lift	NM503	2ea	100mm Lift
Bilstein	B46-1266C	2ea	0-50mm Lift Comfort	B46-1267	2ea	0-50mm Lift
	B46-1266	2ea	0-50mm Lift H/Duty (Use with Bar & Winch)	B46-1267LT	2ea	Extra Long Travel
	BE5-H422	2ea	50mm Lift			
Koni Heavy Track Raid	90-5370	2ea	0-50mm Lift	90-5371	2ea	0-50mm Lift
Koni Heavy Track	88-1686	2ea	0-50mm Lift	88-1687	2ea	0-50mm Lift
	82-2347SP1	2ea	Std Height	82-2348SP1	2ea	Std Height
	82-2347	2ea	Lift up to 50mm	82-2348	2ea	Lift up to 50mm
<b>STEERING DAMPER</b>						
Formula Big Bore	30008	1ea	up to 2000 - Pin-Pin			
	30002	1ea	2000-on - Eye-Eye			
<b>MUST Check damper mounts.</b>						
<b>COIL SPRING</b>						
King Springs	KDFS-42	1pr	Std Height	KDPR-58	1pr	Standard P/Rate
	KDFR-42	1pr	Raised	KDPR-43HD	1pr	Raised
	KDPR-42	1pr	Raised Comfort	KDPR-58LP	1pr	Raised Comfort 100-250kg
	KDFR-42HD	1pr	Raised 50-100kg	KDPR-59	1pr	Raised Comfort 300-500kg
	KDFR-42HHD	1pr	Raised 100-250kg	KDRR-43SHD	1pr	Raised P/Rate 750kg+
<i>SPF1721K recommended when fitting raised height coil springs to correct caster.</i>						
<b>ROLL CONTROL</b>						
Sway Bar	RC0023F-24	1kt	24mm Heavy Duty Sway Bar Suits 05/02-06	RC0023R-24	1kt	24mm Heavy Duty Sway Bar-Suits 05/02-06
	RC0023F-22	1kt	22mm Heavy Duty Sway Bar Suits 05/02-06	RC0023R-18	1kt	18mm Heavy Duty Sway Bar-Suits 05/02-06
	RC0023F-20	1kt	20mm Heavy Duty Sway Bar Suits 05/02-06			
Extended Adjustable Sway Bar Links	TRC4307	2ea	suits Vehicles up to 8" Lift			
Chassis Brace				BOSS4PCB	1kt	
<i>For individual bushes refer to the SuperPro Catalogue</i>						
<b>SuperPro</b>						
Lift Correction Arm Kit	TRC1015	1kt	for Lifted Vehicles with Caster Correction			
Coil Spring Spacer	SPF2364-30K	2ea	30mm Lift	SPF1736-30K	2ea	30mm Lift
	SPF1734K	2ea	15mm Lift	SPF1736-15K	2ea	15mm Lift
	SPF4998-10K	2ea	10mm Lift			
	SPF1734-5K	2ea	5mm Lift			
Caster Correction	SPF1721K	1kt	Approx. 2.0° adjust			
	SPF1721XK	1kt	Approx. 3.5° adjust			
Trailing Arm & P-Hard Rod Kit	KIT060K	1kt	Complete Bush Kit Front & Rear. P-Hard Rod bushed both ends. Std Height only			
	KIT107K	1kt	Complete Bush Kit Front & Rear. Suit spherical end P-Hard Rod. Std Height only			

NISSAN Patrol Cab Chassis		GU (Y61) Coil Front & Rear - continued		1997-2016		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIRBAG</b>						
Polyair Red Bag Kit				95097	1kt	Std Height
				95096	1kt	2" Lift
Polyair Ultimate Kit				95097ULT	1kt	Std Height 60PSI Heavy Duty
				95096ULT	1kt	2" Lift 60PSI Heavy Duty
Coil Rite Airbag Kit	CR5035	1kt		CR5040	1kt	Std Height (Light Loads)
				CR5040HP	1kt	Std Height (Heavy Loads)
				CR5042	1kt	2" Raised (Light Loads)
				CR5042HP	1kt	2" Raised (Heavy Loads)
On-Air Airbag Kit	OA4513	1kt	Full Air 25-50mm (1-2") Raised	OA4523	1kt	Full Air 25-50mm (1-2") Raised
<b>ADJUSTABLE PANHARD ROD</b>						
Whiteline	KPR004	1ea	Bush Both Ends <4/2000	KPR005	1ea	Bush Both Ends <4/2000
	KPR028X	1ea	Spherical End >2000	KPR029X	1ea	Spherical End >2000
<b>Must check bush type for correct panhard rod</b>						
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Big Bore Lift Kit	PAT-022			60004, 60005, KDFR-42, KDPR-58, SPF1721K		
RAW Lift Kit	PAT-013			G6003Y, G6006Y, KDFR-42, KDPR-58, SPF1721K		
Bilstein Lift Kit (up to 01/00)	PAT-014A			B46-1266C, B46-1267LT, 30008, KDFR-42, KDPR-58, SPF1721K		
Bilstein Lift Kit (02/00-on)	PAT-014B			B46-1266C, B46-1267LT, 30002, KDFR-42, KDPR-58, SPF1721K		
RAW Load Kit	PAT-015A			G6003Y, G6006Y, KDFR-42, KDPR-58LP, SPF1721K		
RAW Load Kit (Steel Bar & Winch)	PAT-015B			NM294, NM295, KDFR-42HHD, KDPR-58LP, SPF1721K		
Formula F4R Kit	PAT-401F4R			91021, 92021, KDPR-58LP, SP1721K		
	Formula F4R Adjustable Remote Reservoir Kit is set to: Front: 50mm or 2" Lift with Bull Bar & Winch (adjustment up to 75mm or 3" or to be lowered if required); Rear: 50mm or 2"					





NISSAN Patrol Cab Chassis		GU (Y61) Coil Front, Leaf Rear		1997-2016		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula Big Bore	60004	2ea	0-50mm Lift			
Raw Nitro	G6003Y	2ea	0-50mm Lift	G6008Y	2ea	0-50mm Lift
	G6005Y	2ea	Std Height			
Raw Nitro Max	NM294	2ea				
<b>STEERING DAMPER</b>						
Formula Big Bore	30008	1ea	up to 2000 - Pin-Pin			
	30002	1ea	2000-on - Eye-Eye			
MUST Check damper mounts.						
<b>COIL SPRING</b>						
King Springs	KDFS-42	1pr	Std Height			
	KDFR-42	1pr	Raised			
	KDPR-42	1pr	Raised Comfort			
	KDPR-42HD	1pr	Raised 50-100kg			
	KDFR-42HHD	1pr	Raised 100-250kg			
SPF1721K recommended when fitting raised height coil springs to correct caster.						
<b>LEAF SPRING</b>						
Formula				FLS-078	1ea	RHS. Approx 50mm lift at 300kg load
				FLS-077	1ea	LHS. Approx 50 mm lift at 300kg load
				FLS-076	2ea	Approx 50mm lift at 500kg load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-078	1ea	FLS-078 x 1, FLS-077 x 1, GR666 x 2, GR667 x 2, C671 x 4, SPF2260K x 1			
	FLSKIT-176	1ea	FLS-076 x 2, GR666 x 2, GR667 x 2, C671 x 4, SPF2260K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE / U BOLT</b>						
Swing Shackle				GR666	2ea	
Fixed Pin				GR667	2ea	
U Bolts				C671	4ea	
<b>ROLL CONTROL</b>						
Sway Bar	RC0023-FZ-24	1kt	24mm Heavy Duty Sway Bar - suits 05/02 - 06			
	RC0023F-22	1kt	22mm Heavy Duty Sway Bar - suits 05/02 - 06			
	RC0023F-20	1kt	20mm Heavy Duty Sway Bar - suits 05/02 - 06			
Extended Adjustable Sway Bar Links	TRC4307	2ea	suits Vehicles up to 8" Lift			
SuperPro For individual bushes refer to the SuperPro Catalogue						
Lift Correction Arm Kit	TRC1015	1kt	for Lifted Vehicles with Caster Correction			
Coil Spring Spacer	SPF2364-30K	2ea	30mm Lift			
	SPF1734K	2ea	15mm Lift			
	SPF4998-10K	2ea	10mm Lift			
	SPF1734-5K	2ea	5mm Lift			
Caster Correction	SPF1721K	1kt	Approx. 2.0° Correction			
	SPF1721XK	1kt	Approx. 3.5° Correction			
Leaf Spring Kit				SPF2260K	1kt	

NISSAN Patrol Cab Chassis		GU (Y61) Coil Front, Leaf Rear - continued		1997-2016	
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>AIRBAG</b>					
Polyair Red Bag Kit				72806	1kt
Polyair Bellows Kit				85321	1kt up to 1999
				85322	1kt 1999 -on
Ride Rite Airbag kit				RR4516	1kt Std Height
				RR4516R	1kt Raised
On-Air Airbag Kit	OA4513	1kt			
<b>ADJUSTABLE PANHARD ROD</b>					
Whiteline	KPR004	1ea	Bush Both Ends <4/2000		
	KPR028X	1ea	Spherical End >2000		
<b>Must Check bush type for correct panhard rod</b>					
Refer above on part quantities and specifications					
<b>FORMULA 4X4 KITS</b>					
RAW Lift Kit	PAT-017		G6003Y, G6008Y, KDFR-42, FLS-078, FLS-077, GR666, GR667, C671, SPF1721K, SPF2260K		
RAW Load Kit	PAT-011A		G6003Y, G6008Y, KDFR-42, FLS-076, GR666, GR667, C671, SPF1721K, SPF2260K		
RAW Load Kit (Steel Bar & Winch)	PAT-011B		NM294, G6008, KDFR-42HHD, FLS-076, GR666, GR667, C671, SPF1721K, SPF2260K		

**NISSAN Patrol**

**Y62**

**2010 - on**



Description	FRONT		Qty	Notes	REAR		Qty	Notes
<b>SHOCK ABSORBER</b>								
<i>Ultimate</i>	AR74505		2ea		AR74506		2ea	
<i>Sachs Max</i>	316 389		2ea	0-40mm Lift (5.6 V8)	316 390		2ea	0-40mm Lift (5.6 V8)
<b>Does not suit models with hydraulic suspension.</b>								
<b>COIL SPRING</b>								
<i>King Springs</i>	KDFS-302		1pr	Std Height	KDRS-303		1pr	Std Height
	KDFR-302		1pr	Raised	KDRR-303		1pr	Raised
	KDPR-302		1pr	Raised Comfort	KDPR-303		1pr	Raised Comfort
<b>ROLL CONTROL</b>								
<i>Sway Bar</i>	RC0032F-36		1kt	36mm Heavy Duty Sway Bar (does not suit models with HBMC suspension)	RC0032R-27		1kt	27mm Heavy Duty Sway Bar (does not suit models with HBMC suspension)
<b>AIRBAG</b>								
<i>Polyair Red Bag Kit</i>					92094		1kt	Std Height
					92094R		1kt	2" Lift
<i>Polyair Ultimate Kit</i>					92094ULT		1kt	Std Height 60PSI Heavy Duty
					92094RULT		1kt	2" Lift 60PSI Heavy Duty
<i>Coil Rite Airbag Kit</i>					CR5119		1kt	Std Height
					CR5120		1kt	Lift

NISSAN Terrano I		WD21		1986 - 1995		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50025	2ea	0-50mm Lift	50003	2ea	
Raw Nitro	G6897BY	2ea	0-50mm Lift	G6010Y	2ea	
Koni Heavy Track Gas	30-1365	2ea	Std Height	30-1372	2ea	Std height
<b>STEERING DAMPER</b>						
Replacement Damper	14035	1ea				
<b>COIL SPRING</b>						
King Springs				KDRR-39	1pr	Raised
<b>TORSION BAR</b>						
EFS	TB-1458A	1pr	28mm OD, 1230mm long			
<b>AIRBAG</b>						
Polyair Red Bag Kit				61996	1kt	



NISSAN Terrano II		R20		1992 - 2006		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50022	2ea	0-40mm	50003	2ea	
Raw Nitro	G6833BY	2ea	0-40mm	G6010Y	2ea	
Koni Heavy Track Gas	30-1365	2ea	Std Height	30-1372	2ea	Std height
<b>COIL SPRING</b>						
King Springs				KDRS-39	1pr	Std Height
				KDRR-39	1pr	Raised
<b>AIRBAG</b>						
Polyair Red Bag Kit				61894	1kt	
Coil Rite Airbag Kit				CR5022	1kt	





NISSAN X-Trail		T30		2001 - 2007		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	317 113	1ea	RHS	318 220	1ea	RHS
	317 112	1ea	LHS	318 219	1ea	LHS
<b>COIL SPRING</b>						
King Springs	KDFR-46	1pr	Raised	KDRR-47	1pr	Raised
<b>ROLL CONTROL</b>						
Formula Lower Control Arms	ALOY0002K	1pr	Std Replacement			
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Sachs Lift Kit	TRAIL-002					317113, 317112, 318219, 318220, KDFR-46, KDRR-47



NISSAN X-Trail		T31		2007 - 2014		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	314 043	1ea	LHS	314 044	2ea	
	314 042	1ea	RHS			
<b>COIL SPRING</b>						
King Springs	KDFR-94	1pr	Raised Petrol	KDRR-95	1pr	Raised
	KDFR-94HD	1pr	Raised Diesel			
<b>AIRBAGS</b>						
Polyair Red Bag Kit				11793	1kt	Std Height
Coil Rite Air Bag Kit				CR5070	1kt	Std Height
				CR5070HP	1kt	Std Height Heavy Duty
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Sachs Lift Kit	TRAIL-003					314042, 314043, 314044, KDFR-94, KDRR-95



RANGE ROVER		Series I		1972 - 1994		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6003Y	2ea		G6004M1Y	2ea	
Koni Heavy Track Gas	30-1311	2ea	Std Height	30-1312	2ea	Std Height
Koni Heavy Track	8240-1181SPX	2ea	Std Height	8240-1190SPX	2ea	Std Height
Koni Heavy Track Raid	90-5374SP1	2ea	0-50mm Lift	90-5375SP1	2ea	0-40mm Lift
Bilstein	B46-0243	2ea		90-5401	2ea	40-60mm Lift
				B46-0253	2ea	
<b>STEERING DAMPER</b>						
Formula Big Bore	30008	1ea				
<b>COIL SPRING</b>						
King Springs	KRFR-01	1pr	Raised	KRRR-02	1pr	Raised
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Coil Spring Spacer				SPF1725K	ea	20mm Lift
				SPF0962K	ea	30mm Lift
Spring Eye & Shackle Bush Kit	KIT042K	1kt	Kits Front & Rear			
	KIT043K	1kt	Kits Front & Rear			
Caster Correction Bush Kit	SPF2509K	1kt	Approx. 2.5° adjust			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				92099	1kt	Std Height
Coil Rite Air Bag kit				CR5026	1kt	Std Height
				CR5027	1kt	50mm Lift
<b>ADJUSTABLE PANHARD ROD</b>						
	PRLAND01FT	1ea				



RANGE ROVER		Air Suspension		1992 - 2002		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6001Y	2ea	5/95-02	G6004M1Y	2ea	5/95-02
Bilstein	B46-2153	2ea	10/92-4/95	B46-2152	2ea	10/92-4/95
	B46-2214	2ea	5/95-02	B46-2215	2ea	5/95-02
<b>STEERING DAMPER</b>						
Bilstein S/Damper	B36-0245	1ea	10/92-4/95			
	BE3-B298	1ea	5/95-02			
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Caster Correction Bush Kit	SPF2509K	1kt	Approx. 2.5° adjust			
<b>CONVERSION</b>						
Airbag to Coil Conversion	SC323	1kt	Kits Front & Rear (HSE only 95 - 02)			

SSANGYONG Musso		FJ - Wagon & Sports Ute		1996 - 2006		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6897BY	1pr	Std Height	LTST82	1pr	Std Height
	G6833BY	1pr	50mm Lift	G6009M1Y	1pr	50mm Lift
Koni Heavy Track Gas	26-1621	2ea	Std Height	26-1622	2ea	Std Height
<b>COIL SPRING</b>						
King Springs				KMRR-90	1pr	Raised
<b>AIR BAGS</b>						
Polyair Red Bag Kit				61894	1kt	
Coil Rite Air Bag Kit				CR5021	1kt	




SSANGYONG Rexton		Y200		2001-2017		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Koni Heavy Track	8240-1281	2ea	Std Height	8040-1404	2ea	Live Axle
				80-2902	2ea	IRS
<b>COIL SPRING</b>						
King Springs	KSFR-50	1pr	Raised	KMRS-90	1pr	Raised
<b>AIR BAGS</b>						
Polyair Red Bag Kit				19697	1kt	
Coil Rite Air Bag Kit				CR5032	1kt	




SSANGYONG Actyon		C100		2006-2013		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Koni Heavy Track	8240-1281	2ea	Std Height			
<b>COIL SPRING</b>						
King Springs	KSFR-54	1pr	Raised	KMRS-90	1pr	Raised
<b>AIR BAGS</b>						
Coil Rite Air Bag Kit				CR5032	1kt	





SUZUKI Jimny		SN		1998 - 2017		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Koni Heavy Track Gas	8040-1300	2ea		8040-1301	2ea	
<b>COIL SPRING</b>						
King Springs	KSFR-36H	1pr	Raised	KSRR-37H	1pr	Raised
<b>AIR BAGS</b>						
Polyair Red Bag Kit				63593	1kt	
<b>ADJUSTABLE PANHARD ROD</b>						
Whiteline				KPR020	1ea	



SUZUKI Jimny		A6G		2018 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
RAW Nitro	G6766	2ea	0-50mm	G6767	2ea	0-50mm
<b>COIL SPRING</b>						
King Springs	KSFR-63	1pr	Raised approx. 15mm	KSRR-64	1pr	Raised approx. 15mm
<b>ROLL CONTROL</b>						
Cross Brace	TRC9001	1pr				
<b>AIR BAGS</b>						
Polyair Red Bag Kit				63990	1kt	2" Raised
<b>FORMULA 4x4 KITS</b>						
Kit components not to be sold individually!						
Formula Lift Kit (50mm)	JIMNY-001		50033, 50034, KSFR-500, KSRR-501, TRC9001, SPF5237K, SPF5528K, SPF5530K, TRC9008, TRC5529			



SUZUKI Sierra		SJ (Leaf Spring)		1981 - 1998		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	317 478	2ea		311 619	2ea	
Raw				G6026Y	2ea	0-30mm Lift
<b>LEAF SPRING</b>						
Formula	FLS-070	2ea	50mm lift 35-40kg Constant Load	FLS-069	2ea	50mm lift at 80kg
				FLS-068	2ea	50mm lift at 120kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-068	1ea	FLS-070 x 2, FLS-068 x 2, C654 x 2, C655 x 6, GR656 x 4, KIT068K x 1			
	FLSKIT-069	1ea	FLS-070 x 2, FLS-069 x 2, C654 x 2, C655 x 6, GR656 x 4, KIT068K x 1			
SuperPro			For individual bushes refer to the SuperPro Catalogue			
Spring Eye & Shackle Bush Kit	KIT068K	1kt	Front & Rear Kit			
<b>SHACKLE/ U BOLTS</b>						
Swinging Shackle	GR656	2ea		GR656	2ea	
U Bolts	C654	2ea	(RHS)	C655	4ea	
	C655	2ea	(LHS)			



SUZUKI Sierra		SJ (Coil Spring)		1998 - 2001		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6766	2ea		G6767	2ea	
KYB Shocks	341317	2ea		343386	2ea	
<b>COIL SPRING</b>						
King Springs	KSFR-30	1pr	Raised	KSRR-31	1pr	Raised
			SPF5237K recommended when fitting raised coils to correct caster			
SuperPro						
Caster Correction Bush Kit	SPF5237K	1kt				



SUZUKI Vitara		ET, TA, TD		1988 - 1999		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	311 424	1ea	LHS	317 131	2ea	
	311 423	1ea	RHS			
Raw Nitro				G6019M2Y	2ea	
Koni Heavy Track Gas	8741-1394SPT	2ea		8040-1106SPT	2ea	
<b>COIL SPRING</b>						
King Springs	KSFR-16	1pr	SWB Raised	KSRR-15	1pr	SWB Raised
	KSFR-16	1pr	LWB Raised	KSRR-17	1pr	LWB Raised
For individual bushes refer to the SuperPro Catalogue						
SUPERPRO	SPF1735-15K	2ea	15mm Lift	SPF1735-15K	2ea	15mm Lift
<b>AIR BAGS</b>						
Polyair Red Bag Kit				63990	1kt	2" Raised




SUZUKI Grand Vitara		FT		1998 - 2005		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro				G6019M2Y	1pr	
Koni Heavy Track	8741-1394SPT	2ea				
Sachs	317 107	1ea	LHS	230 048	2ea	
	317 108	1ea	RHS	317 131	2ea	Big Bore
<b>COIL SPRING</b>						
King Springs	KSFS-34	1pr	Raised 4 cyl	KSRR-35	1pr	Raised 4cyl & V6
	KSFR-34	1pr	Raised V6	KSRR-38	1pr	Raised XL-7
	KSFR-34H	1pr	Raised XL-7			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				63790	1kt	
				63990	1kt	2" Raised (105mm ID Coils)
				64890	1kt	XL-7
Coil Rite Air Bag Kit			CR5126	1kt	Std Height	



SUZUKI Grand Vitara		JB, JT		2005 - 2018		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs	317 186	1ea	RHS	317 405	2ea	
	317 185	1ea	LHS			
Koni Heavy Track	8641-1510	2ea		8240-1256	2ea	
<b>COIL SPRING</b>						
King Springs	KSFR-46SP	1pr	Raised 4 cyl	KSRR-47	1pr	Raised 4cyl & V6
	KSFR-46	1pr	Raised V6 & Diesel			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				64891	1kt	
Coil Rite Air Bag Kit				CR5102	1kt	Std Height
FORMULA 4x4 KITS						
Refer above on part quantities and specifications						
Sachs Lift Kit (4 cyl)	VIT-001			317185, 317186, 317405, KSFR-46SP, KSRR-47		



TOYOTA 4 Runner		N5, N6 (Leaf Spring Front & Rear)		1984 - 1989			
Description	FRONT	Qty	Notes	REAR	Qty	Notes	
<b>SHOCK ABSORBER</b>							
Raw Nitro	G6019Y	2ea	50mm Lift	G6012Y	2ea	Std Height	
Sachs Max	317 527	2ea	0-40mm Lift	G6014Y	2ea	50mm Lift	
Koni Heavy Track Oil	82-2293	2ea	50mm Lift	314 070	2ea	0-40mm Lift	
				82-2294	2ea	50mm Lift	
<b>STEERING DAMPER</b>							
Tough Dog 35mm Foam Cell	EXT5510	1ea	H/Duty				
<b>LEAF SPRING</b>							
Formula	FLS-065	1ea	RHS Approx 50mm Lift at Up to 25kg Petrol	FLS-056	2ea	Comfort Approx 50mm Lift at 150kg	
	FLS-064	1ea	LHS Approx 50mm Lift at Up to 25kg Petrol	FLS-055	2ea	Comfort Approx 50mm Lift at 200kg	
	FLS-067	1ea	RHS 50mm Lift at Up to 25kg Diesel 50kg Petrol	FLS-063	2ea	50mm Lift at 250kg	
	FLS-066	1ea	LHS Approx 50mm Lift at Up to 25kg Diesel 50kg Petrol	FLS-062	2ea	50mm Lift at 300kg	
	FLS-060	1ea	Comfort RHS Approx 50mm Lift at Up to 35kg				
	FLS-059	1ea	Comfort LHS Approx 50mm Lift at Up to 35kg				
	FLS-058	1ea	Comfort RHS Diesel Approx 50mm Lift at 55 to 70kg				
FLS-057	1ea	Comfort LHS Diesel Approx 50mm Lift at 55 to 70kg					
<b>LEAF SPRING KIT</b>							
Formula	FLSKIT-056	1ea	FLS-064 x 1, FLS-065 x 1, FLS-066 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
	FLSKIT-057	1ea	FLS-058 x 1, FLS-057 x 1, FLS-063 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK004 x 2, KIT024 x 1				
	FLSKIT-058	1ea	FLS-058 x 1, FLS-057 x 1, FLS-062 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK004 x 2, KIT024 x 1				
	FLSKIT-059	1ea	FLS-060 x 1, FLS-059 x 1, FLS-063 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
	FLSKIT-060	1ea	FLS-060 x 1, FLS-059 x 1, FLS-062 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
	FLSKIT-064	1ea	FLS-064 x 1, FLS-065 x 1, FLS-063 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
	FLSKIT-065	1ea	FLS-064 x 1, FLS-065 x 1, FLS-062 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
	FLSKIT-066	1ea	FLS-067 x 1, FLS-066 x 1, FLS-063 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
	FLSKIT-067	1ea	FLS-067 x 1, FLS-066 x 1, FLS-062 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
	FLSKIT-135	1ea	FLS-064 x 1, FLS-065 x 1, FLS-055 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
	FLSKIT-136	1ea	FLS-067 x 1, FLS-066 x 1, FLS-056 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
	FLSKIT-137	1ea	FLS-067 x 1, FLS-066 x 1, FLS-055 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
	FLSKIT-138	1ea	FLS-060 x 1, FLS-059 x 1, FLS-056 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
	FLSKIT-139	1ea	FLS-060 x 1, FLS-059 x 1, FLS-055 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
	FLSKIT-140	1ea	FLS-058 x 1, FLS-057 x 1, FLS-056 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1				
FLSKIT-141	1ea	FLS-058 x 1, FLS-057 x 1, FLS-055 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1					
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.							

TOYOTA 4 Runner		N5, N6 (Leaf Spring Front & Rear) - continued		1984 - 1989		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHACKLE/ U BOLTS</b>						
Swinging Shackle	GR384	2ea		FSK-004	2ea	Greaseable
Fixed Pin	GR385	2ea		GR385	2ea	
U Bolts	C449-3	2ea		FUB-001	4ea	
	FUB-001	2ea				
Torque Arm	10-1018	1ea	Adjustable Arm			
	CW-HILUX	2ea		CW-00	2ea	1 degree
Caster Wedges				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
<b>SuperPro</b> For individual bushes refer to the SuperPro Catalogue						
Spring Eye & Shackle Bush Kit	KIT024K	1kt	Kits front & Rear			
Spring Eye & Shackle Bush Kit	KIT038HK	1kt	Kits front & Rear H/Duty			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				75698	1kt	Std Height
<b>FORMULA 4X4 KITS</b> Refer above on part quantities and specifications						
RAW Lift Kit (Petro)	4RUN-002		FLS-060, FLS-059, FLS-056, G6019Y, G6012Y, C449-3, FUB-001, GR384, FSK-004, GR385, 10-1018, KIT024K			
RAW Lift Kit (Diesel)	4RUN-001		FLS-058, FLS-057, FLS-056, G6019Y, G6012Y, FUB-001, C449-3, GR384, FSK-004, GR385, 10-1018, KIT024K			
Koni Lift Kit (Petro)	4RUN-004		FLS-060, FLS-059, FLS-056, 82-2293, 82-2294, FUB-001, C449-3, FUB-001, GR384, FSK-004, GR385, 10-1018, KIT024K			
Koni Lift Kit (Diesel)	4RUN-005		FLS-058, FLS-057, FLS-056, 82-2293, 82-2294, C449-3, FUB-001, GR384, FSK-004, GR385, 10-1018, KIT024K			

TOYOTA 4 Runner		N5, N6 (IFS, Leaf rear)		1984 - 1989		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6011BY	2ea	0-35mm Lift	G6012Y	2ea	8/85-89
Sachs Max	313 134	2ea	0-40mm Lift	314 070	2ea	0-40mm Lift
Koni Heavy Track	82-2317	2ea	50mm Lift	82-2294	2ea	50mm Lift
<b>STEERING DAMPER</b>						
Replacement	14021	1ea				
Tough Dog 35mm Foam Cell	EXT5510	1ea				
<b>TORSION BAR</b>						
EFS	TB-1646A	1pr	26mm OD 1063mm Long			
<b>LEAF SPRING</b>						
Formula				FLS-055	2ea	Approx 40mm Lift at 200kg
				FLS-063	2ea	Approx 40mm Lift at 250kg
				FLS-062	2ea	Approx 40mm Lift at 300kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-055	1ea	FLS-055 x 2, FUB-001 x 4, FSK-004 x 2, GR385 x 2, SPF2231K x 1			
	FLSKIT-062	1ea	FLS-062 x 2, FUB-001 x 4, FSK-004 x 2, GR385 x 2, SPF2231K x 1			
	FLSKIT-063	1ea	FLS-063 x 2, FUB-001 x 4, FSK-004 x 2, GR385 x 2, SPF2231K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
Swinging Shackle				FSK-004	2ea	Greaseable
Fixed Pin				GR385	2ea	
U Bolts				FUB-001	4ea	
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				SPF2231K	1kt	
<b>AIR BAGS</b>						
Polyair Red Bag Kit				75698	1kt	Std Height
Ride Rite Air Bag Kit				RR4531	1kt	Std Height
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
RAW Lift Kit	4RUN-003		G6011BY, G6012Y, FLS-055, FUB-001, FSK-004, GR385, SPF2231K			
Koni Lift Kit	4RUN-006		82-2317, 82-2294, FLS-055, FUB-001, FSK-004, GR385, SPF2231K			



TOYOTA 4 Runner / Surf		N130 (T/Bar Front, Coil Rear)		1988 - 1996		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6011BY	2ea	0-50mm Lift	G6013Y	1pr	
Sachs Max	313 134	2ea	0-40mm Lift	316 542	2ea	0-40mm Lift
Koni Heavy Track	82-2317	2ea	Std Height	82-2296	2ea	Std Height
<b>STEERING DAMPER</b>						
Formula Big Bore	30009	1ea				
<b>COIL SPRING</b>						
King Springs				KTRS-68	1pr	Std Height
				KTRR-68	1pr	Raised
				KTPR-68	1pr	Raised Comfort
				KTRR-68HD	1pr	Raised 100-300kg
<b>TORSION BAR</b>						
EFS	TB-1646A	1pr	26mm OD 1063mm Long			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				15690	1kt	Std Height
Coil Rite Air Bag Kit				15790	1kt	Raised
				CR5038	1kt	Std Height
<b>ADJUSTABLE PANHARD ROD</b>						
Whiteline				W83026	1ea	Heavy duty off-car adjustable
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
RAW Lift Kit	4RUN-007			G6011BY, G6013Y, KTRR-68		
Koni Lift Kit	4RUN-008			82-2317, 82-2296, KTRR-68		



<b>TOYOTA FJ Cruiser</b>	<b>Refer Prado 120 Series</b>	<b>2002-2010</b>
--------------------------	-------------------------------	------------------

<b>TOYOTA FJ Cruiser</b>	<b>Refer Prado 150 Series</b>	<b>2009 - on</b>
--------------------------	-------------------------------	------------------



TOYOTA Fortuner		GUN156		2015 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40008	2ea	0-50mm Lift	50019	2ea	0-50mm Lift
Raw Nitro Max	NM324M1 ReadyStrut only	2ea	0-50mm Lift	NM330	2ea	0-50mm Lift
Bilstein	24-269377	2ea	0-50mm Lift	B46-1004LT-W	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KHFR-168HT	1pr	Raised Comfort	KTRR-215	1pr	Raised Comfort
				KTRR-215HD	1pr	Raised 100-300kg
<b>ROLL CONTROL</b>						
Adjustable Upper Control Arm	TRC8470	1pr	adjustment range of between +0.5 to +3.5 degrees caster and -1.5 to +1.5 degrees camber over OE			
Fixed Offset Upper Control Arm	TRC6470	1pr	up to +2.8 degrees of caster and up to -0.1 degrees of camber			
Sway Bar	RC0081FZ-33	1kt	33mm Adj. Sway Bar	RC0078RZ-24	1kt	24mm Adj. Sway Bar
Centre Bearing Alignment Kit				TRC0043	1ea	
<b>AIR BAGS</b>						
Polyair Red Bag Kit				94097	1kt	Std Height
				94098	1kt	2" Lift
Polyair Ultimate Kit				94097ULT	1kt	Std Height - 60PSI Heavy Duty
				94098ULT	1kt	2" Lift - 60PSI Heavy Duty
Coil Rite Air Bag Kit				CR5153	1kt	2" Lift
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
ReadyStrut Top Caps	RS002	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	FORT168HT-FOR				1pr	
RAW Struts & King Springs	FORT08T-NMRAW				1pr	
Bilstein Struts & King Springs	FORT168HT-BIL				1pr	
<b>FORMULA 4X4 KITS</b> It is highly recommended to fit TRC8470/TRC6470 FUCA when lifting this vehicle Refer above on part quantities and specifications						
Formula Lift Kit	FORT-001	40008, 50019, KHFR-168HT, KTRR-215				
Formula Lift Kit with ReadyStruts	FORT-001R	FORT168HT-FOR, 50019, KTRR-215				
Bilstein Lift Kit	FORT-003	24-269377, B46-1004LT-W, KHFR-168HT, KTRR-215				
Bilstein Lift Kit with ReadyStruts	FORT-003R	FORT168HT-BIL, B46-1004LT-W, KTRR-215				
RAW Load Kit with ReadyStruts	FORT-002R	FORT08T-NMRAW, NM330, KTRR-215HD				



TOYOTA Hilux		N30, N40, N50, N60, N100 (Leaf Front & Rear)		1979 - 1996	
Description	FRONT	Qty	Notes	REAR	Qty Notes
<b>SHOCK ABSORBER</b>					
Raw Nitro	G6019Y	2ea		G6010Y	2ea 1/79 - 7/83 (0-50mm Lift)
				G6012Y	2ea 8/83 - 11/87 (Std Height)
Raw Nitro Max				G6006Y	2ea 8/83 - 96 (50mm Lift)
				NM326	2ea 8/83 - 96 (50mm Lift)
Sachs Max	317 527	2ea	0-40mm Lift	316 376	2ea 0-40mm Lift (up to 07/83)
Koni Heavy Track				314 070	2ea 0-40mm Lift (08/83-08/88)
	82-2293	2ea	50mm Lift	82-2294	2ea 8/83-96 (50mm Lift)
				82-2297	2ea 79-7/83 (50mm Lift)
	82-2137	2ea	Std Height	82-2272	2ea All Std Height
<b>STEERING DAMPER</b>					
Replacement	14021	1ea			
Formula Big Bore	30009	1ea	H/Duty		
<b>LEAF SPRING</b>					
Choose Leaf Spring To Suit Your Vehicle Requirements					
Formula	FLS-065	1ea	RHS Approx 50mm Lift Up to 25kg Petrol	FLS-056	2ea Comfort Approx 50mm Lift at 150kg
	FLS-064	1ea	LHS Approx 50mm Lift Up to 25kg Petrol	FLS-055	2ea Comfort Approx 50mm Lift at 200kg
	FLS-067	1ea	RHS Approx 50mm Lift up to 25kg, Diesel 50kg Petrol	FLS-063	2ea Approx 50mm Lift at 250kg
	FLS-066	1ea	LHS Approx 50mm Lift up to 25kg Diesel, 50kg Petrol	FLS-062	2ea Approx 50mm lift at 300kg
	FLS-060	1ea	Comfort RHS Approx 50mm Lift up to 35kg		
	FLS-059	1ea	Comfort LHS Approx 50mm Lift up to 35kg		
	FLS-058	1ea	Comfort RHS Approx 50mm Lift for Diesel & 80mm for Petrol with 55 to 70kg		
	FLS-057	1ea	Comfort LHS Approx 50mm Lift for Diesel & 80mm for Petrol with 55 to 70kg		
<i>*Caution: Without accurate load bearing accessory weights on the front, some height discrepancies may result</i>					
<b>LEAF SPRING KIT</b>					
Formula	FLSKIT-056	1ea	FLS-064 x 1, FLS-065 x 1, FLS-056 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-057	1ea	FLS-058 x 1, FLS-057 x 1, FLS-063 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK004 x 2, KIT024 x 1		
	FLSKIT-058	1ea	FLS-058 x 1, FLS-057 x 1, FLS-062 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK004 x 2, KIT024 x 1		
	FLSKIT-059	1ea	FLS-060 x 1, FLS-059 x 1, FLS-063 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-060	1ea	FLS-060 x 1, FLS-059 x 1, FLS-062 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-064	1ea	FLS-064 x 1, FLS-065 x 1, FLS-063 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-065	1ea	FLS-064 x 1, FLS-065 x 1, FLS-062 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-066	1ea	FLS-067 x 1, FLS-066 x 1, FLS-063 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-067	1ea	FLS-067 x 1, FLS-066 x 1, FLS-062 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-135	1ea	FLS-064 x 1, FLS-065 x 1, FLS-055 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-136	1ea	FLS-067 x 1, FLS-066 x 1, FLS-056 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-137	1ea	FLS-067 x 1, FLS-066 x 1, FLS-055 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-138	1ea	FLS-060 x 1, FLS-059 x 1, FLS-066 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-139	1ea	FLS-060 x 1, FLS-059 x 1, FLS-055 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-140	1ea	FLS-058 x 1, FLS-057 x 1, FLS-056 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
	FLSKIT-141	1ea	FLS-058 x 1, FLS-057 x 1, FLS-055 x 2, C449-3 x 2, FUB-001 x 6, GR384 x 2, GR385 x 4, FSK-004 x 2, KIT024 x 1		
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.					





TOYOTA Hilux		N30, N40, N50, N60, N100 (Leaf Front & Rear) - continued		1979 - 1996		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
Swingling Shackle	GR384	2ea		FSK-004	2ea	Greaseable
Fixed Pin	GR385	2ea		GR385	2ea	
U Bolts	C449-3	2ea		FUB-001	4ea	
	FUB-001	2ea				
Torque Arm	10-1018	1ea	Adjustable Arm			
Caster Wedges	CW-HILUX	2ea		CW-00	2ea	1 degree
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit	KIT024K	1kt	Kits front & Rear			
Spring Eye & Shackle Bush Kit	KIT038HK	1kt	Kits front & Rear H/Duty			
<b>SHACKLE/ U BOLTS</b>						
Swingling Shackle	GR384	2ea		FSK-004	2ea	Greaseable
Fixed Pin	GR385	2ea		GR385	2ea	
U Bolts	C449-3	2ea		FUB-001	4ea	
	FUB-001	2ea				
Torque Arm	10-1018	1ea	Adjustable Arm			
Caster Wedges	CW-HILUX	2ea		CW-00	2ea	1 degree
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit	KIT024K	1kt	Kits front & Rear			
Spring Eye & Shackle Bush Kit	KIT038HK	1kt	Kits front & Rear H/Duty			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				75703	1kt	Std Height
				78903	1kt	2" Lift - Light Duty
Ride Rite Air Bag Kit				RR4560	1kt	Std Height
				RR4591	1kt	Lift
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
RAW Lift Kit (79-7/83 Petrol & Diesel Up to 35kg of Front Accessories)	HILUX-002		FLS-060, FLS-059, FLS-056, G6019Y, G6010Y, FUB-001, C449-3, FUB-001, GR384, FSK-004, GR385, 10-1018, KIT024K			
RAW Lift Kit (79-7/83 Petrol & Diesel 55 to 70kg of Front Accessories)	HILUX-001		FLS-058, FLS-057, FLS-056, G6019Y, G6010Y, FUB-001, C449-3, FUB-001, GR384, FSK-004, GR385, 10-1018, KIT024K			
RAW Lift Kit (8/83-96 Petrol & Diesel Up to 35kg of Front Accessories)	HILUX-003		FLS-060, FLS-059, FLS-056, G6019Y, G6006Y, FUB-001, C449-3, FUB-001, GR384, FSK-004, GR385, 10-1018, KIT024K			
RAW Lift Kit (8/83-96 Diesel 55 to 70kg of Front Accessories)	HILUX-004		FLS-058, FLS-057, FLS-056, G6019Y, G6006Y, FUB-001, C449-3, FUB-001, GR384, FSK-004, GR385, 10-1018, KIT024K			
RAW Load Kit (8/83-96 Petrol & Diesel Up to 35kg of Front Accessories)	HILUX-005		FLS-060, FLS-059, FLS-055, G6019Y, NM326, FUB-001, C449-3, FUB-001, GR384, FSK-004, GR385, 10-1018, KIT024K			
RAW Load Kit (8/83-96 Diesel 55 to 70kg of Front Accessories)	HILUX-006		FLS-058, FLS-057, FLS-055, G6019Y, NM326, FUB-001, C449-3, FUB-001, GR384, FSK-004, GR385, 10-1018, KIT024K			
Koni Lift Kit (8/83-96 Petrol & Diesel Up to 35kg of Front Accessories)	HILUX-009		FLS-060, FLS-059, FLS-056, 82-2293, 82-2294, FUB-001, C449-3, FUB-001, GR384, FSK-004, GR385, 10-1018, KIT024K			
Koni Lift Kit (8/83-96 Diesel 55 to 70kg of Front Accessories)	HILUX-010		FLS-058, FLS-057, FLS-056, 82-2293, 82-2294, FUB-001, C449-3, FUB-001, GR384, FSK-004, GR385, 10-1018, KIT024K			

TOYOTA Hilux		N100 (IFS, Leaf Rear)		1988 - 1997		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50024	2ea	0-50mm Lift	50001	2ea	0-50mm Lift
Raw Nitro	G6011BY	2ea	0-50mm Lift	G6012Y	2ea	Std Height
				G6014Y	2ea	0-50mm Lift
Raw Nitro Max	NM325	2ea	0-50mm Lift	NM623M3	2ea	Std Height
				NM326	2ea	50-75mm
Sachs Max	313 134	2ea	0-40mm Lift	314 070	2ea	0-40mm Lift
Koni Heavy Track Oil	82-2317	2ea	Std Height	82-2312	2ea	Std Height
				82-2294	2ea	0-50mm Lift
<b>STEERING DAMPER</b>						
Replacement	14033	1ea				
Tough Dog 35mm Foam Cell	EXT5510	1ea				
<b>TORSION BAR</b>						
EFS	TB-1646A	1pr	26mm OD 1063mm Long			
<b>LEAF SPRING</b>						
Formula				FLS-022	2ea	Approx 40mm Lift at 150kg
				FLS-023	2ea	Approx 40mm Lift at 250kg
				FLS-101	2ea	Approx 40mm Lift at 0-300kg
				FLS-102	2ea	Approx 40mm Lift at 300kg+
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-022	1ea	FLS-022 x 2 , FUB-001 x 4 , KIT077SK x 1			
	FLSKIT-023	1ea	FLS-023 x 2 , FUB-001 x 4 , KIT077SK x 1			
	FLSKIT-101	1ea	FLS-101 x 2 , FUB-001 x 4 , KIT077SK x 1			
	FLSKIT-102	1ea	FLS-102 x 2 , FUB-001 x 4 , KIT077SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
Swinging Shackle				FSK-008	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-001	4ea	
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Spring Eye & Shackle Bush Kit				KIT077K	1kt	
Shackle, Pin & Bush Kit				KIT077SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIR BAGS</b>						
Polyair Red Bag Kit				75703	1kt	Std Height
				78903	1kt	Lift
Polyair Bellows Kit				85303	1kt	
Ride Rite Air Bag Kit				RR4560	1kt	Std Height
				RR4591	1kt	Lift
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	HILUX-107	50024, 50001, FLS-022, FUB-001, KIT077SK				
RAW Lift Kit	HILUX-007	G6011BY, G6014Y, FLS-022, FUB-001, KIT077SK				
Koni Lift Kit	HILUX-008	82-2317, 82-2312, TB-1646A, FLS-022, FUB-001, EXT5510, KIT077SK				
RAW Load Kit	HILUX-013	NM325, NM326, TB-1646A, FLS-023, FUB-001, EXT5510, KIT077SK				



**TOYOTA Hilux** **N160, N170 (T/Bar Front, Leaf Rear)** **1997 - 2005**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	50024	2ea	0-50mm Lift	50001	2ea	0-50mm Lift
Raw Nitro	G6011BY	2ea	0-50mm Lift	G6012Y	2ea	Std Height
				G6014Y	2ea	0-50mm Lift
Raw Nitro Max	NM325	2ea	0-50mm Lift	NM623M3	2ea	Std Height
				NM326	2ea	0-50mm Lift
Bilstein	B46-1468	2ea	0-50mm Lift	B46-1035	2ea	0-50mm Lift
Sachs Max	313 134	2ea	0-40mm Lift	314 070	2ea	0-40mm Lift
Koni Heavy Track	82-2317	2ea	Std Height	82-2312	2ea	0-50mm Lift
<b>STEERING DAMPER</b>						
Replacement	14033	1ea				
Tough Dog 35mm Foam Cell	EXT5510	1ea				
<b>TORSION BAR</b>						
EFS	TB-1646A	1pr	26mm OD 1063mm Long			
<b>LEAF SPRING</b>						
Formula				FLS-022	2ea	Approx 40mm Lift at 150kg
				FLS-023	2ea	Approx 40mm Lift at 250kg
				FLS-061	2ea	Approx 40mm Lift at 500kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-022	1ea	FLS-022 x 2, FUB-001 x 4, KIT077SK x 1			
	FLSKIT-023	1ea	FLS-023 x 2, FUB-001 x 4, KIT077SK x 1			
	FLSKIT-061	1ea	FLS-061 x 2, FUB-001 x 4, KIT077SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
Swinging Shackle				FSK-008	2ea	Greaseable
Fixed Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-001	4ea	
SuperPro For individual bushes refer to the SuperPro Catalogue						
Spring Eye & Shackle Bush Kit				KIT077K	1kt	
Shackle, Pin & Bush Kit				KIT077SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIR BAGS</b>						
Polyair Red Bag kit				75703	1kt	Std Height
				78903	1kt	Lift
Polyair Bellows Kit				85303	1kt	
Ride Rite Air Bag Kit				RR4660	1kt	Std Height
				RR4591	1kt	Lift
Refer above on part quantities and specifications						
<b>FORMULA 4X4 KITS</b>						
Formula Lift Kit	HILUX-107		50024, 50001, FLS-022, FUB-001, KIT077SK			
RAW Lift Kit	HILUX-007		G6011BY, G6014Y, FLS-022, FUB-001, KIT077SK			
Koni Lift Kit	HILUX-008		82-2317, 82-2312, TB-1646A, FLS-022, FUB-001, EXT5510, KIT077SK			
Bilstein Lift Kit	HILUX-008B		B46-1468, B46-1035, TB-1646A, FLS-022, FUB-001, EXT5510, KIT077SK			
RAW Load Kit	HILUX-013		NM325, NM326, TB-1646A, FLS-023, FUB-001, EXT5510, KIT077SK			



TOYOTA Hilux		KUN 26, GGN25		2005 - 2015		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40008	2ea	0-50mm Lift	50001	2ea	0-50mm Lift
Bilstein	BE5-D563	2ea	0-50mm Lift	BE5-D564	2ea	0-50mm Lift
Raw Nitro	G6324	1pr	0-50mm Lift	G6014Y	2ea	0-50mm Lift
Raw Nitro Max	NM324 ReadyStruts Only	1pr	0-50mm Lift	NM326	2ea	0-50mm Lift
Sachs Max	316 293	2ea	0-40mm Lift	313 133	2ea	0-40mm Lift
Koni Heavy Track	82-2560	2ea	Std Height	82-2561	2ea	Std Height
Koni Heavy Track Raid	88-1713	2ea	0-50mm Lift	90-5410	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KTFR-101	1pr	Raised			
	KTFR-101T	1pr	Raised Comfort			
	KTFR-101H	1pr	Raised 50-100kg			
	KTFR-101HT	1pr	Raised Comfort 50-100kg			
	KTFR-101HD	1pr	Raised 100-250kg			
KTFR-101HDT	1pr	Raised Comfort 100-250kg				
<b>LEAF SPRING</b>						
Formula				FLS-001 *	2ea	Approx 40mm Lift at 100kg Dual Cab
				FLS-001 *	2ea	Approx 40mm Lift at 200kg SingleCab
				FLS-003	2ea	Approx 40mm Lift at 300kg Dual Cab
				FLS-003	2ea	Approx 40mm Lift at 400kg SingleCab
				FLS-004 *	2ea	Approx 40mm Lift at 400kg Dual Cab
				FLS-004 *	2ea	Approx 40mm Lift at 500kg SingleCab
* Note: When fitting these springs to Auto vehicles recommend fitting Castor wedges (CW603) to eliminate vibration. Suggest fitting to manual vehicles as a precaution.						
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-142	1ea	FLS-001 x 2, FUB-006 x 4, KIT096SK x 1			
	FLSKIT-143	1ea	FLS-003 x 2, FUB-006 x 4, KIT096SK x 1			
	FLSKIT-004	1ea	FLS-004 x 2, FUB-006 x 4, KIT096SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
Greaseable Pin				FSP-001	2ea	Greaseable
Swing Shackle				FSK-002	2ea	Greaseable
U Bolts				FUB-006	4ea	
Caster Wedges				CW-00	2ea	1 degree
				CW602	2ea	2 degrees
				CW603	2ea	3 degrees
<b>ROLL CONTROL</b>						
Adjustable Upper Control Arm	TRC8470	1pr	adjustment range of between +0.5 to +3.5 degrees caster and -1.5 to +1.5 degrees camber over OE			
Fixed Offset Upper Control Arm	TRC6470	1pr	up to +2.8 degrees of caster and up to -0.1 degrees of camber			
Fixed Offset Upper Control Arm	TRC6490	1pr	up to +1.5 degrees of caster and up to -0.5 degrees of camber			
Standard Lower Control Arm	TRC471	1pr	Complete Arm Assemblies with Standard SuperPro Bushings, Up-rated Ball Joints & Camber Pins			
Adjustable Lower Control Arm	TRC472	1pr	Additional +/- 2 Deg. Camber			
Sway Bar	RC0016FZ-33	1kt	33mm Adj. Sway Bar	RC0016RZ-20	1kt	20mm Adj. Sway Bar. Cannot be used with Airbags
SuperPro Easy-Lift Kit	TRC096FLK	1kt	45mm Lift and retains the standard suspension. 2 x Front Strut Spacers Only			
	TRC096LK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Rear Raising Blocks, 4 x U Bolts & Brake Hose Extension Kit.			
Diff Drop Kit	TRCHILUXDD	1	Corrects the front differential by 25mm			

TOYOTA Hilux		KUN 26, GGN25 - continued		2005 - 2015		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SuperPro</b>	For individual bushes refer to the SuperPro Catalogue					
<b>Strut Fitting Kit</b>	SPF4907K	1kt	Contains bushes & washers			
<b>Brake Hose to Diff Extension Mount</b>				SPF4359K	1kt	
<b>Spring Eye &amp; Shackle Bush Kit</b>				KIT096K	1kt	Bushes Only
<b>Brake Hose to Diff Extension Mount</b>				SPF4359K	1kt	
<b>Brake Proportioning Valve - Extension Bolt Kit</b>				W93206	1kt	
<b>Shackle, Pin &amp; Bush Kit</b>				KIT096SK	1kt	Greaseable Shackles, Pins & Bushes
<b>AIR BAGS</b>						
<b>Polyair Red Bag Kit</b>				75795	1kt	2" Raised Light Duty
<b>Polyair Bellows Kit</b>				88203	1kt	30-40mm Lift - No Drill Kit
				85103R	1kt	2" Lift
				88103R	1kt	2" Raised - No Drill Kit
<b>Ride Rite Airbag Kit</b>				RR4622	1kt	Std Height
<b>Load-Up Kit</b>				RR4733	1kt	Lift
				LU8022	1kt	
<b>Brake Bias Extension</b>						
<b>EFS</b>	10-1076	1ea	Brake proportioning valve extension bracket. Must be installed models prior 2014			
<b>ReadyStrut</b>			ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required			
<b>ReadyStrut Top Caps</b>	RS002	2ea	Strut Cap, Spring Seat, Nuts & Washers			
<b>Formula Struts &amp; King Springs</b>	HILUX101-FOR HILUX101T-FOR HILUX101H-FOR HILUX101HT-FOR HILUX101HD-FOR				1pr	
<b>RAW Struts &amp; King Springs</b>	HILUX101-RAW, HILUX101T-RAW, HILUX101H-RAW, HILUX101HT-RAW, HILUX08-NMRAW, HILUX08HT-NMRAW, HILUX08HD-NMRAW				1pr	
<b>Bilstein Struts &amp; King Springs</b>	HILUX101-BIL HILUX101T-BIL HILUX101H-BIL HILUX101HT-BIL HILUX101HD-BIL HILUX101HDT-BIL HILUX101HD-BIL				1pr	
<b>Bilstein Adjustable Struts &amp; King Springs</b>	HILUX101ADJ-BIL				1pr	
<b>Formula 4X4 KITS</b>	It is highly recommended to fit TRC8470/TRC6470/TRC6490 FUCA when lifting this vehicle					
	Refer above on part quantities and specifications					
<b>Formula Lift Kit</b>	HILUX-016	40008, 50001, KTFR-101, FLS-001, FUB-006, KIT096SK, SPF4359K				
<b>Formula Lift Kit with ReadyStruts</b>	HILUX-016R	HILUX101-FOR, 50001, FLS-001, FUB-006, KIT096S, SPF4359K				
<b>RAW Lift Kit</b>	HILUX-011	G6324, G6014Y, KTFR-101, FLS-001, FUB-006, KIT096SK, SPF4359K				
<b>RAW Lift Kit with ReadyStruts</b>	HILUX-011R	HILUX101-RAW, G6014Y, FLS-001, FUB-006, KIT096SK, SPF4359K				
<b>Bilstein Lift Kit</b>	HILUX-012	BE5-D563, BE5-D564, KTFR-101, FLS-001, FUB-006, KIT096SK, SPF4907K, SPF4359K				
<b>Bilstein Lift Kit with ReadyStruts</b>	HILUX-012R	HILUX101-BIL, BE5-D564, FLS-001, FUB-006, KIT096SK, SPF4359K				
<b>Bilstein Lift Kit with adjustable ReadyStruts</b>	HILUX-012ADJ	HILUX101ADJ-BIL, BE5-D564, FLS-001, FUB-006, KIT096SK, SPF4359K				
<b>Bilstein Lift Kit (H/Duty)</b>	HILUX-012HD	BE5-D563, BE5-D564, KTFR-101HD, FLS-001, FUB-006, KIT096SK, SPF4907K, SPF4359K				
<b>Bilstein Lift Kit (H/Duty) with ReadyStruts</b>	HILUX-012HDR	HILUX101HD-BIL, BE5-D564, FLS-001, FUB-006, KIT096SK, SPF4359K				
<b>RAW Load Kit with ReadyStruts</b>	HILUX-024R	HILUX08HD-NMRAW, NM326, FLS-004, FUB-006, CW603, KIT096SK, SPF4359K				

TOYOTA Hilux		GGN, GUN excluding 2022-on Rogue (wide-body)		2015 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Bilstein</i>	24-269377	2ea	Std Height	24-266451	2ea	Std Height
	BE5-D563	2ea	0-50mm Lift	BE5-D564	2ea	0-50mm Lift
<i>Formula</i>	40008	2ea	0-50mm Lift	50016	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6324M1	2ea	0-50mm Lift	G6014Y	2ea	0-50mm Lift
<i>Raw Nitro Max</i>	NM964 ReadyStruts Only	1pr	0-50mm Lift	NM965	2ea	0-50mm Lift
<i>Sachs Max</i>	317 521	2ea	0-40mm Lift	317 522	2ea	0-40mm Lift
<b>COIL SPRING</b>						
<i>King Springs</i>	KTFR-101	1pr	Raised			
	KTFR-101H	1pr	Raised 50-100kg			
	KTFR-101HD	1pr	Raised 100-250kg			
	KTFR-101HT	1pr	Raised Comfort 50-100kg			
	KTFR-101HDT	1pr	Raised Comfort 100-250kg			
<b>LEAF SPRING</b>						
<i>Formula</i>				FLS-095	2ea	Approx 45mm Lift at 0-300kg
				FLS-105	2ea	Approx 45mm Lift at 500kg
<b>LEAF SPRING KIT</b>						
<i>Formula</i>	FLSKIT-095	1ea	FLS-095 x 2, FUB-006 x 4, KIT219SK x 1			
	FLSKIT-105	1ea	FLS-105 x 2, FUB-006 x 4, KIT219SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
<i>Swing Shackle</i>				FSK-014	2ea	Greaseable
<i>Greaseable Pin</i>				FSP-001	2ea	Greaseable
<i>U Bolts</i>				FUB-006	4ea	
<i>Headlight Aiming Clip</i>				10-1103	1ea	HID Headlight Adjuster Clip
<b>ROLL CONTROL</b>						
<i>Adjustable Upper Control Arm</i>	TRC8470	1pr	adjustment range of between +0.5 to +3.5 degrees caster and -1.5 to +1.5 degrees camber over OE			
<i>Fixed Offset Upper Control Arm</i>	TRC6470	1pr	up to +2.8 degrees of caster and up to -0.1 degrees of camber			
<i>Fixed Offset Upper Control Arm</i>	TRC6490	1pr	Heavy Duty Arm Kit to suit 2" Lift and above -up to +1.5 degrees of caster and up to -0.5 degrees of camber			
<i>Sway Bar</i>	RC0081FZ-33	1kt	33mm Adj. Sway Bar	RC0081RZ-18	1kt	18mm Adj. Sway Bar. Cannot be used with Airbags
<i>SuperPro Easy-Lift Kit</i>	TRC096FLK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. 2 x Front Strut Spacers Only			
	TRC219LK	1kt	This kit will lift the vehicle approx. 45mm and retains the standard suspension. Kit contains 2 x Front Strut Spacers, 2 x Rear Raising Blocks, 4 x U Bolts & Brake Hose Extension Kit.			
<i>Diff Drop Kit</i>	TRCHILUXDD	1kt	Corrects the front differential by 25mm			
<i>Chassis Brace Drop Spacer Kit</i>	TRC9012	1kt	lower braces to clear sway bar when relocation plates used with F4R kits			
<i>SuperPro</i> For individual bushes refer to the SuperPro Catalogue						
<i>Strut Fitting Kit</i>	SPF4907K	1kt	Contains bushes & washers			
<i>Spring Eye &amp; Shackle Bush Kit</i>				KIT096K	1kt	Bushes Only
<i>Brake Line Spacer Kit</i>				SPF4855K	1kt	
<i>Shackle, Pin &amp; Bush Kit</i>				KIT219SK	1kt	Greaseable Shackles, Pins & Bushes & Fixed Pin Protection Cap
<i>Fixed Pin Protection Cap</i>				SPF4848K	1kt	
<i>Headlight Height Sensor Adjuster Bracket</i>				SPF5770K	1kt	



TOYOTA Hilux		GGN, GUN - continued		2015 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIR BAGS</b>						
Polyair Bellows Kit				88233-2	1kt	0-30mm Lift
				88233-2R	1kt	30-50mm Lift
Ride Rite Airbag Kit				RR4682	1kt	Std Height
				RR4718	1kt	Raised
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
ReadyStrut Top Caps	RS002	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	HILUX101-FOR HILUX101H-FOR HILUX101HD-FOR HILUX101HDT-FOR				1pr	
Raw Struts & King Springs	GEN8101-RAW, GEN8101T-RAW, GEN8101H-RAW, GEN8101HD-RAW, GEN8101HT-RAW, GEN808-NMRAW, GEN808HT-NMRAW, GEN808HD-NMRAW, GEN808HHD-NMRAW				1pr	
Bilstein Struts & King Springs	HILUX101-BIL, HILUX101T-BIL, HILUX101H-BIL, HILUX101HT-BIL, HILUX101HD-BIL, HILUX101HDT-BIL, HILUX101HHD-BIL				1pr	
Bilstein Adjustable Struts & King Springs	HILUX101NADJ-BIL				1pr	
<b>FORMULA 4X4 KITS</b>	<b>It is highly recommended to fit TRC8470/TRC8470/TRC8490 FUCA when lifting this vehicle</b>					
	Refer above on part quantities and specifications					
Formula Lift Kit	HILUX-022		40008, 50016, KTFR-101, FLS-095, FUB-006, KIT219SK, SPF4855K			
Formula Lift Kit with ReadyStruts	HILUX-022R		HILUX101-FOR, 50016, FLS-095, FUB-006, KIT219SK, SPF4855K			
RAW Lift Kit	HILUX-021		G6324M1, G6014Y, KTFR-101, FLS-095, FUB-006, KIT219SK, SPF4855K			
RAW Lift Kit with ReadyStruts	HILUX-021R		GEN8101-RAW, G6014Y, FLS-095, FUB-006, KIT219SK, SPF4855K			
Bilstein Lift Kit	HILUX-020		BE5-D563, BE5-D564, KTFR-101, FLS-095, FUB-006, KIT219SK, SPF4855K, SPF4907K			
Bilstein Lift Kit with ReadyStruts	HILUX-020R		HILUX101-BIL, BE5-D564, FLS-095, FUB-006, KIT219SK, SPF4855K			
Bilstein Lift Kit with adjustable ReadyStruts	HILUX-020ADJ		HILUX101NADJ-BIL, BE5-D564, FLS-095, FUB-006, KIT219SK, SPF4855K			
RAW Load Kit with ReadyStruts	HILUX-025R		GEN808HD-NMRAW, NM965, FLS-095, FUB-006, CW603, KIT219SK, SPF4855K			
Formula F4R Kit	HILUX-400F4R		91008, 92008, FLS-095, FUB-006, KIT219SK, SPF4855K			
	Formula F4R Adjustable Remote Reservoir Kit is set to: Front: 50mm or 2" Lift with Bull Bar & Winch (adjustment up to 75mm or 3" or to be lowered if required); Rear: 50mm or 2"					

TOYOTA Hilux		GGN, GUN Rogue Wide-body		2022 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40020	2ea	0-50mm Lift	50038	2ea	0-50mm Lift
<b>COIL SPRING</b>						
	KTFR-101H	1pr	Raised			
	KTFR-101HH	1pr	Raised 50-100kg			
<b>LEAF SPRING</b>						
Formula				FLS-095	2ea	Approx 45mm Lift at 0-300kg
				FLS-105	2ea	Approx 45mm Lift at 500kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-256	1ea	FLS-095 x 2, FUB-012 x 4, KIT219SK x 1			
	FLSKIT-257	1ea	FLS-105 x 2, FUB-012 x 4, KIT219SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
Swing Shackle				FSK-014	2ea	Greaseable
Greaseable Pin				FSP-001	2ea	Greaseable
U Bolts				FUB-012	4ea	
Headlight Aiming Clip				10-1103	1ea	HID Headlight Adjuster Clip
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6475	1pr	up to +2.8 degrees of caster and up to -0.1 degrees of camber			
Diff Drop Kit	TRCHILUXDD	1kt	corrects the front differential by 25mm			
Chassis Brace Drop Spacer Kit	TRC9012	1kt	lower braces to clear sway bar when relocation plates used with F4R kits			
SuperPro For individual bushes refer to the SuperPro Catalogue						
Strut Fitting Kit	SPF4907K	1kt	Contains bushes & washers			
Spring Eye & Shackle Bush Kit				KIT096K	1kt	Bushes Only
Brake Line Spacer Kit				SPF4855K	1kt	
Shackle, Pin & Bush Kit				KIT219SK	1kt	Greaseable Shackles, Pins & Bushes & Fixed Pin Protection Cap
Fixed Pin Protection Cap				SPF4848K	1kt	
<b>AIR BAGS</b>						
Polyair Bellows Kit				88233-2	1kt	0-30mm Lift
				88233-2R	1kt	30-50mm Lift
Ride Rite Airbag Kit				RR4682	1kt	Std Height
				RR4718	1kt	Raised
ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required						
ReadyStrut Top Caps	RS002	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	ROGUE101H-FOR				1pr	
<b>FORMULA 4X4 KITS</b>						
<b>It is highly recommended to fit TRC6475 FUCA when lifting this vehicle</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	ROGUE-001		40020, 50038, KTFR-101H, FLS-095, FUB-012, KIT219SK, SPF4855K, 10-1103			
Formula Lift Kit with ReadyStruts	ROGUE-001R		ROGUE101H-FOR, 50038, FLS-095, FUB-012, KIT219SK, SPF4855K, 10-1103			



**TOYOTA Kluger**

**U2**

**2000-2007**



Description	FRONT		Notes		REAR		Qty		Notes	
<b>SHOCK ABSORBER</b>										
<i>Formula</i>	317 149	1ea	0-30mm Lift		317 155	2ea	0-30mm Lift			
	317 150	1ea	0-30mm Lift		317 159	2ea	0-30mm Lift			
<b>COIL SPRING</b>										
<i>King Springs</i>	KTFR-111	1pr	Raised		KTRR-112	1pr	Raised			
<b>FORMULA 4X4 KITS</b>	Refer above on part quantities and specifications									
<i>Formula Lift Kit</i>	KLUG-001	317149, 317150, 317155, 317156, KTFR-111, KTRR-112								



TOYOTA LandCruiser		40 Series (SWB) Small Spring Eye		1969 - 1980		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6026Y	2ea	0-50mm lift	G6010Y	2ea	0-50mm lift
Sachs Max	316 395	2ea	0-40mm Lift (FJ40 1959-1975)	316 395	2ea	0-40mm Lift (FJ40 1959-1975)
Koni Heavy Track Oil	82-5020	2ea		82-2138	2ea	
<b>STEERING DAMPER</b>						
Replacement	14023	1ea				
Tough Dog	EXT5511	1ea	H/Duty			
<b>LEAF SPRING</b>						
Formula	FLS-041	2ea	Approx 50mm Lift at up to 65kg	FLS-040	2ea	Approx 50mm Lift at 100kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-040	1ea	FLS-041 x 2, FLS-040 x 2, C453-3 x 3, FUB-002 x 1, C453-3 x 4, GR343 x 4, GR346 x 4, KIT021K x 1			
Long travel <b>SHOCK ABSORBERS</b> must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
Swinging Shackle	GR343	2ea		GR343	2ea	
Fixed Pin	GR346	2ea		GR346	2ea	
U Bolts	FUB-002	1ea	RHS Inner			
	C453-3	3ea	RHS Outer and LHS	C453-3	4ea	
For individual bushes refer to the SuperPro Catalogue						
Spring Eye & Shackle Bush Kit	KIT021K	1kt	Front & Rear Kit			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				72998	1kt	Measure 1" & 7" Front of Axle

**TOYOTA LandCruiser 40 Series (SWB) Large Spring Eye 1980 - 1986**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Raw Nitro</i>	G6026Y	2ea		G6026Y	2ea	standard
	G6026Y	2ea	0-50mm lift	G6010Y	2ea	50mm lift
<i>Sachs Max</i>	316 395	2ea	0-40mm Lift (FJ40 1959-1975)	316 395	2ea	0-40mm Lift (FJ40 1959-1975)
<i>Koni Heavy Track Oil</i>	82-5020	2ea		82-2297	2ea	
<b>STEERING DAMPER</b>						
<i>Replacement</i>	14023	1ea				
<i>Tough Dog</i>	EXT15511	1ea	Hi/Duty			
<b>LEAF SPRING</b>						
<i>Formula</i>	FLS-039	2ea	Approx 50mm Lift at up to 65kg	FLS-038	2ea	Approx 50mm Lift at 100kg
<b>LEAF SPRING KIT</b>						
<i>Formula</i>	FLSKIT-038	1ea	FLS-039 x 2, FLS-038 x 2, C453-3 x 3, FUB-002 x 1, C453-3 x 4, GR353 x 4, GR351 x 4, KIT021K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
<i>Swinging Shackle</i>	GR353	2ea		GR353	2ea	
	GR353LH	1ea	Anti Inversion Style	GR353LH	1ea	Anti Inversion Style
	GR353RH	1ea	Anti Inversion Style	GR353RH	1ea	Anti Inversion Style
<i>Fixed Pin</i>	GR351	2ea		GR351	2ea	
<i>U Bolts</i>	FUB-002	1ea	RHS Inner			
	C453-3	3ea	RHS Outer and LHS	C453-3	4ea	
<i>SuperPro</i> For individual bushes refer to the SuperPro Catalogue						
<i>Spring Eye &amp; Shackle Bush Kit</i>	KIT027K	1kt	Front & Rear Kit			
<b>AIR BAGS</b>						
<i>Polyair Red Bag Kit</i>				72998	1kt	Measure 1" & 7" Front of Axle

**TOYOTA LandCruiser**

**45 Series - Small Spring Eye**

**1969 - 1980**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6026Y	2ea	0-50mm lift	G6010Y	2ea	0-50mm lift
Sachs Max	316 395	2ea	0-40mm Lift (FJ45 Wagon 1961-1984)	316 376	2ea	0-40mm Lift (FJ45 Wagon 1961-1984)
Koni Heavy Track Oil	82-5020	2ea		82-2297	2ea	
<b>STEERING DAMPER</b>						
Replacement	14023	1ea				
Tough Dog	EXT5511	1ea	H/Duty			
<b>LEAF SPRING</b>						
Formula	FLS-041	2ea	Approx 50mm Lift at up to 65kg	FLS-054	2ea	Approx 50mm Lift at 300kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-054	1ea	FLS-041 x 2, FLS-054 x 2, FUB-002 x 4, C416 x 4, GR343 x 2, GR344 x 1, GR345 x 1, GR346 x 2, GR347 x 2, KIT023K x 1			
<b>Long travel SHOCK ABSORBERS must be fitted with the above part numbers.</b>						
<b>SHACKLE/ U BOLTS</b>						
Swinging Shackle	GR343	2ea		GR344	1ea	RHS
				GR345	1ea	LHS
Fixed Pin	GR346	2ea		GR347	2ea	
U Bolts	FUB-002	4ea		C416	4ea	
<i>SuperPro</i> For individual bushes refer to the SuperPro Catalogue						
Spring Eye & Shackle Bush Kit	KIT023K	1KT	Front & Rear Kit			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				72906	1kt	Measure 1" & 7" Front of Axle
<b>FORMULA 4X4 KITS</b> Refer above on part quantities and specifications						
RAW Lift Kit	CRUS-005		G6026Y, G6010Y, FLS-041, FLS-054, C416, FUB-002, C416, GR343, GR344, GR345, GR346, GR347, KIT023K			

TOYOTA LandCruiser		45, 47 Series - Large Spring Eye		1980 - 1986		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Sachs Max	316 395	2ea	0-40mm Lift (FJ45 Wagon 1961-1984)	316 376	2ea	0-40mm Lift (FJ45 Wagon 1961-1984)
Raw Nitro	G6026Y	2ea	0-50mm lift	G6010Y	2ea	0-50mm lift
Koni Heavy Track Oil	82-5020	2ea		82-2297	2ea	
<b>STEERING DAMPER</b>						
Replacement	14023	1ea				
Tough Dog	EXT5511	1ea	H/Duty			
<b>LEAF SPRING</b>						
Formula	FLS-039	2ea	Approx 50mm Lift at up to 65kg	FLS-053	2ea	Approx 50mm Lift at 300kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-053	1ea	FLS-039 x 2, FLS-053 x 2, C449 x 1, FUB-002 x 3, C416 x 4, GR353 x 2, GR349 x 1, GR350 x 1, GR351 x 4, KIT027K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
Swinging Shackle				GR349	1ea	RHS
	GR353	2ea		GR350	1ea	LHS
	GR353LH	1ea	Anti Inversion Shackle	GR353LH	1ea	Anti Inversion Shackle
	GR353RH	1ea	Anti Inversion Shackle	GR353RH	1ea	Anti Inversion Shackle
Fixed Pin	GR351	2ea		GR351	2ea	
U Bolts	C449	1ea	RHS Inner			
	FUB-002	3ea	RHS Outer & LHS	C416	4ea	
For individual bushes refer to the SuperPro Catalogue						
Spring Eye & Shackle Bush Kit	KIT027K	1kt	Front & Rear Kit			
	KIT036HK	1kt	H/Duty Front & Rear Kit			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				72906	1kt	Measure 1" & 7" Front of Axle
Refer above on part quantities and specifications						
RAW Lift Kit	CRUS-006		G6026Y, G6010Y, FLS-039, FLS-053, C449, FUB-002, C416, GR349, GR350, GR351, GR353, KIT027K			



TOYOTA LandCruiser		60 Series		1980 - 1992		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Nitro	G6009Y	2ea	0-50mm Lift	G6010Y	2ea	8/80-10/85 Raised
				G6027Y	2ea	11/85-90 Std Height
				G6014Y	2ea	11/85-90 50mm Lift
Sachs Max	313 132	2ea	0-40mm Lift	316 376	2ea	0-40mm Lift
Koni Heavy Track Oil	82-2296	2ea	50mm Lift	82-2297	2ea	8/80-10/85 50mm Lift
				82-2294	2ea	10/85-90 50mm Lift
				82-2138	2ea	8/80-10/85 Std Height
	82-2205	2ea	Std Height	82-2272	2ea	11/85-90 Std Height
<b>STEERING DAMPER</b>						
Formula Big Bore	30006	1ea	H/Duty			
<b>LEAF SPRING</b>						
Formula	FLS-052	2ea	Approx 50mm Lift at up to 45kg Load	FLS-051	1ea	RHS Approx 50mm Lift at 250kg
				FLS-050	1ea	LHS Approx 50mm Lift at 250kg
				FLS-036	1ea	RHS Approx 50mm Lift at 300kg
	FLS-037	2ea	Approx 50mm Lift at 50 to 75kg of Load	FLS-035	1ea	LHS Approx 50mm Lift at 300kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-035	1ea	FLS-052 x 2, FLS-036 x 1, FLS-035 x 1, C436 x 4, FUB-002 x 4, GR353 x 4, GR351 x 4, KIT027K x 1			
	FLSKIT-036	1ea	FLS-037 x 2, FLS-036 x 1, FLS-035 x 1, C436 x 4, FUB-002 x 4, GR353 x 4, GR351 x 4, KIT027K x 1			
	FLSKIT-050	1ea	FLS-052 x 2, FLS-051 x 1, FLS-050 x 1, C436 x 4, FUB-002 x 4, GR353 x 4, GR351 x 4, KIT027K x 1			
	FLSKIT-051	1ea	FLS-037 x 2, FLS-051 x 1, FLS-050 x 1, C436 x 4, FUB-002 x 4, GR353 x 4, GR351 x 4, KIT027K x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
Swinging Shackle	GR353	2ea		GR353	2ea	
	GR353LH	1ea	Anti Inversion Shackle	GR353LH	1ea	Anti Inversion Shackle
	GR353RH	1ea	Anti Inversion Shackle	GR353RH	1ea	Anti Inversion Shackle
Fixed Pin	GR351	2ea		GR351	2ea	
U Bolts	C436	4ea		FUB-002	4ea	
SuperPro For individual bushes refer to the SuperPro Catalogue						
Spring Eye & Shackle Bush Kit	KIT027K	1kt	Kits Front & Rear			
Spring Eye & Shackle Bush Kit	KIT036HK	1kt	H/Duty Kits Front & Rear			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				72798	1kt	Std Height
				72998	1kt	2" Lift
Ride Rite Airbag Kit				RR4522	1kt	Std Height
FORMULA 4X4 KITS Refer above on part quantities and specifications						
RAW Lift Kit (up to 10/85)	CRUS-007		G6009Y, G6010Y, FLS-052, FLS-051, FLS-050, C436, FUB-002, GR353, GR351, GR353, GR351, KIT027K			
Koni Lift Kit (up to 10/85)	CRUS-015		82-2296, 82-2297, FLS-052, FLS-051, FLS-050, C436, FUB-002, GR353, GR351, GR353, GR351, 30006, KIT027K			
RAW Lift Kit (11/85-on)	CRUS-008		G6009Y, G6014Y, FLS-052, FLS-051, FLS-050, C436, FUB-002, GR353, GR351, GR353, GR351, KIT027K			
Koni Lift Kit (11/85-on)	CRUS-016		82-2296, 82-2294, FLS-052, FLS-051, FLS-050, C436, FUB-002, GR353, GR351, GR353, GR351, 30006, KIT027K			



**TOYOTA LandCruiser**

**75 Series (Troop Carrier)**

**1984 - 1999**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula Big Bore</i>	60003HD	2ea	0-50mm Lift Heavy Duty	60007	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6009Y	2ea	Std Height	G6014Y	2ea	Std Height
	G6002Y	2ea	50mm Lift	G6006Y	2ea	50mm Lift
<i>Bilstein</i>	B46-1004LT	2ea	0-50mm Lift	B46-1036LT	2ea	0-50mm Lift
<i>Sachs Max</i>	313 132	2ea	0-40mm Lift	316 394	2ea	0-40mm Lift
<i>Koni Heavy Track Oil</i>	82-2205	2ea	Std Height	82-2272	2ea	84-9/90 Std Height
				82-2312	2ea	9/90-94 Std Height
	82-2296	2ea	50mm Lift	82-2312	2ea	84-9/90 & 94-99 50mm Lift
				82-2348SP1	2ea	90-94 50mm Lift
<b>STEERING DAMPER</b>						
<i>Formula Big Bore</i>	30006	1ea				
<b>LEAF SPRING</b>						
<i>Formula</i>	FLS-028	2ea	Approx 50mm Lift at up to 50kg Load	FLS-034	2ea	Comfort Approx 50mm Lift at Constant 150kg
	FLS-029	2ea	Approx 50mm Lift at 60 to 100kg Load	FLS-047	2ea	Approx 50mm Lift at Constant 200kg
	FLS-030	2ea	Approx 50mm Lift at 110 to 150kg Load	FLS-046	2ea	Approx 50mm Lift at Constant 300kg
				FLS-045	2ea	Approx 50mm Lift at Constant 400kg
				FLS-044	2ea	Approx 50mm Lift at Constant 500kg
<b>LEAF SPRING KIT</b>						
<i>Formula</i>	FLSKIT-028	1ea	FLS-028 x 2, FLS-047 x 2, C436 x 4, FUB-002 x 4, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-034	1ea	FLS-029 x 2, FLS-034 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-044	1ea	FLS-029 x 2, FLS-044 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-045	1ea	FLS-029 x 2, FLS-045 x 2, C436 x 4, C416 x 4, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-047	1ea	FLS-029 x 2, FLS-047 x 2, C436 x 4, FUB-002 x 4, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-128	1ea	FLS-028 x 2, FLS-046 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-134	1ea	FLS-030 x 2, FLS-034 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-144	1ea	FLS-030 x 2, FLS-044 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-145	1ea	FLS-030 x 2, FLS-045 x 2, C436 x 4, C416 x 4, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-146	1ea	FLS-030 x 2, FLS-046 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-147	1ea	FLS-030 x 2, FLS-047 x 2, C436 x 4, FUB-002 x 4, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-173	1ea	FLS-028 x 2, FLS-045 x 2, C436 x 4, C416 x 4, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-174	1ea	FLS-028 x 2, FLS-044 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-175	1ea	FLS-028 x 2, FLS-034 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			

Long travel SHOCK ABSORBERS must be fitted with the above part numbers.

TOYOTA LandCruiser		75 Series (Troop Carrier) - continued		1984 - 1999		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHACKLE/ U BOLTS</b>						
Swinging Shackle	GR353	2ea		GR353	2ea	
	GR353LH	1ea	Anti Inversion Shackle	GR353LH	1ea	Anti Inversion Shackle
	GR353RH	1ea	Anti Inversion Shackle	GR353RH	1ea	Anti Inversion Shackle
Fixed Pin	GR351	2ea		GR354	2ea	
U Bolts				C416	4ea	Use With FLS-045,27
	C436	4ea		FUB-002	4ea	Use With FLS-047,25
SuperPro						
For individual bushes refer to the SuperPro Catalogue						
Spring Eye & Shackle Bush Kit	KIT018K	1kt	Fits Front & Rear			
	KIT037HK	1kt	Hi/Duty Fits Front & Rear			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				72898	1kt	Std Height - Light Load Kit
				72098	1kt	2" Lift - Light Load Kit
				72198	1kt	3" Lift - Light Load Kit
Polyair Bellows Kit				89420	1kt	0-30mm Lift
				89420R	1kt	30-75mm Lift
Ride Rite Airbag Kit	RR4700	1kt		RR4700	1kt	Std Height
	RR4501	1kt	75 Series 91 - 99	RR4708	1kt	Lift
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Big Bore Lift Kit	CRUS-047		60003HD, 60007, FLS-028, FLS-034, C436, FUB-002, GR353LH, GR353RH, GR353LH, GR353RH, KIT018K, GR351, GR354			
RAW Lift Kit	CRUS-011		G6002Y, G6006Y, FLS-028, FLS-034, C436, FUB-002, GR353LH, GR353RH, GR353LH, GR353RH, KIT018K, GR351, GR354			
Koni Lift Kit (01/90-on)	CRUS-017		82-2296, 82-2348SP1, FLS-028, FLS-034, C436, FUB-002, GR353LH, GR353RH, GR353LH, GR353RH, KIT018K, 30006, GR351, GR354			
RAW Load Kit (300kg)	CRUS-018		G6002Y, G6006Y, FLS-030, FLS-046, C436, FUB-002, GR353LH, GR353RH, GR353LH, GR353RH, KIT018K, GR351, GR354			
RAW Load Kit (500kg)	CRUS-020		G6002Y, G6006Y, FLS-030, FLS-044, C436, C416, GR353LH, GR353RH, GR353LH, GR353RH, KIT018K, GR351, GR354			



TOYOTA LandCruiser		75 Series (Cab Chassis)		1984 - 1999		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula Big Bore	60003HD	2ea	0-50mm Lift Heavy Duty	60007	2ea	0-50mm Lift
Raw Nitro	G6009Y	2ea	Std Height	G6014Y	2ea	Std Height
	G6002Y	2ea	0-50mm Lift	G6006Y	2ea	0-50mm Lift
Bilstein	B46-1004LT	2ea	0-50mm Lift	B46-1036LT	2ea	0-50mm Lift
Sachs Max	313 132	2ea	0-40mm Lift	316 394	2ea	0-40mm Lift
Koni Heavy Track Oil	82-2205	2ea	Std Height	82-2272	2ea	84-9/90 Std Height
				82-2312	2ea	9/90-94 Std Height
	82-2296	2ea	50mm Lift	82-2312	2ea	84-9/90 & 94-99 50mm Lift
				82-2348SP1	2ea	90-94 50mm Lift
<b>STEERING DAMPER</b>						
Formula Big Bore	30006	1ea				
<b>LEAF SPRING</b>						
Formula	FLS-028	2ea	Approx 50mm Lift at up to 50kg Load	FLS-034	2ea	Comfort Approx 50mm Lift at Constant 150kg
	FLS-029	2ea	Approx 50mm Lift at 60 to 100kg Load	FLS-047	2ea	Approx 50mm Lift at Constant 200kg
	FLS-030	2ea	Approx 50mm Lift at 110 to 150kg Load	FLS-046	2ea	Approx 50mm Lift at Constant 300kg
				FLS-045	2ea	Approx 50mm Lift at Constant 400kg
				FLS-044	2ea	Approx 50mm Lift at Constant 500kg
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-028	1ea	FLS-028 x 2, FLS-047 x 2, C436 x 4, FUB-002 x 4, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-034	1ea	FLS-029 x 2, FLS-034 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-044	1ea	FLS-029 x 2, FLS-044 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-045	1ea	FLS-029 x 2, FLS-045 x 2, C436 x 4, C416 x 4, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-047	1ea	FLS-029 x 2, FLS-047 x 2, C436 x 4, FUB-002 x 4, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-128	1ea	FLS-028 x 2, FLS-046 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-134	1ea	FLS-030 x 2, FLS-034 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-144	1ea	FLS-030 x 2, FLS-044 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-145	1ea	FLS-030 x 2, FLS-045 x 2, C436 x 4, C416 x 4, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-146	1ea	FLS-030 x 2, FLS-046 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-147	1ea	FLS-030 x 2, FLS-047 x 2, C436 x 4, FUB-002 x 4, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-173	1ea	FLS-028 x 2, FLS-045 x 2, C436 x 4, C416 x 4, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-174	1ea	FLS-028 x 2, FLS-044 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			
	FLSKIT-175	1ea	FLS-028 x 2, FLS-034 x 2, GR353 x 4, GR351 x 2, GR354 x 2, KIT018K x 1			

Long travel SHOCK ABSORBERS must be fitted with the above part numbers.



TOYOTA LandCruiser		75 Series (Cab Chassis) - continued		1984 - 1999		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHACKLE/ U BOLTS</b>						
Swinging Shackle	GR353	2ea		GR353	2ea	
	GR353LH	1ea	Anti Inversion Shackle	GR353LH	1ea	Anti Inversion Shackle
	GR353RH	1ea	Anti Inversion Shackle	GR353RH	1ea	Anti Inversion Shackle
Fixed Pin	GR351	2ea		GR354	2ea	
U Bolts				C416	4ea	Use With FLS-045,27
	C436	4ea		FUB-002	4ea	Use With FLS-047,25,77E
SuperPro <span style="float: right;">For individual bushes refer to the SuperPro Catalogue</span>						
Spring Eye & Shackle Bush Kit	KIT018K	1kt	Fits Front & Rear			
	KIT037HK	1kt	Hi/Duty Fits Front & Rear			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				72898	1kt	Std Height - Light Load Kit
				72098	1kt	2" Lift - Light Load Kit
				72198	1kt	3" Lift - Light Load Kit
Polyair Bellows Kit				89420	1kt	0-30mm Lift
				89420R	1kt	30-75mm Lift
Ride Rite Airbag Kit				RR4700	1kt	Std Height
	RR4501	1kt	75 Series 91 - 99	RR4708	1kt	Lift
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Big Bore Lift Kit	CRUS-047		60003HD, 60007, FLS-028, FLS-034, C436, FUB-002, GR353LH, GR353RH, GR353LH, GR353RH, KIT018K, GR351, GR354			
RAW Lift Kit	CRUS-011		G6002Y, G6006Y, FLS-028, FLS-034, C436, FUB-002, GR353LH, GR353RH, GR353LH, GR353RH, KIT018K, GR351, GR354			
Koni Lift Kit (01/90-on)	CRUS-017		82-2296, 82-2348SP1, FLS-028, FLS-034, C436, FUB-002, GR351, GR354, GR353LH, GR353RH, GR353LH, GR353RH, KIT018K, 30006			
RAW Load Kit (200KG)	CRUS-019		G6002Y, G6006Y, FLS-029, FLS-047, C436, FUB-002, GR351, GR354, GR353LH, GR353RH, GR353LH, GR353RH, KIT018K			
RAW Load Kit (500KG)	CRUS-020		G6002Y, G6006Y, FLS-030, FLS-044, C436, C416, GR351, GR354, GR353LH, GR353RH, GR353LH, GR353RH, KIT018K			



TOYOTA LandCruiser		76 Series		2007 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula Big Bore	60006	2ea	0-50mm Lift	60007	2ea	0-50mm Lift
Raw Nitro	G6005M1Y	2ea	Std Height	G6014Y	2ea	Std Height
Raw Nitro Max	G6003Y	2ea	50mm Lift	G6006Y	2ea	50mm Lift
Bilstein	NM996	2ea	0-50mm Lift	NM997	2ea	0-50mm Lift
Sachs Max	BE5-H422	2ea	0-50mm Lift	BE5-H146	2ea	0-50mm Lift
Koni Heavy Track	313 132	2ea	0-40mm Lift	316 388	2ea	0-40mm Lift
	82-2347	2ea	50mm Lift	82-2346	2ea	0-50mm Lift
	82-2347SP1	2ea	Std Height			
<b>STEERING DAMPER</b>						
Formula Big Bore	30007	1ea				
<b>COIL SPRING</b>						
King Springs	KTFR-74	1pr	Raised			
	KTFR-74T	1pr	Raised Comfort			
	KTFR-74HT	1pr	Raised 50-100kg			
	KTFR-74HD	1pr	Raised 100-250kg			
<b>LEAF SPRING</b>						
Formula				FLS-043	2ea	50mm Lift at 100kg Load
				FLS-042	2ea	50mm Lift at 250kg Load
				FLS-099	2ea	50mm Lift at 350kg Load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-043	1ea	FLS-043 x 2, FUB-002 x 4, KIT193SK x 1			
	FLSKIT-042	1ea	FLS-042 x 2, FUB-002 x 4, KIT193SK x 1			
	FLSKIT-099	1ea	FLS-099 x 2, FUB-002 x 4, KIT193SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
Swinging Shackle				FSK-003	2ea	Greaseable
Fixed Pin				FSP-003	2ea	Greaseable
U Bolts				FUB-002	4ea	
For individual bushes refer to the SuperPro Catalogue						
SuperPro						
Lift Correction Arm Kit	TRC1016	1set	Camber Correction and High Articulation Arm set suited to lifted vehicles			
Caster Correction Bush Kit	SPF1721K	1kt	2 Deg Caster Increase			
	SPF1721XK	1kt	3 Deg Caster Increase			
Spring Eye & Shackle Bush Kit				KIT194K	1kt	OE Shackles Only
				KIT156K	1kt	Bushes Only for Non SuperPro Greaseable Shackles
Shackle, Pin & Bush Kit				KIT193SK	1kt	Greaseable Shackles, Pins & Bushes
Brake Proportioning Valve - Extension Bolt Kit				W93207	1kt	
<b>ROLL CONTROL</b>						
Sway Bars	RC0054F-33	1kt	33mm Heavy Duty Swaybar	RC0054R-30	1kt	30mm Heavy Duty Swaybar

TOYOTA LandCruiser		76 Series		2007 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIR BAGS</b>						
Coil Rite Airbag Kit	CR5005	1kt				
Ride Rite Airbag Kit				RR4700	1kt	Std Height
				RR4708	1kt	Lift
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Big Bore Lift Kit	CRUS-765			60006, 60007, KTFR-74, FLS-043, FUB-002, SPF1721K, KIT193SK		
RAW Lift Kit	CRUS-761			G6003Y, G6006Y, KTFR-74, FLS-043, FUB-002, SPF1721K, KIT193SK		
Bilstein Lift Kit	CRUS-766			BE5-H422, BE5-H146, KTFR-74, FLS-043, FUB-002, SPF1721K, KIT193SK		
RAW Load Kit (250kg)	CRUS-762			NM996, NM997, KTFR-74, FLS-042, FUB-002, SPF1721K, KIT193SK, 30007		
RAW Load Kit (350kg)	CRUS-763			NM996, NM997, KTFR-74HD, FLS-099, FUB-002, SPF1721K, KIT193SK, 30007		

**TOYOTA LandCruiser**


**78 Series**

**1999 - on**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula Big Bore</i>	60006	2ea	0-50mm Lift	60007	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6005M1Y	2ea	Std Height	G6014Y	2ea	Std Height
<i>Raw Nitro Max</i>	NM996	2ea	Std Height -50mm Lift	NM997	2ea	Std Height -50mm Lift
<i>Bilstein</i>	BE5-H422	2ea	0-50mm Lift	BE5-H146	2ea	0-50mm Lift
<i>Sachs Max</i>	313 132	2ea	0-40mm Lift	316 388	2ea	0-40mm Lift
<i>Koni Heavy Track</i>	82-2347SP1	2ea	Std Height	8240-1187SPX	2ea	Std Height
<i>Koni Heavy Track Raid</i>	82-2347	2ea	50mm Lift	82-2348	2ea	0-50mm Lift
	90-5441	2ea	50mm Lift	90-5371SP1	2ea	0-50mm Lift
<b>STEERING DAMPER</b>						
<i>Formula Big Bore</i>	30006	1ea	H/Duty			
<b>COIL SPRING</b>						
<i>Kings Springs</i>	KTFS-74	1pr	Std Height			
	KTFR-74	1pr	Raised			
	KTFR-74T	1pr	Raised Comfort			
	KTFR-74HT	1pr	Raised Comfort 50-100kg			
	KTFR-74HD	1pr	Raised 100-250kg			
<b>LEAF SPRING</b>						
<i>Formula</i>				FLS-115P	2ea	Approx 50mm Lift at 400kg parabolic
				FLS-049	2ea	Approx 50mm Lift at 100kg
				FLS-048	2ea	Approx 50mm Lift at 200kg
				FLS-033	2ea	Approx 50mm Lift at 500kg
				FLS-032	2ea	Approx 50mm Lift at 700kg Approx 75mm Lift at 600kg
<b>LEAF SPRING KIT</b>						
<i>Formula</i>	FLSKIT-115P	1ea	FLS-115P x 2, C453-3 x 4, KIT156SK x 1 (up to 2007)			
	FLSKIT-032	1ea	FLS-032 x 2, C418 x 4, KIT156SK x 1 (up to 2007)			
	FLSKIT-033	1ea	FLS-033 x 2, C416 x 4, KIT156SK x 1 (up to 2007)			
	FLSKIT-048	1ea	FLS-048 x 2, C416 x 4, KIT156SK x 1 (up to 2007)			
	FLSKIT-049	1ea	FLS-049 x 2, C416 x 4, KIT156SK x 1 (up to 2007)			
	FLSKIT-195P	1ea	FLS-115P x 2, C453-3 x 4, KIT193SK x 1 (from 2007-on)			
	FLSKIT-132	1ea	FLS-032 x 2, C418 x 4, KIT193SK x 1 (from 2007-on)			
	FLSKIT-133	1ea	FLS-033 x 2, C416 x 4, KIT193SK x 1 (from 2007-on)			
	FLSKIT-148	1ea	FLS-048 x 2, C416 x 4, KIT193SK x 1 (from 2007-on)			
	FLSKIT-149	1ea	FLS-049 x 2, C416 x 4, KIT193SK x 1 (from 2007-on)			
<b>Long travel SHOCK ABSORBERS must be fitted with the above part numbers.</b>						
<b>SHACKLE/ U BOLTS</b>						
<i>Swinging Shackle</i>				FSK-003	2ea	V8 Diesel Greaseable Shackles
<i>Fixed Pin</i>				FSK-012	2ea	1999-2006
<i>U Bolts</i>				FSP-003	2ea	
				C453-3	4ea	to be used with FSL-115P
				C416	4ea	
			C418	4ea	to be used with FLS-032	
<b>MISC PARTS</b>						
<i>Sway Bar Spacer Mount</i>	10-1081	1kt	Front sway bar 25mm spacer blocks			
<i>Brake Prop. Valve Spacer Block</i>				10-1009	1kt	Should be used with 50-75mm Lift

TOYOTA LandCruiser		78 Series - continued		1999 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SuperPro</b>						
For individual bushes refer to the SuperPro Catalogue						
Lift Correction Arm Kit	TRC1016	1set	Camber Correction and High Articulation Arm set suited to lifted vehicles			
Caster Correction Bush Kit	SPF1721K	1kt	2 Deg Caster Increase			
	SPF1721XK	1kt	3 Deg Caster Increase			
Spring Eye & Shackle Bush Kit				KIT087K	1kt	OE Shackles Only
Shackle, Pin & Bush Kit				KIT156SK	1kt	Greaseable Shackles, Pins & Bushes up to 2007
Spring Eye & Shackle Bush Kit				KIT194K	1kt	V8 Diesel OE Shackles Only 2007-on
				KIT156K	1kt	V8 Diesel Bushes Only for non SuperPro Greaseable Shackles up to 2007
Shackle, Pin & Bush Kit				KIT193SK	1kt	V8 Diesel Greaseable Shackles, Pins & Bushes 2007-on
Brake Proportioning Valve - Extension Bolt Kit				W93207	1kt	
Tailshaft Spacer Kit				W93225	1kt	Reduces driveline vibration
<b>ROLL CONTROL</b>						
Sway Bars	RC0054F-33	1kt	33mm Heavy Duty Swaybar 4/07-on	RC0054R-30	1kt	30mm Heavy Duty Swaybar 4/07-on
<b>AIR BAGS</b>						
Polyair Red Bag Kit				72898	1	Std Height - Light Load Kit
Polyair Bellows Kit				89420	1	0-30mm Lift
				89420R	1	30-75mm Lift
Coil Rite Airbag Kit	CR5005	1kt	All models			
Ride Rite Airbag Kit				RR4700	1kt	
				RR4708	1kt	Raised
<b>ADJUSTABLE PANHARD ROD</b>						
	PRTYT10RR	1ea	V8 Diesel			
	PRTYT11FT	1ea	6 Cyl.			
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Big Bore Lift Kit	CRUS-042		60006, 60007,KTFR-74, FLS-049, C416, SPF1721K, KIT156SK			
RAW Lift Kit	CRUS-014		G6003Y, G6006Y,KTFR-74, FLS-049, C416, SPF1721K, KIT156SK			
RAW Lift Kit (200kg Constant Load)	CRUS-013		G6003Y, G6006Y,KTFR-74, FLS-048, C416, SPF1721K, KIT156SK			
RAW Load Kit (500kg to GVM)	CRUS-022		NM996, NM997, KTFR-74, FLS-033, C416, SPF1721K, KIT156SK			

TOYOTA LandCruiser		79 Series		1999 - 2007			
Description	FRONT	Qty	Notes	REAR	Qty	Notes	
<b>SHOCK ABSORBER</b>							
Formula Big Bore	60006	2ea	0-50mm Lift	60007	2ea	0-50mm Lift	
Raw Nitro	G6005Y	2ea	Std Height	G6014Y	2ea	Std Height	
Raw Nitro Max	G6003Y	2ea	50mm Lift Height	G6006Y	2ea	50mm Lift	
Bilstein	NM996	2ea	0-50mm Lift	NM997	2ea	0-50mm Lift	
Sachs Max	BE5-H422	2ea	0-50mm Lift	BE5-H146	2ea	0-50mm Lift	
Koni Heavy Track	313 132	2ea	0-40mm Lift	316 388	2ea	0-40mm Lift	
Koni Heavy Track Raid	82-2347SP1	2ea	Std Height	8240-1187SPX	2ea	Std Height	
	82-2347	2ea	50mm Lift	82-2348	2ea	0-50mm Lift	
	90-5441	2ea	50mm Lift	90-5371SP1	2ea	0-50mm Lift	
<b>STEERING DAMPER</b>							
Formula Big Bore	30006	1ea					
<b>COIL SPRING</b>							
Kings Springs	KTFR-74	1pr	Raised				
	KTFR-74T	1pr	Raised Comfort				
	KTFR-74HT	1pr	Raised 50-100kg				
	KTFR-74HD	1pr	Raised 100-250kg				
<b>LEAF SPRING</b>							
Formula				FLS-115P	2ea	Approx 50mm Lift at 400kg parabolic	
				FLS-049	2ea	Approx 50mm Lift at 200kg	
				FLS-048	2ea	Approx 50mm Lift at 300kg	
				FLS-033	2ea	Approx 50mm Lift at 600kg	
				FLS-032	2ea	Approx 50mm Lift at 700kg Approx 75mm Lift at 600kg	
<b>LEAF SPRING KIT</b>							
Formula	FLSKIT-115P	1ea	FLS-115P x 2, C453-3 x 4, KIT156SK x 1				
	FLSKIT-200	1ea	FLS-049 x 2, C416 x 4, KIT156SK x 1				
	FLSKIT-201	1ea	FLS-048 x 2, C416 x 4, KIT156SK x 1				
	FLSKIT-202	1ea	FLS-033 x 2, C416 x 4, KIT156SK x 1				
	FLSKIT-203	1ea	FLS-032 x 2, C418 x 4, KIT156SK x 1				
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.							
<b>SHACKLE/ U BOLTS</b>							
Swinging Shackle				FSK-012	2ea	Greaseable	
Fixed Pin				FSP-003	2ea	Greaseable	
U Bolts				C416	4ea		
				C418	4ea	Use with FLS-032	
<b>MISC PARTS</b>							
Sway Bar Spacer Mount	10-1081	1kt	Front sway bar 25mm spacer blocks				
Brake Prop. Valve Spacer Block				10-1009	1kt	Should be used with 50-75mm Lift	

TOYOTA LandCruiser		79 Series - continued		1999 - 2007		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SuperPro</b>						
For individual bushes refer to the SuperPro Catalogue						
Caster Correction Bush Kit	SPF1721K	1kt	2 Deg Caster Increase			
	SPF1721XK	1kt	3 Deg Caster Increase			
Spring Eye & Shackle Bush Kit				KIT156K	1kt	Bushes Only for Greaseable Shackles
Shackle, Pin & Bush Kit				KIT156SK	1kt	Greaseable Shackles, Pins & Bushes
Spring Eye & Shackle Bush Kit				KIT144K	1kt	Bushes Only for OE Shackles Only
Brake Proportioning Valve - Extension Bolt Kit				W93207	1kt	
Tailshaft Spacer Kit				W93225	1kt	Reduces driveline vibration
<b>AIR BAGS</b>						
Polyair Red Bag Kit				72898	1	Std Height - Light Load Kit
Polyair Bellows Kit				89420	1	0-30mm Lift
				89420R	1	30-75mm Lift
Coil Rite Airbag Kit	CR5005	1kt	All models			
Ride Rite Airbag Kit				RR4700	1kt	Std Height
				RR4708	1kt	Raised
<b>ADJUSTABLE PANHARD ROD</b>						
	PRTYT11FT	1ea				
<b>FORMULA 4x4 KITS</b>						
Refer above on part quantities and specifications						
Formula Big Bore Lift Kit	CRUS-042			60006, 60007,KTFR-74, FLS-049, C416, SPF1721K, KIT156SK		
RAW Lift Kit	CRUS-014			G6003Y, G6006Y,KTFR-74, FLS-049, C416, SPF1721K, KIT156SK		
RAW Lift Kit (Bar & Winch)	CRUS-030			G6003Y, G6006Y,KTFR-74HD, FLS-049, C416, SPF1721K, KIT156SK		
Bilstein Lift Kit	CRUS-040			BE5-H422, BE5-H146, KTFR-74, FLS-049, C416, SPF1721K, KIT156SK		
RAW Load Kit (Constant 300kg to GVM)	CRUS-031			G6003Y, G6006Y,KTFR-74HD, FLS-048, C416, SPF1721K, KIT156SK		
RAW Load Kit (Constant 600kg to GVM)	CRUS-032			NM996, NM997, KTFR-74HD, FLS-033, C416, SPF1721K, KIT156SK		





TOYOTA LandCruiser		79 Series		2007 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula Big Bore</i>	60006	2ea	0-50mm Lift	60007	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6005Y	2ea	Std Height	G6014Y	2ea	Std Height
<i>Raw Nitro Max</i>	G6003Y	2ea	50mm Lift Height	G6006Y	2ea	50mm Lift
<i>Bilstein</i>	NM996	2ea	0-50mm Lift	NM997	2ea	0-50mm Lift
<i>Sachs Max</i>	BE5-H422	2ea	0-50mm Lift	BE5-H146	2ea	0-50mm Lift
<i>Koni Heavy Track</i>	313 132	2ea	0-40mm Lift	316 388	2ea	0-40mm Lift
<i>Koni Heavy Track Raid</i>	82-2347SP1	2ea	Std Height	8240-1187SPX	2ea	Std Height
	82-2347	2ea	50mm Lift	82-2348	2ea	0-50mm Lift
	90-5441	2ea	50mm Lift	90-5371SP1	2ea	0-50mm Lift
<b>STEERING DAMPER</b>						
<i>Formula Big Bore</i>	30006	1ea	Single Cab 6 Cylinder			
	30007	1ea	Single Cab V8 & Dual Cab			
<b>COIL SPRING</b>						
<i>Kings Springs</i>	KTFR-74	1pr	Raised			
	KTFR-74T	1pr	Raised Comfort			
	KTFR-74HT	1pr	Raised 50-100kg			
	KTFR-74HD	1pr	Raised 100-250kg			
<b>LEAF SPRING</b>						
<i>Formula</i>				FLS-115P	2ea	Approx 50mm Lift at 400kg parabolic
				FLS-049	2ea	Approx 50mm Lift at 200kg
				FLS-048	2ea	Approx 50mm Lift at 300kg
				FLS-033	2ea	Approx 50mm Lift at 600kg
				FLS-032	2ea	Approx 50mm Lift at 700kg
						Approx 75mm Lift at 600kg
<b>LEAF SPRING KIT</b>						
<i>Formula</i>	FLSKIT-195P	1ea	FLS-115P x 2, C453-3 x 4, KIT193SK x 1			
	FLSKIT-196	1ea	FLS-049 x 2, C416 x 4, KIT193SK x 1			
	FLSKIT-197	1ea	FLS-048 x 2, C416 x 4, KIT193SK x 1			
	FLSKIT-198	1ea	FLS-033 x 2, C416 x 4, KIT193SK x 1			
	FLSKIT-199	1ea	FLS-032 x 2, C418 x 4, KIT193SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/U BOLTS</b>						
<i>Swinging Shackle</i>				FSK-003	2ea	Greaseable
<i>Fixed Pin</i>				FSP-003	2ea	Greaseable
<i>U Bolts</i>				C416	4ea	
				C418	4ea	Use with FLS-032
<b>MISC PARTS</b>						
<i>Sway Bar Spacer Mount</i>	10-1081	1kt	Front sway bar 25mm spacer blocks			
<i>Brake Proportioning Valve - Extension Bolt Kit</i>				W93207	1kt	
<i>Brake Prop. Valve Spacer Block</i>				10-1009	1kt	Should be used with 50-75mm Lift

TOYOTA LandCruiser		79 Series - continued		2007 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SuperPro</b>						
For individual bushes refer to the SuperPro Catalogue						
Lift Correction Arm Kit	TRC1016	1set	Camber Correction and High Articulation Arm set suited to lifted vehicles, suits Models up to 2016 with straight Arm only			
Caster Correction Bush Kit	SPF1721K	1kt	2 Deg Caster Increase			
	SPF1721XK	1kt	3 Deg Caster Increase			
Spring Eye & Shackle Bush Kit				KIT194K	1kt	Bushes Only for OE Shackles
Spring Eye & Shackle Bush Kit				KIT193K	1kt	Bushes Only for Formula Greaseable Shackles
Shackle, Pin & Bush Kit				KIT193SK	1kt	Greaseable Shackles, Pins & Bushes
<b>ROLL CONTROL</b>						
Sway Bars	RC0054F-33	1kt	33mm Heavy Duty Swaybar	RC0054R-30	1kt	30mm Heavy Duty Swaybar (without OE bracket mounts)
				RC0054RB-30	1kt	30mm Heavy Duty Swaybar (with OE bracket mounts)
<b>AIR BAGS</b>						
Polyair Red Bag Kit				72898	1	Std Height - Light Load Kit
Polyair Bellows Kit				89420	1	0-30mm Lift
				89420R	1	30-75mm Lift
Coil Rite Airbag Kit	CR5005	1kt	All models			
Ride Rite Airbag Kit				RR4700	1kt	Std Height
				RR4708	1kt	Raised
<b>ADJUSTABLE PANHARD ROD</b>						
	PRTYT10FT	1ea				
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Big Bore Lift Kit	CRUS-045		60006, 60007, KTFR-74, FLS-049, C416, SPF1721K, KIT193SK			
RAW Lift Kit	CRUS-034		G6003Y, G6006Y, KTFR-74, FLS-049, C416, SPF1721K, KIT193SK			
RAW Lift Kit (Bar & Winch)	CRUS-035		G6003Y, G6006Y, KTFR-74HD, FLS-049, C416, SPF1721K, KIT193SK			
Bilstein Lift Kit	CRUS-036		BE5-H422, BE5-H146, KTFR-74, FLS-049, C416, SPF1721K, KIT193SK			
Bilstein Lift Kit (Bar & Winch)	CRUS-037		BE5-H422, BE5-H146, KTFR-74HD, FLS-048, C416, SPF1721K, KIT193SK			
RAW Load Kit (Constant 300kg)	CRUS-038		G6003Y, G6006Y, KTFR-74HD, FLS-048, C416, SPF1721K, KIT193SK			
RAW Load Kit (Constant 600kg to GVM)	CRUS-039		NM996, NM997, KTFR-74HD, FLS-033, C416, SPF1721K, KIT193SK			



TOYOTA LandCruiser		80 Series		1990 - 1997			
Description	FRONT	Qty	Notes	REAR	Qty	Notes	
<b>SHOCK ABSORBER</b>							
<i>Formula Big Bore</i>	60002	2ea	0-50mm Lift	60003HD	2ea	0-50mm Lift Heavy Duty	
<i>Raw Nitro</i>	G6001Y	2ea	0-60mm Lift	G6002Y	2ea	0-60mm Lift	
<i>Raw Nitro Max</i>	NM272	2ea	0-60mm Lift	NM273	2ea	0-60mm Lift	
	NM497	2ea	70-100mm Lift	NM498	2ea	70-100mm Lift	
<i>Sachs Max</i>	316 393	2ea	0-40mm Lift	317 232	2ea	0-40mm Lift	
	82-2385SP1	2ea	Std Height	82-2386SP1	2ea	Std Height	
<i>Koni Heavy Track</i>	82-2385	2ea	50mm Lift	82-2386	2ea	50mm Lift	
	88-1688	2ea	50mm Lift EHD	88-1689	2ea	50mm Lift EHD	
<i>Koni Heavy Track Raid</i>	90-5389	2ea	50mm Lift	90-5390	2ea	50mm Lift	
<i>Bilstein</i>	B46-1477S	2ea	0-40mm Lift	B46-1478S	2ea	0-40mm Lift	
	B46-1477LT	2ea	50-65mm Lift	B46-1478LT	2ea	50-65mm Lift	
<b>STEERING DAMPER</b>							
<i>Formula Big Bore</i>	30006	1ea	95-03/1998				
<b>COIL SPRING</b>							
<i>King Springs 90 - 8/91</i>	KTFS-69	1pr	Std Height	KTRS-70	1pr	Std Height	
	KFFS-69C	1pr	Std Height Comfort	KTRS-70C	1pr	Std Height Comfort	
	KTFR-69	1pr	Raised	KTRR-70	1pr	Raised	
	KTFR-69T	1pr	Raised Comfort	KTRR-70C	1pr	Raised Comfort	
	KTFR-69HD	1pr	Raised 50-100kg	KTPR-70	1pr	Raised 100-250kg	
<i>King Springs 9/91 - 3/98</i>	KTFS-94	1pr	Std Height	KTRS-95	1pr	Std Height	
	KTFS-94C	1pr	Std Height Comfort	KTRS-95C	1pr	Std Height Comfort	
	KTFS-69	1pr	Raised	KTRS-70	1pr	Raised	
	KTFS-69C	1pr	Raised Comfort	KTRS-70HD	1pr	Raised 100-300kg	
	KTFR-69	1pr	Raised 50-100kg	KTPR-70	1pr	Raised Comfort 100-250kg	
	KTFR-69HD	1pr	Raised 100-250kg	KTRR-70HD	1pr	Raised 300-500kg	
	KTFR-69HHD	1pr	Raised EHD	KTRR-70HHD	1pr	Raised 500kg +	
SPF1721K recommended when fitting raised height coil springs to correct caster.							
<b>SuperPro</b>							
For individual bushes refer to the SuperPro Catalogue							
<i>Lift Correction Arm Kit</i>	TRC1016	1set	Camber Correction and High Articulation Arm set suited to lifted vehicles				
	SPF1726K	2ea	10mm Lift				
<i>Coil Spring Spacer</i>	SPF1725K	2ea	20mm Lift		SPF1724-15K	2ea	15mm Lift
	SPF962K	2ea	30mm Lift		SPF1724-30K	2ea	30mm Lift
<i>SuperPro Caster Correction</i>	SPF1721K	1kt	Approx. 2° adjustment				
	SPF1721XK	1kt	Approx. 3° adjustment				
<i>Trailing Arm &amp; Radius Rod Kit</i>	KIT085K	1kt	Complete Kit Fits Front & Rear Std Height				
<i>Tailshaft Spacer Kit</i>	KIT058ADJK	1kt	Complete Kit Fits Front & Rear Caster Increase		W93225	1kt	Reduces driveline vibration
<b>ROLL CONTROL</b>							
<i>Sway Bars</i>				RC0070R-30	1kt	30mm Heavy Duty Swaybar Kit	

TOYOTA LandCruiser		80 Series - continued		1990 - 1997		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIR BAGS</b>						
Polyair Red Bag Kit 90 - 7/91				15995	1kt	Std Height
				15095	1kt	1" Lift
				95996	1kt	2" Lift
Polyair Red Bag Kit 8/91 - on				15895	1kt	Std Height
				15995	1kt	1" Lift
				15095	1kt	2" Lift
Polyair Ultimate Kit 8/91 - on				15895ULT	1kt	Std Height
				15995ULT	1kt	1" Lift
				15095ULT	1kt	2" Lift
Coil Rite Airbag kit 90 - 7/91	CR5006	1kt		CR5050	1kt	Std Height
				CR5051	1kt	1" Lift
				CR5052	1kt	2" Lift
Coil Rite Airbag kit 8/91 - on	CR5006	1kt		CR5049	1kt	Std Height
				CR5050	1kt	1" Lift
				CR5051	1kt	2" Lift
On-Air Air Bag Kit	OA4525	1kt	Full Air Conversion	OA6003	1kt	Full Air Conversion
<b>ADJUSTABLE PANHARD ROD</b>						
Whiteline	KPR007	1ea	Heavy duty off-car adjustable	KPR008	1ea	Heavy duty off-car adjustable
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Big Bore Lift Kit (90 - 08/91)	CRUS-043			60002, 60003HD, KTRFR-69, KTRR-70, SPF1721K		
Formula Big Bore Lift Kit (09/91 - 03/98)	CRUS-044			60002, 60003HD, KTFS-69, KTRS-70, SPF1721K		
RAW Lift Kit (90 - 08/91)	CRUS-001			G6001Y, G6002Y, KTRFR-69, KTRR-70, SPF1721K		
RAW Lift Kit (09/91 - 03/98)	CRUS-002			G6001Y, G6002Y, KTFS-69, KTRS-70, SPF1721K		
Bilstein Lift Kit (01/95 - 03/98)	CRUS-003			B46-1477S, B46-1478S, KTFS-69, KTRS-70, 30006, SPF1721K		
RAW Load Kit (09/91 - 03/98)	CRUS-004			G6001Y, G6002Y, KTFS-69, KTRS-70HD, SPF1721K		
RAW Load Kit Steel Bar & Winch (09/91 - 03/98)	CRUS-024			NM272, NM273, KTFS-69HD, KTRS-70HD, SPF1721K		
Formula F4R Kit (1990-1991)	CRUS-400F4R			91015, 92015, KTRR-70, SPF1721K		
	Formula F4R Adjustable Remote Reservoir Kit is set to: Front: 50mm or 2" Lift with Bull Bar & Winch (adjustment up to 75mm or 3" or to be lowered if required); Rear: 50mm or 2"					
Formula F4R Kit (1991-1998)	CRUS-401F4R			91015, 92015, KTRS-70, SPF1721K		
	Formula F4R Adjustable Remote Reservoir Kit is set to: Front: 50mm or 2" Lift with Bull Bar & Winch (adjustment up to 75mm or 3" or to be lowered if required); Rear: 50mm or 2"					



TOYOTA LandCruiser		100 Series (IFS, Torsion Bar Front)		1998 - 2007		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula Big Bore	60001	2ea	0-50mm Lift	60003HD	2ea	0-50mm Lift Heavy Duty
Bilstein	BE5-B340M	2ea	50mm Lift	BE5-B341M	2ea	50mm Lift
	BE5-2739	2ea	Std Height	BE5-2740	2ea	Std Height
Sachs Max	313 130	2ea	0-40mm Lift	313 131	2ea	0-40mm Lift
Koni Heavy Track	8240-1183SPX	2ea	Std Height	8240-1184SPX	2ea	Std Height
Koni Heavy Track Raid	90-5397SP1	2ea	50mm Lift	90-5398SP1	2ea	50mm Lift
<b>COIL SPRING</b>						
King Springs				KTPR-95	1pr	Std Height
				KTPR-70	1pr	Raised
				KTRS-70HD	1pr	Raised 100-300kg
				KTRR-70HD	1pr	Raised 300-500kg
				KTRR-70HHD	1pr	Raised 500kg+
<b>TORSION BARS</b>						
EFS	TB-1600	1pr	Petrol 32mm OD - 1160mm Long			
	TB-1610	1pr	Diesel 32mm OD - 1210mm long			
Torsion Bar Reinforcing Kit	TB-LCB	1kt	Fits To Lower C/Arm			
SuperPro	For individual bushes refer to the SuperPro Catalogue					
Coil Spring Spacer				SPF1724-15K	2ea	15mm Lift
				SPF1724-30K	2ea	30mm Lift
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6720	1pr	2.5-4 degrees caster & 0 and -1 degrees camber at 50mm lift			
Diff Drop Kit	TRCLC100DD	1kt	corrects the front differential by 25mm			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				15995	1kt	Std Height
				15995	1kt	1" Lift
				15095	1kt	2" Lift
Polyair Ultimate Kit				15995ULT	1kt	Std Height
				15995ULT	1kt	1" Lift
				15095ULT	1kt	2" Lift
Coil Rite Airbag Kit				CR5050	1kt	Std Height
				CR5052	1kt	2" Lift
On-Air Airbag Kit				QA6003	1kt	
<b>ADJUSTABLE PANHARD ROD</b>						
				PRTYT09RR	1ea	
<b>FORMULA 4X4 KITS</b>						
It is highly recommended to fit TRC6720 FUCA when lifting this vehicle						
Refer above on part quantities and specifications						
Formula Big Bore Lift Kit	CRUS-046			60001, 60003HD, KTPR-70, TB-LCB		
RAW Lift Kit	CRUS-026			NM271, NM273M1, KTPR-70, TB-LCB		
Bilstein Lift Kit (V8)	CRUS-027			BE5-B340M, BE5-B341M, TB-1600, KTPR-70, TB-LCB		
Bilstein Lift Kit (Diesel & 6CYL Petrol)	CRUS-028			BE5-B340M, BE5-B341M, TB-1610, KTPR-70, TB-LCB		
RAW Load Kit	CRUS-029			NM271, NM273M1, KTRS-70HD, TB-LCB		



TOYOTA LandCruiser		105 Series (Coil Front & Rear)		1998 - 2007		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula Big Bore	60002	2ea	0-50mm Lift	60003HD	2ea	0-50mm Lift Heavy Duty
Raw Nitro	G6001Y	2ea		G6002Y	2ea	
Raw Nitro Max	NM272	2ea	0-60mm Lift	NM273	2ea	0-60mm Lift
	NM497	2ea	70-100mm Lift	NM498	2ea	70-100mm Lift
Bilstein	B46-1477S	2ea	0-40mm Lift	B46-1478S	2ea	0-40mm Lift
	B46-1477LT	2ea	50-65mm Lift	B46-1478LT	2ea	50-65mm Lift
Sachs Max	316 393	2ea	0-40mm Lift	317 232	2ea	0-40mm Lift
Koni Heavy Track	82-2385SP1	2ea	Std Height	82-2386SP1	2ea	Std Height
	82-2385	2ea	50mm Lift	82-2386	2ea	50mm Lift
	88-1688	2ea	50mm Lift EHD	88-1689	2ea	50mm Lift EHD
Koni Heavy Track Raid	90-5389	2ea	50mm Lift	90-5390	2ea	50mm Lift
<b>STEERING DAMPER</b>						
Formula Big Bore	30006	1ea	H/Duty			
<b>COIL SPRING</b>						
King Springs	KTFS-94	1pr	Std Height	KTRS-95	1pr	Std Height
	KTFS-69	1pr	Raised	KTRS-70	1pr	Raised
	KTFS-69C	1pr	Raised Comfort	KTRS-70C	1pr	Raised Comfort
	KTFR-69	1pr	Raised 50-100kg	KTRP-70	1pr	Raised Comfort 100-250kg
	KTFR-69HD	1pr	Raised Comfort 100-250kg	KTRS-70HD	1pr	Raised 100-300kg
				KTRR-70HD	1pr	Raised 300-500kg
SPF1721K recommended when fitting raised height coil springs to correct caster.						
<b>SuperPro</b>						
For individual bushes refer to the SuperPro Catalogue						
Lift Correction Arm Kit	TRC1016	1set	Camber Correction and High Articulation Arm set suited to lifted vehicles			
Coil Spring Spacer	SPF1726K	2ea	10mm Lift	SPF1724-15K	2ea	15mm Lift
	SPF1725K	2ea	20mm Lift	SPF1724-30K	2ea	30mm Lift
	SPF962K	2ea	30mm Lift			
SuperPro Caster Correction	SPF1721K	1kt	Approx. 2° adjustment			
	SPF1721XK	1kt	Approx. 3° adjustment			
Trailing Arm & Radius Rod Kit	KIT058K	1kt	Complete Kit Fits Front & Rear Std Height			
Trailing Arm & Radius Rod Kit	KIT058ADJK	1kt	Complete Kit Fits Front & Rear Raised Height			
Tailshaft Spacer Kit				W93225	1kt	Reduces driveline vibration

TOYOTA LandCruiser		105 Series (Coil Front & Rear) - continued		1998 - 2007		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIR BAGS</b>						
Polyair Red Bag Kit				15895	1kt	Std Height
				15995	1kt	1" Lift
				15095	1kt	2" Lift
Polyair Ultimate Kit				15895ULT	1kt	Std Height
				15995ULT	1kt	1" Lift
				15095ULT	1kt	2" Lift
Coil Rite Airbag kit	CR5006	1kt	Std Height	CR5050	1kt	Std Height
				CR5052	1kt	50mm Lift
On-Air Airbag Kit	OA4525	1kt		OA6003	1kt	
<b>ADJUSTABLE PANHARD ROD</b>						
Whiteline	KPR007	1ea	Heavy duty off-car adjustable	KPR008	1ea	Heavy duty off-car adjustable
<b>FORMULA 4X4 KITS</b>						
Refer above on part quantities and specifications						
Formula Big Bore Lift Kit	CRUS-044			60002, 60003HD, KTFS-69, KTRS-70, SPF1721K		
RAW Lift Kit	CRUS-002			G6001Y, G6002Y, KTFS-69, KTRS-70, SPF1721K		
Bilstein Lift Kit	CRUS-003			B46-1477S, B46-1478S, KTFS-69, KTRS-70, 30006, SPF1721K		
RAW Load Kit	CRUS-004			G6001Y, G6002Y, KTFS-69, KTRS-70HD, SPF1721K		
RAW Load Kit (Steel Bar & Winch)	CRUS-024			NM272, NM273, KTFS-69HD, KTRS-70HD, SPF1721K		
Formula F4R Kit	CRUS-401F4R			91015, 92015, KTRS-70, SPF1721K		
	Formula F4R Adjustable Remote Reservoir Kit is set to: Front: 50mm or 2" Lift with Bull Bar & Winch (adjustment up to 75mm or 3" or to be lowered if required); Rear: 50mm or 2"					

TOYOTA LandCruiser		200 Series		2007 - 2021		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula Big Bore	60011	2ea	0-50mm Lift	60003HD	2ea	0-50mm Lift Heavy Duty
Raw Nitro Max	NM631	2ea	0-50mm Lift	NM273M3	2ea	0-50mm Lift
Bilstein	BE5-F821	2ea	0-50mm Lift	BE5-B341-200	2ea	0-75mm Lift
Sachs Max	316 543	2ea	0-40mm Lift	317 235	2ea	0-40mm Lift
Koni Heavy Track Raid	90-5447SP1	2ea	0-50mm Lift	90-5448	2ea	0-50mm Lift
Koni Heavy Track	88-1747	2ea	Std Height	88-1748	2ea	Std Height
<b>COIL SPRING</b>						
King Springs	KTFS-130 & 130K	1pr	Std Height	KTRS-131	1pr	Std Height
	KTFR-130 & 130K	1pr	Raised	KTRR-131	1pr	Raised
	KTFR-130T & 130TK	1pr	Raised Comfort	KTPR-131	1pr	Raised Comfort
	KTFR-130H & 130HK	1pr	Raised 50-100kg	KTRR-131H	1pr	Raised Comfort 100-250kg
	KTFR-130HD & 130HDK	1pr	Raised 100-250kg	KTRR-131HD	1pr	Raised 100-300kg
	KTFR-130HHD & 130HHDK	1pr	Raised 100-250kg (Only Use with Load Accessories)	KTRR-131HHD	1pr	Raised 300-500kg (Only Use with Load Accessories)
***For Vehicles fitted with KDSS use SPF3281-101K x 1 on the RHF*** Refer to Appendix 1 for KDSS Spring Fitting Instructions						
<b>SuperPro</b> For individual bushes refer to the SuperPro Catalogue						
Strut Fitting Kit	SPF4912K	1kt	Contains bushes & washers			
Coil Spring Spacer	SPF3281-10K	1pr	20mm Lift	SPF3287-10K	1pr	10mm Lift
	SPF3281-101K	2ea	20mm Lift - Single Spacer	SPF3287-15K	1pr	15mm Lift
	SPF3281-20K	1pr	40mm Lift			
	SPF3281-201K	2ea	40mm Lift - Single Spacer			
<b>ROLL CONTROL</b>						
Adjustable Upper Control Arm	TRC485	1pr	+/- 2 Deg. Camber and 0 to 4 Deg. Caster			
	TRC8485	1pr	+0.5 to +2.5 degrees caster and -3.0 to 0 degrees camber over the OE UCA			
Fixed Offset Upper Control Arm	TRC6485	1pr	+/- 2 Deg. Camber and 0 to 4 Deg. Caster			
Trailing Arm - Upper Adjustable Kit				TRC1141	1ea	Off-car adjustable
Trailing Arm - Lower Adjustable Kit				TRC1139	1ea	Off-car adjustable
Sway Bar Link to suit KDSS Vehicles				TRC4308	1ea	Extended rear Sway Bar Link to suit lifted vehicles with KDSS
Sway Bar	RC0029F-39	1kt	39mm Heavy Duty Sway Bar	RC0029RZ-33	1kt	33mm Heavy Duty Sway Bar
Diff Drop Kit	TRCLC200DD	1kt	corrects the front differential by 25mm			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				15895	1kt	Std Height
				15995	1kt	1" Lift
				15095	1kt	2" Lift
Polyair Ultimate Kit				15895ULT	1kt	Std Height
				15995ULT	1kt	1" Lift
				15095ULT	1kt	2" Lift
Coil Rite Airbag Kit				CR5051	1kt	Std Height
				CR5052/CR5052HP	1kt	20mm Lift
				CR5151/CR5151HP	1kt	50mm Lift
<b>ADJUSTABLE PANHARD ROD</b>						
SuperPro				TRC1140	1ea	Heavy duty off-car adjustable





TOYOTA LandCruiser		200 Series - continued		2007 - 2021	
Description	FRONT	Qty	Notes	REAR	Qty Notes
ReadyStrut			ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required		
ReadyStrut Top Caps	RS003	2ea	Strut Cap, Spring Seat, Nuts & Washers		
Formula Big Bore Struts & King Springs	CRUS130-FOR CRUS130C-FOR CRUS130H-FOR CRUS130HD-FOR CRUS130HHD-FOR	1pr	for KDSS vehicles 1 x TRC4308 is required		
Raw Struts & King Springs	CRUS130-RAW CRUS130C-RAW CRUS130HD-RAW CRUS130HHD-RAW	1pr			
Bilstein Struts & King Springs	CRUS130-BIL CRUS130C-BIL CRUS130H-BIL CRUS130HD-BIL CRUS130HT-BIL CRUS130HHD-BIL	1pr			
<b>FORMULA 4X4 KITS</b>	<b>It is highly recommended to fit TRC485/TRC6485/TRC8485 FUCA when lifting this vehicle</b>				
	Refer above on part quantities and specifications				
Formula Big Bore Lift Kit (40mm Lift)	CRUS-206		60011, 60003HD, KTFR-130, KTRR-131, SPF3281-101K		
Formula Big Bore Lift Kit with ReadyStruts (40mm Lift)	CRUS-206R		CRUS130-FOR, 60003HD, KTRR-131		
Formula Big Bore ReadyStrut Kit to suit KDSS (40mm Lift)	CRUS-206RK		CRUS130-FOR, 60003HD, KTRR-131, TRC4308		
RAW Lift Kit (40mm Lift)	CRUS-201		NM631, NM273M3, KTFR-130, KTRR-131, SPF3281-101K		
Enhancement ReadyStrut Kit (40mm Lift)	CRUS-201R		CRUS130-RAW, NM273M3, KTRR-131		
Enhancement ReadyStrut Kit to suit KDSS (40mm Lift)	CRUS-201RK		CRUS130-RAW, NM273M3, KTRR-131, TRC4308		
Enhancement ReadyStrut Kit Heavy Duty (40mm lift)	CRUS-201HDR		CRUS130HD-RAW, NM273M3, KTRR-131		
Enhancement ReadyStrut Kit H/duty to suit KDSS (40mm lift)	CRUS-201HDRK		CRUS130HD-RAW, NM273M3, KTRR-131, TRC4308		
Bilstein Lift Kit (40mm Lift)	CRUS-203		BE5-F821, BE5-B341-200, KTFR-130, KTRR-131, SPF3281-101K, SPF4912K		
Performance ReadyStrut Kit (40mm Lift)	CRUS-203R		CRUS130-BIL, BE5-B341-200, KTRR-131		
Performance ReadyStrut Kit to suit KDSS (40mm Lift)	CRUS-203RK		CRUS130-BIL, BE5-B341-200, KTRR-131, TRC4308		
Formula Load Kit	CRUS-207		60011, 60003HD, KTFR-130HD, KTRR-131HD, SPF3281-101K		
RAW Load Kit (With Front Bar & Winch)	CRUS-204		NM631, NM273M3, KTFR-130HHD, KTRR-131HD, SPF3281-101K		
Formula F4R Kit	CRUS-402F4R		91017, 92017, KTRR-131		
	Formula F4R Adjustable Remote Reservoir Kit is set to: Front: 50mm or 2" Lift with Bull Bar & Winch (adjustment up to 75mm or 3" or to be lowered if required); Rear: 50mm or 2"				



TOYOTA LandCruiser		300 Series		2021 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula Big Bore	60012	2ea	0-50mm Lift	60013	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KTFR-140	1pr	Raised	KTRR-141	1pr	Raised
	KTFR-140H	1pr	Raised Comfort 50-100kg	KTRR-141H	1pr	Raised Comfort 100-250kg
	KTFR-140HD	1pr	Raised 50-100kg	KTRR-141HD	1pr	Raised 100-300kg
	KTFR-140HHD	1pr	Raised 100-250kg	KTRR-141HHD	1pr	Raised 300-500kg
ReadyStrut	ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required					
ReadyStrut Top Caps	RS014	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	CRUS140-FOR, CRUS140H-FOR, CRUS140HD-FOR, CRUS140HHD-FOR				1pr	
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6710	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
Trailing Arm - Upper Adjustable Kit				TRC1138	1ea	Off-car adjustable
Trailing Arm - Lower Adjustable Kit				TRC1139	1ea	Off-car adjustable
Vehicle Upgrade Kit	KIT301K	1kt	Kit contains: TRC6710, TRC1138, TRC1139, TRC1140, TRC1285, SPF5522K, SPF3278K			
Sway Bar	RC0116FZ-42	1kt	42mm Heavy Duty Sway Bar	RC0116RZ-26	1kt	26mm Heavy Duty Sway Bar
<b>AIR BAGS</b>						
Polyair Ultimate Kit				15893ULT	1kt	30mm Lift
				15993ULT	1kt	50mm Lift
Coil Rite Airbag kit				CR5050HP	1kt	25mm Lift
				CR5051HP	1kt	50mm Lift
<b>ADJUSTABLE PANHARD ROD</b>						
SuperPro				TRC1140	1ea	Heavy duty off-car adjustable
<b>FORMULA 4x4 KITS</b> <i>It is highly recommended to fit TRC6710 FUCA when lifting this vehicle</i> <i>Refer above on part quantities and specifications</i>						
Formula Big Bore Lift Kit	CRUS-300	60012, 60013, KTFR-140, KTRR-141, TRC1285				
Formula Big Bore Lift Kit with ReadyStruts	CRUS-300R	CRUS140-FOR, 60013, KTRR-141, TRC1285				
Bilstein Lift Kit (Bilstein B60)	CRUS-301	B60-300FRT, B60-300RR, BCS300FR, BCS300RR				
Formula Load Kit	CRUS-302	60012, 60013, KTFR-140H, KTRR-141H, TRC1285				
Formula Load Kit with ReadyStruts	CRUS-302R	CRUS140H-FOR, 60013, KTRR-141H, TRC1285				
Formula F4R Kit	CRUS-403F4R		91018, 92018, KTRR-141, TRC1285			
	Formula F4R Adjustable Remote Reservoir Kit is set to: Front: 50mm or 2" Lift with Bull Bar & Winch (adjustment up to 75mm or 3" or to be lowered if required); Rear: 50mm or 2"					

**TOYOTA LandCruiser Prado**

**90 Series**

**1995 - 2003**



Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Raw Predator	PR723	2ea	0-50mm Lift	PR724	2ea	0-50mm Lift
Raw Nitro				G6756Y	2ea	0-50mm Lift
Bilstein	BE5-2450M	2ea	0-50mm Lift	BE5-2451M	2ea	Std Height
				B46-1004LT	2ea	0-50mm Lift
Sachs Max	316 537	2ea	0-40mm Lift	316 538	2ea	0-40mm Lift
Koni Heavy Track	82-2446	2ea	Std Height	82-2447	2ea	Std Height
Koni Heavy Track Raid	88-1711	2ea	0-50mm Lift	90-5394	2ea	0-50mm Lift
<b>COIL SPRING</b>						
King Springs	KTFS-58	1pr	Std Height	KTRS-59	1pr	Std Height
	KTFR-58	1pr	Raised	KTRR-59	1pr	Raised
	KTFR-58HD	1pr	Raised 50-100kg	KTRR-59HD	1pr	Raised 100-300kg
ReadyStrut			<i>ReadyStruts come complete with Strut, Spring &amp; Upper Mounts. No dismantling required</i>			
ReadyStrut Top Caps	RS005	2ea	<i>Strut Cap, Spring Seat, Nuts &amp; Washers</i>			
RAW Struts & King Springs	PRADO58-RAW PRADO58HD-RAW				1kt	
Bilstein Struts & King Springs	PRADO58-BIL PRADO58HD-BIL				1kt	
<b>ROLL CONTROL</b>						
Sway Bar	RC0047F-27	1kt	27mm Heavy Duty Sway Bar	RC0047RZ-22	1kt	22mm Adj. Sway Bar
Diff Drop Kit	TRCLC100DD	1kt				
<b>SuperPro</b>						
Strut Fitting Kit	SPF4907K	1kt	Contains bushes & washers			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				61792	1kt	0-2" Lift
Coil Rite Airbag Kit				CR5122	1kt	Lift
<b>FORMULA 4X4 KITS</b>						
<i>Refer above on part quantities and specifications</i>						
RAW Lift Kit	PRADO-001	PR723, G6756Y, KTFR-58, KTRR-59				
RAW Lift Kit with RAW ReadyStruts	PRADO-001R	PRADO58-RAW, G6756Y, KTRR-59				
Bilstein Lift Kit	PRADO-002	BE5-2450M, BE5-2451M, KTFR-58, KTRR-59, SPF4907K				
Bilstein Lift Kit with ReadyStruts	PRADO-002R	PRADO58-BIL, BE5-2451M, KTRR-59				



TOYOTA LandCruiser Prado		120 Series		2002 - 2010		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Formula</i>	40010	2ea	0-50mm Lift	50012	2ea	0-50mm Lift
<i>Raw Nitro</i>	G6539	2ea	0-50mm Lift	G6424Y	2ea	0-50mm Lift
<i>Bilstein</i>	BE5-A712	2ea		BE5-A713	2ea	
<i>Sachs Max</i>	317 236	2ea	0-40mm Lift	315 323	2ea	0-40mm Lift
<i>Koni Heavy Track</i>	82-2522	2ea	Std Height	82-2523	2ea	Std Height
<i>Koni Heavy Track Raid</i>	88-1712SP2	2ea	0-30mm Lift	90-5404LSP1	1ea	0-30mm Lift
				90-5404RSP1	1ea	
<b>COIL SPRING</b>						
<i>King Springs</i>	KTFS-101	1pr	Std Height	KTRS-102	1pr	Std Height
	KTFR-101	1pr	Raised	KTRR-102	1pr	Raised
	KTFR-101T	1pr	Raised Comfort	KTPR-102T	1pr	Raised Comfort
	KTFR-101H	1pr	Raised 50-100kg	KTPR-102	1pr	Raised 100-200kg
	KTFR-101HT	1pr	Raised Comfort 50-100kg	KTRR-102HD	1pr	Raised 100-300kg
	KTFR-101HD	1pr	Raised 100-250kg	KTRR-102EHD	1pr	Raised 300-500kg
	KTFR-101HDT	1pr	Raised Comfort 100-250kg			
<b>AIR BAGS</b>						
<i>Polyair Red Bag Kit</i>				12895	1kt	Std Height
				12995	1kt	2" Lift
				12095	1kt	3" Lift
<i>Polyair Ultimate Kit</i>				12895ULT	1kt	Std Height - 60PSI Heavy Duty
				12995ULT	1kt	2" Lift - 60PSI Heavy Duty
				12095ULT	1kt	3" Lift - 60PSI Heavy Duty
<i>Coil Rite Airbag Kit</i>				CR5035	1kt	Std Height 120 Series
<i>On-Air Air Bag Kit</i>				CR5034	1kt	50mm Lift 120 Series
				OA6010	1kt	50mm lift - With Rear Coil Springs
				OA6011	1kt	50mm Lift - Replaces OE Airbags
				OA6011S	1kt	Std Height - Replaces OE Airbags
<b>ROLL CONTROL</b>						
<i>Adjustable Upper Control Arm</i>	TRC8480	1pr	adjustment range of between +0.5 to +3.5 degrees caster and -1.5 to +1.5 degrees camber over OE			
<i>Fixed Offset Upper Control Arm</i>	TRC6480	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
<i>Standard Lower Control Arm</i>	TRC481	1pr	Complete Arm Assemblies with Standard SuperPro Bushings, Uprated Ball Joints & Camber Pins			
<i>Adjustable Lower Control Arm</i>	TRC482	1pr	Additional +/- 2 Deg. Camber			
<i>Sway Bar</i>	RC0026FZ-30	1	30mm Adj. Sway Bar	RC0026RZ-24	1kt	24mm Adj. Sway Bar
<i>Diff Drop Kit</i>	TRCHILUXDD	1	Corrects the front differential by 25mm			
<i>SuperPro</i>						
<i>Strut Fitting Kit</i>	SPF4907K	1kt	Contains bushes & washers			

TOYOTA LandCruiser Prado		120 Series - continued		2002 - 2010		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>ReadyStrut</b>			ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required			
<b>ReadyStrut Top Caps</b>	RS002	2ea	Strut Cap, Spring Seat, Nuts & Washers			
<b>Formula Struts &amp; King Springs</b>	PRADO101-FOR	PRADO101T-FOR	PRADO101H-FOR	PRADO101HT-FOR	1pr	
<b>RAW Struts &amp; King Springs</b>	PRADO101S-RAW	PRADO101-RAW	PRADO101T-RAW	PRADO101H-RAW	PRADO101HT-RAW	1pr
	PRADO101HD-RAW	PRADO101HHD-RAW				
<b>Bilstein Struts &amp; King Springs</b>	PRADO101S-BIL	PRADO101-BIL	PRADO101T-BIL	PRADO101H-BIL	PRADO101HT-BIL	1pr
	PRADO101HD-BIL	PRADO101HDT-BIL	PRADO101HHD-BIL			
<b>FORMULA 4X4 KITS</b>	<b>It is highly recommended to fit TRC8480/TRC6480 FUCA when lifting this vehicle</b>					
	Refer above on part quantities and specifications					
<b>Formula Lift Kit</b>	PRADO-009	40010, 50012, KTFR-101, KTRR-102				
<b>Formula Lift Kit with ReadyStruts</b>	PRADO-009R	PRADO101-FOR, 50012, KTRR-102				
<b>RAW Lift Kit</b>	PRADO-003	G6539, G6424Y, KTFR-101, KTRR-102				
<b>RAW Lift Kit with ReadyStruts</b>	PRADO-003R	PRADO101-RAW, G6424Y, KTRR-102				
<b>Bilstein Lift Kit</b>	PRADO-004	BE5-A712, BE5-A713, KTFR-101, KTRR-102, SPF4907K				
<b>Bilstein Lift Kit with ReadyStruts</b>	PRADO-004R	PRADO101-BIL, BE5-A713, KTRR-102				

TOYOTA LandCruiser Prado		150 Series		2009 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40010	2ea	0-50mm Lift	50012	2ea	0-50mm Lift
Raw Nitro	G6539M1	2ea	0-50mm Lift	G6424Y	2ea	0-50mm Lift
Raw Nitro Max	NM324M1 ReadyStrut only	2ea	0-50mm Lift	NM273M4	2ea	0-50mm Lift
Bilstein	BE5-A712	2ea		24-238830	2ea	(re-use OE upper Bushes)
Sachs Max	317 234	2ea	0-40mm Lift	317 235	2ea	0-40mm Lift
<b>COIL SPRING</b>						
King Springs	KTFS-101	1pr	Std Height	KTRS-102	1pr	Std Height
	KTFS-101	1pr	Raised SWB Excl. KDSS	KTRS-102	1pr	Raised SWB Excl. KDSS
	KTFR-101	1pr	Raised	KTRR-102	1pr	Raised
	KTFR-101T	1pr	Raised Comfort	KTPR-102	1pr	Raised Comfort 100-250kg
	KTFR-101H	1pr	Raised 50-100kg	KTRR-102HD	1pr	Raised 100-300kg
	KTFR-101HT	1pr	Raised Comfort 50-100kg	KTRR-102EHD	1pr	Raised 300-500kg
	KTFR-101HD	1pr	Raised 100-250kg			
	KTFR-101HDT	1pr	Raised Comfort 100-250kg			
	KTFR-101HHD	1pr	Raised Extra Heavy Duty			
	KTFR-121	1pr	Raised With KDSS			
<b>AIR BAGS</b>						
Polyair Red Bag Kit				12895	1kt	Std Height
				12995	1kt	2" Lift
				12095	1kt	3" Lift
Polyair Ultimate Kit				12895ULT	1kt	Std Height - 60PSI Heavy Duty
				12995ULT	1kt	2" Lift - 60PSI Heavy Duty
				12095ULT	1kt	3" Lift - 60PSI Heavy Duty
Coil Rite Airbag Kit				CR5096	1kt	Std Height (3 door)
				CR5035	1kt	Std Height (5 door)
				CR5034	1kt	50mm Lift (5 door)
On-Air Air Bag Kit				OA6014	1kt	50mm lift
				OA6014S	1kt	Std Height
				OA6013	1kt	50mm lift Kakadu Series
			OA6013S	1kt	Std Height Kakadu Series	
<b>ROLL CONTROL</b>						
Adjustable Upper Control Arm	TRC8480	1pr	adjustment range of between +0.5 to +3.5 degrees caster and -1.5 to +1.5 degrees camber over OE			
Fixed Offset Upper Control Arm	TRC6480	1pr	Additional +/- 2 Deg. Camber and 0 to 4 Deg. Caster			
Sway Bar	RC0059FZ-30	1	30mm Adj. Sway Bar - excl. KDSS	RC0059RZ-24	1kt	24mm Adj. Sway Bar - excl. KDSS
	RC0127FZ-30	1	30mm Adj. Sway Bar - KDSS	RC0127RZ-24	1kt	24mm Adj. Sway Bar - KDSS
Diff Drop Kit	TRCHILUXDD	1	Corrects the front differential by 25mm			
Trailing Arm Upper - Adjustable Kit				TRC498	1pr	Off-car adjustable
Trailing Arm Lower - Adjustable Kit				TRC497	1pr	Off-car adjustable
Panhard Rod - Adjustable				TRC499	1pr	Off-car adjustable
SuperPro						
Strut Fitting Kit	SPF4907K	1kt	Contains bushes & washers			



TOYOTA LandCruiser Prado		150 Series - continued		2009 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>ReadyStrut</b>			ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required			
<b>ReadyStrut Top Caps</b>	RS002	2ea	Strut Cap, Spring Seat, Nuts & Washers			
<b>Formula Struts &amp; King Springs</b>	PRADO101-FOR	PRADO101T-FOR	PRADO101H-FOR	PRADO101HT-FOR	1pr	
<b>Bilstein Struts &amp; King Springs</b>	PRADO101-BIL	PRADO101T-BIL	PRADO101H-BIL	PRADO101HT-BIL	PRADO101HD-BIL	PRADO101HHD-BIL
<b>RAW Struts &amp; King Springs</b>	PRADO101M1-RAW	PRADO101M1H-RAW	FORT08T-NMRAW			
<b>FORMULA 4X4 KITS</b>	<b>It is highly recommended to fit TRC3480/TRC6480 FUCA when lifting this vehicle</b>					
	Refer above on part quantities and specifications					
<b>Formula Lift Kit</b>	PRADO-009	40010, 50012, KTRR-101, KTRR-102				
<b>Formula Lift Kit with ReadyStruts</b>	PRADO-009R	PRADO101-FOR, 50012, KTRR-102				
<b>RAW Lift Kit</b>	PRADO-006	G6539M1, G6424Y, KTRR-101, KTRR-102				
<b>RAW Lift Kit with ReadyStruts</b>	PRADO-006R	PRADO101M1-RAW, G6424Y, KTRR-102				
<b>Bilstein Lift Kit</b>	PRADO-007	BE5-A712, 24-238830, KTRR-101, KTRR-102, SPF4907K				
<b>Bilstein Lift Kit with ReadyStruts</b>	PRADO-007R	PRADO101-BIL, 24-238830, KTRR-102				
<b>RAW Load Kit with ReadyStruts</b>	PRADO-010R	FORT08T-NMRAW, NM273M4, KTRR-102HD				

TOYOTA Rav 4		XA10		1994 - 2000		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Bilstein</i>	P30-3061	2ea		B36-2120	2ea	
<i>Sachs</i>	310 704	2ea	Insert (not for 235/60-16)	310 706	2ea	
<i>Koni Heavy Track</i>	8641-1319SPT	2ea	94-12/97 Std Height	30-1599SPT	2ea	Std Height
	8641-1427SPT	2ea	98-08/00 Std Height			
<b>COIL SPRING</b>						
<i>King Springs</i>	KTFR-43	1pr	Raised	KFFL-03	1pr	SWB Raised
				KFFL-04	1pr	LWB Raised
<b>AIR BAGS</b>						
<i>Polyair Red Bag Kit</i>				61590	1kt	
<i>Coil Rite Air Bag Kit</i>				CR5055	1kt	



TOYOTA Rav 4		XA20		2000 - 2005		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Sachs</i>	313 807	1ea	LHS	310 706	2ea	
	313 806	1ea	RHS			
<i>Koni Heavy Track</i>	8641-1427SPT	2ea	Std Height	30-1599SPT	2ea	Std Height
<b>COIL SPRING</b>						
<i>King Springs</i>	KTFR-43	1pr	Raised	KTRR-46	1pr	Raised
<b>AIR BAGS</b>						
<i>Polyair Red Bag Kit</i>				61590	1kt	
<i>Coil Rite Air Bag Kit</i>				CR5055	1kt	



TOYOTA Rav 4		XA30		2005-2012		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Sachs</i>	314 846	1ea	LHS	314 862	2ea	
	314 845	1ea	RHS			
<i>Koni Special-Active</i>	8645-1176	2ea	O.E Struts only	8645-1177	2ea	
<b>COIL SPRING</b>						
<i>King Springs</i>	KTFR-117	1pr	Raised	KTRR-118	1pr	Raised
<b>AIR BAGS</b>						
<i>Coil Rite Air Bag Kit</i>				CR5066	kt	





VW Amarok		2H		2010 - 2022		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40013	2ea	0-50mm Lift	50013	2ea	0-50mm Lift
Bilstein	24-195690	2ea	0-40mm Lift	24-195706	2ea	Std Height
Sachs Max	317 637	2ea	0-40mm Lift	24-322584	2ea	0-40mm Lift
				317 638	2ea	0-40mm Lift
<b>COIL SPRING</b>						
King Springs	KVFR-22	1pr	Raised 4 Cyl			
	KVFR-22T	1pr	Raised Tapered 4 Cyl			
	KVFR-22H	1pr	Raised 6 Cyl 2016-on			
	KVFR-22HH	1pr	Raised 50-100kg, 6 Cyl 2016-on			
<b>LEAF SPRING</b>						
Formula				FLS-031	2ea	25mm Lift at 0-300kg load
				FLS-100	2ea	25mm Lift at 300kg+ load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-031	1ea	FLS-031 x 2, FUB-002 x 4, KIT183K x 1			
	FLSKIT-100	1ea	FLS-100 x 2, FUB-002 x 4, KIT183K x 1			
<b>Long travel SHOCK ABSORBERS must be fitted with the above part numbers.</b>						
<b>SHACKLE/ U BOLTS</b>						
U Bolts				FUB-002	4ea	
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arm	TRC6630	1pr				
Sway Bar	RC0058FZ-30	1kt	30mm 2 Position Adj, Sway Bar	RC0058RZ-24	1kt	24mm 3 Position Adj, Sway Bar Can't be used with Airbags
<b>SuperPro</b> For individual bushes refer to the SuperPro Catalogue						
Spring Eye & Shackle Bush Kit				KIT183K	1kt	
Drive Shaft Bolt Kit	TRC3318	2kt	one Kit per Side			



VW Amarok		2H - continued		2009 - 2022		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>AIR BAGS</b>						
Polyair Bellows Kit				85208	1kt	0-30mm Lift
				88208	1kt	0-30mm Lift - No Drill Kit
Ride Rite Airbag Kit				RR4698	1kt	Lift
<b>Important Note: The Front Drive Shafts need to be removed to fit the front shock absorbers. OEM Part No. N90625101. VW have designed these bolts to be for one use only and need to be replaced, then torqued to the following settings: Outer CV Bolt 150Nm + 180 Degrees Inner CV Bolts 50Nm + 90 Degrees</b>						
<b>ReadyStrut</b>						
ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required						
ReadyStrut Top Caps	RS015	2ea	Strut Cap, Spring Seat, Nuts & Washers			
Formula Struts & King Springs	AMAR22-FOR	AMAR22H-FOR	AMAR22HH-FOR		1pr	TRC3318 x2 included in ReadyStrut Kit
Bilstein Struts & King Springs	AMAR22-BIL	AMAR22H-BIL			1pr	TRC3318 x2 included in ReadyStrut Kit
<b>FORMULA 4x4 KITS</b>						
<b>It is highly recommended to fit TRC6630 FUCA when lifting this vehicle</b>						
Refer above on part quantities and specifications						
Formula Lift Kit (6cyl)	AMAR-003	40013, 50013, KVFR-22H, FLS-031, FUB-002, KIT183K, TRC3318				
Formula Lift Kit (6cyl) with Formula ReadyStruts	AMAR-003R	AMAR22H-FOR, 50013, FLS-031, FUB-002, KIT183K				
Formula Lift Kit (4cyl)	AMAR-004	40013, 50013, KVFR-22, FLS-031, FUB-002, KIT183K, TRC3318				
Formula Lift Kit (4cyl) with Formula ReadyStruts	AMAR-004R	AMAR22-FOR, 50013, FLS-031, FUB-002, KIT183K				
Bilstein Lift Kit	AMAR-001	24-195690, 24-322584, KVFR-22, FLS-031, FUB-002, KIT183K, TRC3318				
Bilstein Lift Kit with ReadyStruts	AMAR-001R	AMAR22-BIL, 24-322584, FLS-031, FUB-002, KIT183K, TRC3318				
Formula Load Kit (6cyl)	AMAR-005	40013, 50013, KVFR-22HH, FLS-100, FUB-002, KIT183K, TRC3318				
Formula Load Kit (6cyl) with Formula ReadyStruts	AMAR-005R	AMAR22HH-FOR, 50013, FLS-100, FUB-002, KIT183K				



VW Amarok		T1A, T1B		2022 - on		
Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
Formula	40017	2ea	0-50mm Lift	50036	2ea	0-50mm Lift
Bilstein		2ea	0-40mm Lift		2ea	0-40mm Lift
Sachs Max		2ea	0-40mm Lift		2ea	0-40mm Lift
<b>COIL SPRING</b>						
King Springs	KFFR-122SP	1pr	40-45mm Lift			
	KFFR-122	1pr	50mm Lift			
	KFFR-122T	1pr	50mm Lift Comfort Taper			
	KFFR-122H	1pr	50mm Lift 50-100kg			
	KFFR-122HT	1pr	50mm Lift 50-100kg Comfort Taper			
	KFFR-122HH	1pr	50mm Lift 100-250kg			
<b>LEAF SPRING</b>						
Formula				FLS-153	2ea	45mm Lift 150kg Constant Load
				FLS-154	2ea	40mm Lift 300kg Constant Load
				FLS-155	2ea	40mm Lift 500kg Constant Load
<b>LEAF SPRING KIT</b>						
Formula	FLSKIT-253	1ea	FLS-153 x 2, FUB-005 x 4, KIT168SK x 1			
	FLSKIT-254	1ea	FLS-154 x 2, FUB-005 x 4, KIT168SK x 1			
	FLSKIT-255	1ea	FLS-155 x 2, FUB-005 x 4, KIT168SK x 1			
Long travel SHOCK ABSORBERS must be fitted with the above part numbers.						
<b>SHACKLE/ U BOLTS</b>						
Swing Shackle				FSK-015	2ea	Greaseable (grease nipple to inside)
U Bolts				FUB-005	4ea	
<b>ROLL CONTROL</b>						
Fixed Offset Upper Control Arms	TRC6750	1pr	to suit vehicles with Aluminium Steering Knuckles			
	TRC6751	1pr	to suit vehicles with Steel Steering Knuckles			
Sway Bar	RC0129FZ-33	1kt	33mm 2 Position Adj. Sway Bar			
For individual bushes refer to the SuperPro Catalogue						
<b>SuperPro</b>						
Centre Bearing Alignment Kit				TRC0048	1ea	
Headlight Sensor Bracket Spacer				SPF5719K	1ea	
Fixed Pin Protection Cap				SPF4848K	1kt	
Greaseable Pin and Bush Kit - Front Eye				SPF4462K	1kt	
Spring Eye & Shackle Bush Kit				KIT168K	1kt	Bushes Only
Shackle, Pin & Bush Kit				KIT168SK	1kt	Greaseable Shackles, Pins & Bushes
Headlight Sensor Bracket Spacer				SPF5719K	1kt	
<b>AIRBAG</b>						
Polyair Bellows Kit				88277R	1kt	2" Lift
Ride Rite Airbag Kit				RR4737	1kt	suits standard & most 2" raised
ReadyStruts come complete with Strut, Spring & Upper Mounts. No dismantling required						
Formula Struts & King Springs	RANGER122-FOR RANGER122H-FOR RANGER122HH-FOR RANGER122HT-FOR RANGER122SP-FOR RANGER122T-FOR				1pr	
<b>FORMULA 4X4 KITS</b>						
<b>It is highly recommended to fit TRC6750 FUCA when lifting this vehicle</b>						
Refer above on part quantities and specifications						
Formula Lift Kit	RANG-312		40017, 50036, KFFR-122, FLS-153, FUB-005, KIT168SK, SPF4848K, TRC0048, TRC0049, SPF5719K			
Formula Lift Kit with ReadyStruts	RANG-312R		RANGER122-FOR, 50036, FLS-153, FUB-005, KIT168SK, SPF4848K, TRC0048, TRC0049, SPF5719K			
Bilstein Lift Kit (Bilstein B8/B5100)	RANG-314		RANGERNXTGENFRT, RANGERNXTGENRR, BCS-BILRANXTGEN, FLS-153, FUB-005, KIT168SK, TRC0048, SPF4848K, SPF5719K			

**VW Transporter 4motion**
**T5 & T6**
**2003 - on**


Description	FRONT	Qty	Notes	REAR	Qty	Notes
<b>SHOCK ABSORBER</b>						
<i>Bilstein</i>	VN3-E242	2ea	0-40mm	BE5-E035	2ea	0-40mm
<i>Koni</i>	87-2645	2ea	0-40mm	82-2542	2ea	0-40mm
<b>COIL SPRING</b>						
<i>King Springs</i>	KVFR-19	1pr	Raised	KVRR-18	1pr	Raised
	KVFR-19SP	1pr	Extra Raised (+20mm)	KVRR-18HD	1pr	Raised 300-500kg
<b>ROLL CONTROL</b>						
<i>Diff Drop Kit</i>	DIFFDROPVWT5+T6	1kt				
<b>AIR BAGS</b>						
<i>Polyair Red Bag Kit</i>				12496	1kt	Std Height
<i>Coil Rite Air Bag Kit</i>				CR5168/CR5168HP	1kt	Std Height*
				*contact Airbag Man for 20mm taller Air Bag Kit		
<b>FORMULA 4X4 KITS</b>						
	Refer above on part quantities and specifications					
<i>Bilstein Lift Kit</i>	TRANSP-001	VN3-E242, BE5-E035, KVFR-19, KVRR-18, DIFFDROPVWT5+T6				
<i>Koni Lift Kit</i>	TRANSP-002	87-2645, 82-2542, KVFR-19, KVRR-18, DIFFDROPVWT5+T6				

## GVM Upgrade KITS

<b>DODGE RAM</b>		<b>1500</b>	<b>2008 - on</b>
<b>Part Number</b>			
<b>RAMKIT001-GVM</b>		3950kg GVM Upgrade	
<b>RAMKIT002-GVM-PLAT</b>		3950kg GVM Upgrade	

<b>FORD Everest</b>		<b>UA</b>	<b>08/2018 - on</b>
<b>Part Number</b>			
<b>FORDKIT014-GVM-A</b>		3500kg GVM Upgrade	
<b>FORDKIT015-GVM-PLAT</b>		3500kg GVM Upgrade	

<b>FORD Ranger</b>		<b>PX &amp; PX II</b>	<b>11/2011 - 07/2018</b>
<b>Part Number</b>			
<b>FORDKIT009-GVM-6600</b>		3500kg GVM Upgrade (6600kg GCM)	
<b>FORDKIT009-GVM-7100</b>		3500kg GVM Upgrade (7100kg GCM)	

<b>FORD Ranger</b>		<b>PXIII</b>	<b>08/2018 - on</b>
<b>Part Number</b>			
<b>RANGPX3-GVM</b>		3505kg GVM Upgrade	
<b>FORDKIT012-GVM-6600</b>		3500kg GVM Upgrade (6600kg GCM)	
<b>FORDKIT012-GVM-7100</b>		3500kg GVM Upgrade (7100kg GCM)	

<b>FORD Ranger</b>		<b>PXY / P703</b>	<b>2022 - on</b>
<b>Part Number</b>			
<b>FORDKIT019-GVM-LC35</b>		3505kg GVM Upgrade (7000kg GCM)	
<b>FORDKIT019-GVM-LT37</b>		3700kg GVM Upgrade (7200kg GCM)	

<b>ISUZU D-Max</b>		<b>TFR &amp; TFS</b>	<b>2012 - on</b>
<b>Part Number</b>			
<b>ISUZKIT006-GVM</b>	3600kg GVM Upgrade		

<b>ISUZU D-Max</b>		<b>TF / RG01</b>	<b>2020 - on</b>
<b>Part Number</b>			
<b>ISUZKIT008-GVM-A</b>	3600kg GVM Upgrade (6200kg GCM)		
<b>ISUZKIT008-GVM-A-R</b>	3600kg GVM Upgrade (6900kg GCM)		

<b>MAZDA BT-50</b>		<b>UP &amp; UR</b>	<b>11/2011 - 2020</b>
<b>Part Number</b>			
<b>FORDKIT009-GVM-6600</b>	3500kg GVM Upgrade (6600kg GCM)		
<b>FORDKIT009-GVM-7100</b>	3500kg GVM Upgrade (7100kg GCM)		

<b>MAZDA BT-50</b>		<b>TFS / RG04</b>	<b>2020-on</b>
<b>Part Number</b>			
<b>ISUZKIT008-GVM-A</b>	3600kg GVM Upgrade (6200kg GCM)		
<b>ISUZKIT008-GVM-A-R</b>	3600kg GVM Upgrade (6900kg GCM)		

<b>NISSAN Patrol Cab Chassis</b>		<b>GU (Y61) Coil Front Leaf Rear</b>	<b>12/1997 - 2016</b>
<b>Part Number</b>			
<b>NISSKIT020-GVM-ST</b>	3900kg GVM Upgrade		

<b>TOYOTA Hilux</b>		<b>KUN 2_</b>	<b>02/2005 - 2015</b>
<b>Part Number</b>			
<b>TOYKIT073-GVM-ST</b>		3300kg GVM Upgrade	
<b>30.TO104.GVM.F</b>		3300kg GVM Upgrade	

<b>TOYOTA Hilux</b>		<b>GGN, GUN excluding 2022-on Rogue (wide-body)</b>	<b>2015 - on</b>
<b>Part Number</b>			
<b>TOYKIT077-GVM</b>		3500kg GVM Upgrade	
<b>30.TO145.GVM.F</b>		3400kg GVM Upgrade	

<b>TOYOTA Land Cruiser</b>		<b>76 Series</b>	<b>02/2007 - on</b>
<b>Part Number</b>			
<b>TOYKIT057-GVM</b>		3660kg GVM Upgrade (does not suit 2.8 4cyl variants)	

<b>TOYOTA Land Cruiser</b>		<b>78 Series</b>	<b>09/1999 - on</b>
<b>Part Number</b>			
<b>TOYKIT062-GVM</b>		3900kg GVM Upgrade (does not suit 2.8 4cyl variants)	
<b>30.TO102.GVM.F</b>		3900kg GVM Upgrade	

<b>TOYOTA Land Cruiser</b>		<b>79 Series V8 Cab Chassis</b>	<b>2007 - on</b>
<b>Part Number</b>			
<b>TOYKIT061-GVM</b>	3900kg GVM Upgrade (does not suit 2.8 4cyl variants)		
<b>TOYKIT080-GVM</b>	4200kg GVM Upgrade		

<b>TOYOTA Land Cruiser</b>		<b>200 Series</b>	<b>2007 - 2021</b>
<b>Part Number</b>			
<b>CRUS-200GVM-GXL</b>	4000kg GVM Upgrade		
<b>CRUS-200GVM-IND</b>	4000kg GVM Upgrade (DX Series)		
<b>TOYKIT067-GVM-D</b>	3800kg GVM Upgrade		
<b>TOYKIT081-GVM-PLAT</b>	4000kg GVM Upgrade		
<b>TOYKIT081-GVM-PLAT-R</b>	3800kg to 4000kg GVM		
<b>30.TO122.GVM.F</b>	3800kg GVM Upgrade		

<b>TOYOTA Land Cruiser</b>		<b>300 Series</b>	<b>2021-on</b>
<b>Part Number</b>			
<b>CRUS-300GVM</b>	4000kg GVM Upgrade		
<b>TOYKIT086-GVM-CMFT</b>	3560kg GVM Upgrade - 7060kg GCM		
<b>TOYKIT086-GVM</b>	3800kg GVM Upgrade - 7300kg GCM		
<b>TOYKIT086-GVM-PLAT</b>	4200kg GVM Upgrade - 7700kg GCM		

<b>TOYOTA Prado</b>		<b>150 Series</b>	<b>2009 - on</b>
<b>Part Number</b>			
<b>TOYKIT078-GVM</b>	3500kg GVM Upgrade		



## Appendix 1

### TOYOTA LANDCRUISER 200 SERIES WITH KDSS SYSTEM

Please note when fitting springs to Toyota Landcruiser 200 Series or Lexus LX Series vehicles fitted with Toyota's Kinetic Dynamic Suspension System (KDSS), also referred to by Toyota as a "Hydro-Mechanical Semi Active Anti Roll Bar".

Please be advised of the fitting procedure:

- Suspend vehicle on 2-post type chassis hoist allowing wheels to hang.
- Locate the KDSS valve housing.

NOTE: The valve housing is located on the left-hand side of the vehicle, on the inside of the chassis rail, roughly halfway between the front and the back of the vehicle.

- Using a 5mm hex key, open the 2 levelling valves 3 full rotations anti-clockwise. (Access is from underside of the KDSS valve)

NOTE: The KDSS system is now open, and the sway bar ends should be able to be freely manipulated with little effort, allowing spring / strut removal and installation.

**NOTE: THE VEHICLE MUST NOT BE DRIVEN WITH THESE VALVES OPEN AS THIS WILL COMPROMISE THE SYSTEM AND RENDER THE VEHICLE UNSAFE TO DRIVE**



- With the vehicle sitting on level ground, close both KDSS levelling valves by turning them in a clockwise direction and then tightening.

## Appendix 2

LC200 KDSS Engage/Disengage Procedure for TRC4308 fitment to level the vehicle. [00]

### KDSS Valve Housing Location:

- Left Side of Vehicle
- Inside of Chassis Rail
- Equidistant between front and rear of vehicle.



Figure 01 -KDSS Valve Housing

### Instructions:

1. Raise the vehicle utilizing a hoist, allowing wheels to droop and familiarise yourself with the installation location.
2. Locate the KDSS Valve Housing and open both levelling valves turning 3 times anti-clockwise. (Figure 01)

**Note:** Newer models of this vehicle may feature standard bolt head fasteners to operate the KDSS valves.

1. Support the existing extended sway bar link with a floor stand. (Figure 02)
2. Locate the two chassis mount bolts attached to the fixed link on the opposite position (Figure 03) and remove.
3. Carefully lower the floor stand until the sway bar is resting loosely.
4. Remove the pre-installed arm and replace with supplied TRC4308

Once the chassis mount is re-installed, securely tighten all fasteners involved, remove the floor stand and lower the vehicle to ride height.

#### Re-Levelling the KDSS System:

- Strictly raise only the driver's side of the vehicle utilising hoist until driver's side wheels are at full droop.
- Tighten both aforementioned KDSS valves clockwise with care until finger tight.
- Re-lower vehicle to ride height and torque the involved fasteners to manufacturer's specifications. (See Figure 02.)

#### Manufacturer's Specifications:

- Ø12mm Bolt: 95 Nm/70 lb-ft,
- Ø16mm Bolt: 240 Nm/175 lb-ft
- M13 Ball Joint: 115 Nm/85 lb-ft

(Note: All fasteners to be re-torqued after 1000km of usage.)



Figure 02 –Floor stand in position.



Figure 03 –Fixed Link Chassis Mount

## Appendix 3

### TOYOTA LANDCRUISER 200 SERIES WITH KDSS SYSTEM

When fitting ReadyStruts to Toyota Landcruiser 200 Series or Lexus LX Series vehicles fitted with Toyota's Kinetic Dynamic Suspension System (KDSS), please be advised of the fitting procedure:

- Install the ReadyStrut fitted with the 20mm Coil Spacer to the **RIGHT HAND SIDE** of the vehicle

The following procedure needs to be followed to release the hydraulic system to allow the reconnection of the Sway Bar.

- Suspend vehicle on 2-post type chassis hoist allowing wheels to hang.
- Locate the KDSS valve housing.

NOTE: The valve housing is located on the left-hand side of the vehicle, on the inside of the chassis rail, roughly half way between the front and the back of the vehicle.

- Using a 5mm hex key, open the 2 levelling valves 3 full rotations anti-clockwise. (Access is from underside of the KDSS valve)
- 

NOTE: The KDSS system is now open and the sway bar ends should be able to be freely manipulated with little effort, allowing spring / strut removal and installation.

**NOTE: THE VEHICLE MUST NOT BE DRIVEN WITH THESE VALVES OPEN AS THIS WILL COMPROMISE THE SYSTEM AND RENDER THE VEHICLE UNSAFE TO DRIVE**



- With the vehicle sitting on level ground, close both KDSS levelling valves by turning them in a clockwise direction and then tightening.

## Appendix 4

### 2015 Mitsubishi MQ Triton




Figure A



Figure B

An out of phase drive shaft can be found in the 2015 MQ Triton Manual, there is no problem with harmonic oscillation until the vehicle is raised changing the angle of the universal joint. Phasing the drive shaft and lowering the centre bearing using the bracket kit (*Figure A*) should prevent harmonic oscillation. For this vehicle it is advised **not** to use caster wedges (*Figure B*), as this leads to an unacceptable pinion angle in relation to the other universal joints. The Automatic Triton has a rubber style, CV joint behind the transfer case and only requires the centre bearing bracket kit.

### How to correct the Phasing

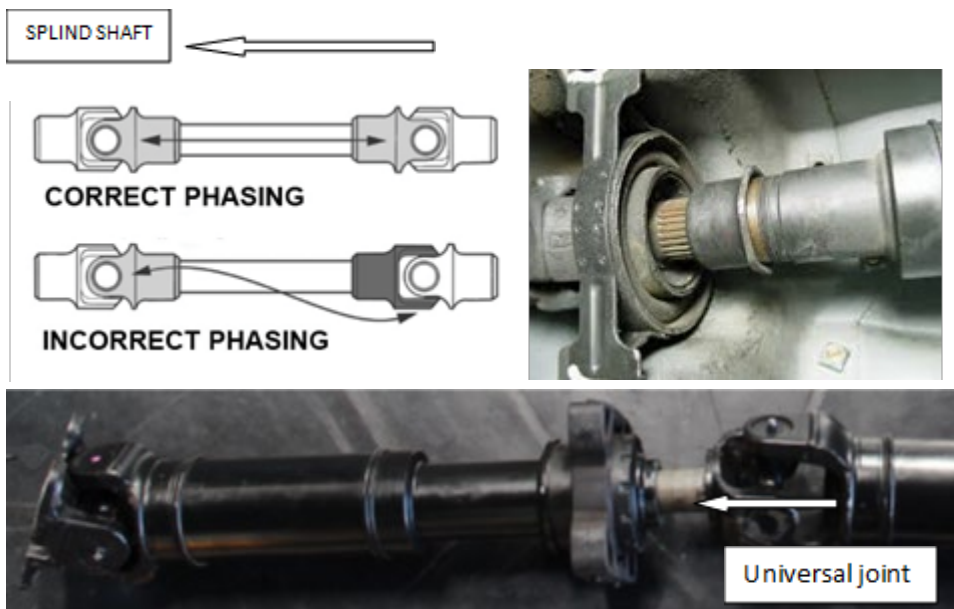

Remove the spline shaft slowly until it has disengaged from the main shaft move shaft round until the front and rear universal joint are in phase, it may only need 1 or 2 splines to align the universal joints. If the spline slips out too far and will not go back into the tube it will be necessary to remove the universal joint from the spline shaft and use a press to push the spline back into the main body and refit the universal joint.

## Appendix 5

### TOYOTA PRADO 150 LWB - WITH KDSS 2009 - CURRENT

Please note when fitting King Springs to Toyota Prado 150 Series vehicles fitted with Toyota's Kinetic Dynamic Suspension System (KDSS), also referred to by Toyota as a "hydro-mechanical semi active anti roll bar"

Please be advised of the fitting procedure:

- Suspend vehicle on 2-post type chassis hoist allowing wheels to hang.
- Locate the KDSS valve housing.

NOTE: The valve housing is located on the left-hand side of the vehicle, on the outside of the chassis rail, roughly half way between the front and the back of the vehicle.



- Remove protective steel cover / plate.
- Locate shutter valve bolts on side of accumulator.
- Unscrew shutter valve bolts 2.0 – 2.5 turns MAX.

NOTE: The KDSS system is now open and the sway bar ends should be able to be freely manipulated with little effort, allowing spring / strut removal and installation.

**NOTE: THE VEHICLE MUST NOT BE DRIVEN WITH!**

**THESE VALVES OPEN AS THIS WILL COMPROMISE THE SYSTEM AND RENDER THE VEHICLE UNSAFE TO DRIVE.**

- With the vehicle sitting on level ground, close both KDSS leveling valves by turning them in a clockwise direction and then tightening.
- Reinstall protective cover plate.