

INSTALLATION INSTRUCTIONS

PART DESCRIPTION: Nissan Patrol GQ-GU Bolt-In Drop Out Cone			
PART LISTING			
ITEM#	PART#	QUANTITY	DESCRIPTION
1		2	BOLT IN DROP OUT CONES
2		2	BOLT IN DROP OUT CONE TOP PLATES
3		4	M10X50MM BOLTS
4		4	M10 FLAT WASHERS
5		4	M10 SPRING WASHERS

NOTES: Read and understand these installation instructions before beginning the installation process. Retain these installation instructions for future reference. It is recommended that this item is to be installed by a qualified person.




INSTALLATION INSTRUCTIONS

CAUTION
Make sure not to damage any fuel or brake lines as some made need to be gently moved out of the way to get the top plates in position.

Size	Torque (Nm)	Torque (ft-lb)
M10	49	36

1. Start with the vehicle securely on a hoist and the rear diff supported.
2. Remove the rear coils as per the vehicle's service manual.
3. Place the top plate of the bolt in drop out cones on top of the driver and passenger rear coil towers.
4. Hold the bolt in the coil drop out cone up under the chassis where the coil would locate. The cone will be a nice fit when in position.
5. Line up the bolt in the coil tower brace and top plate with the M10x25mm bolts with a washer and tighten to the correct torque setting. **NOTE: Use Loctite.**
6. Refit the rear coils as per the vehicle's service manual.

INSTALLATION INSTRUCTIONS

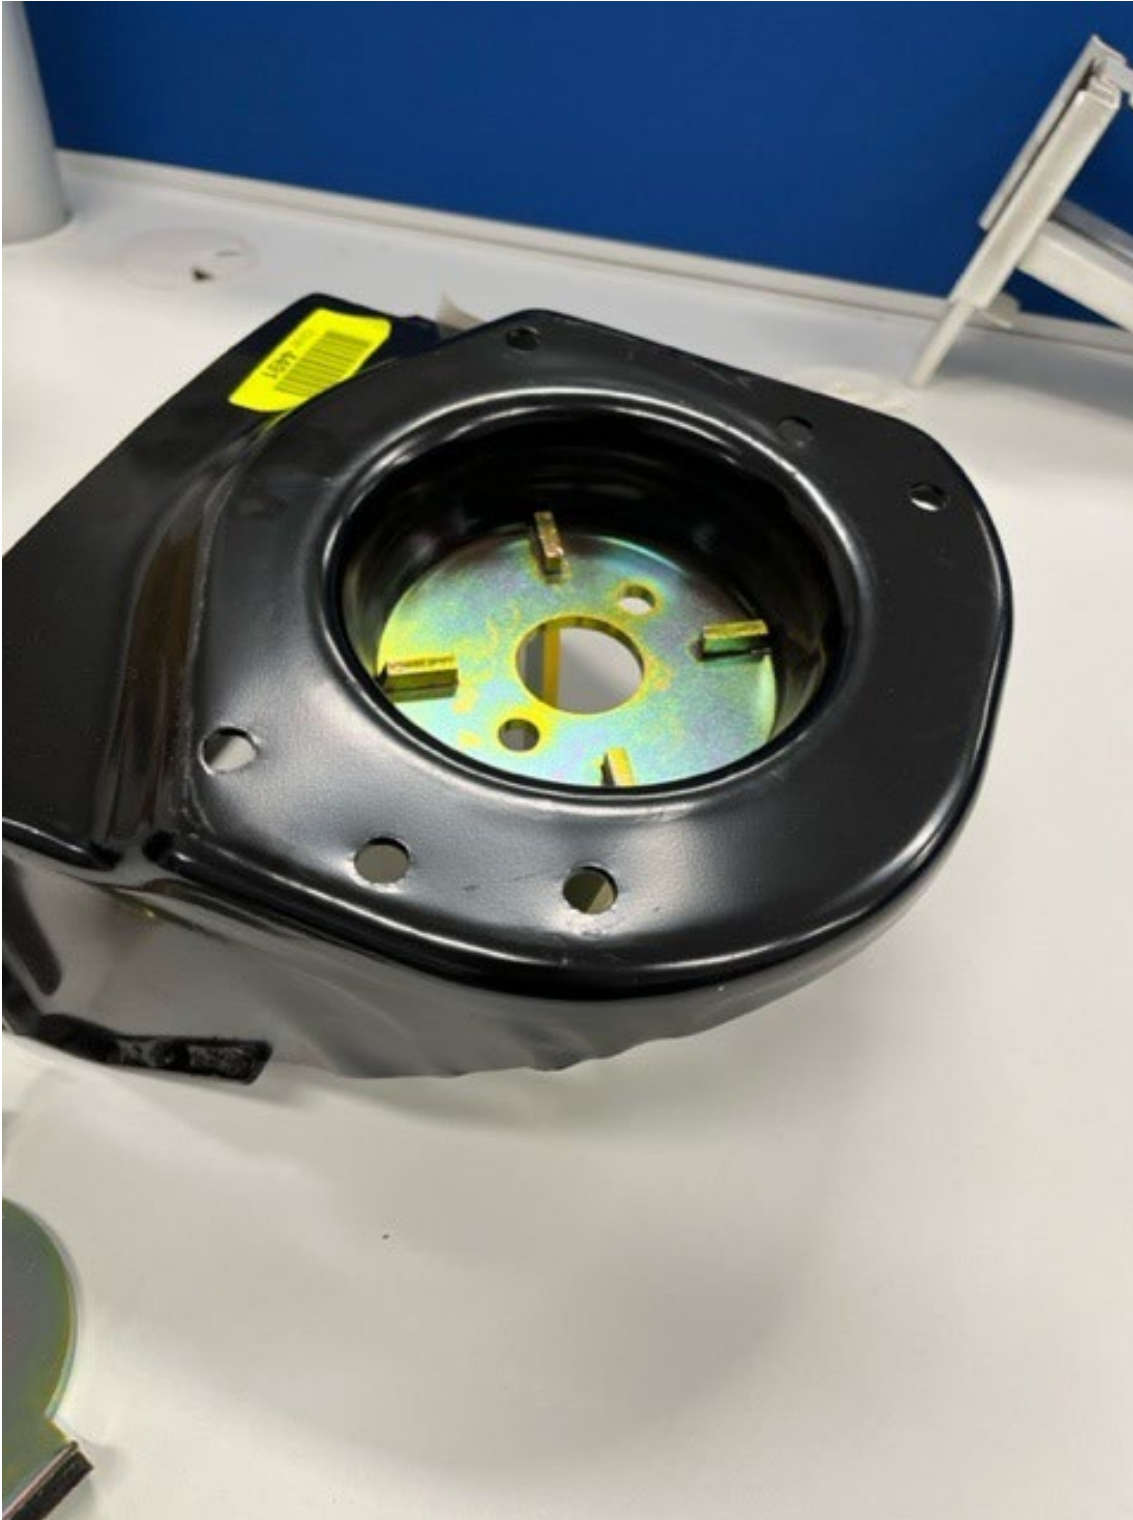

Shows patrol tower off vehicle with retainer underneath , looking from top

8 Chrome Court Burpengary 4505 QLD AUSTRALIA
(07) 5433 1411

SE0002MH10/3/23 sales@superiorengineering.com.au

Page 3 of 5

INSTALLATION INSTRUCTIONS



Showing underneath of patrol tower

INSTALLATION INSTRUCTIONS



Shows top plate fitted in position