



TMX RR 012 103972 B COVER

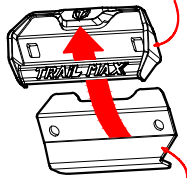



TMX RR 012 103972 B

59 M6 Plate nut X 16

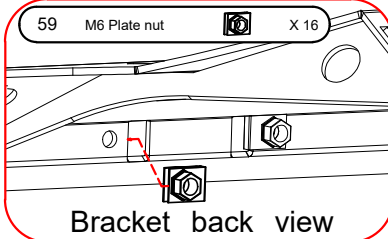


Bracket back view

Bracket Fitment

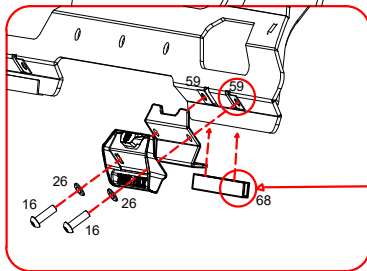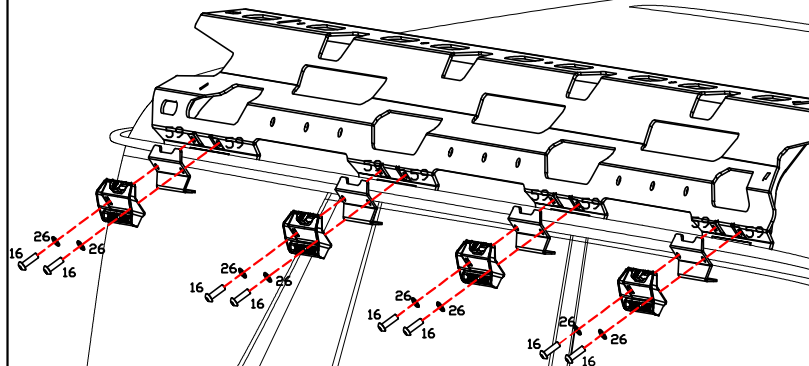

NOTE: Fit U rubber before place bracket on the roof.

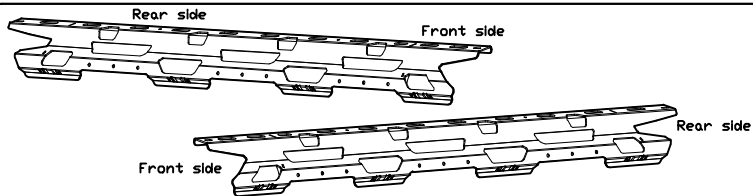

TMX RR 012 103237 LH-RH



TOYOTA LC 70 S WAGON 104069



TMX RR 104044 BRACKET BOLT KIT

Item N°	Part	Description	Qty
89	M8 x 35 Allen cap		8
22	M8 washer		8
24	M8 1,25 flange nylock nut		8
16	M6 X 20 Allen bolt		16
26	M6 washer		16
59	M6 Plate nut		16
68	U Rubber		8

- 89 M8 X 35 Allen Cap X 8
- 22 M8 Washer X 8
- 24 M8 Nylock Flange nut X 8

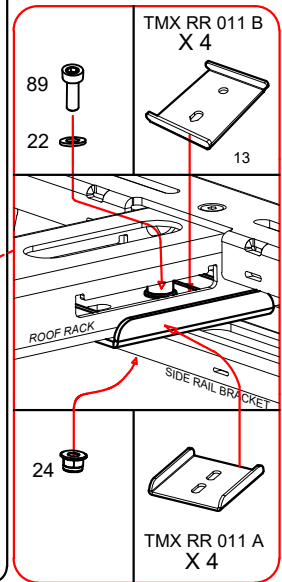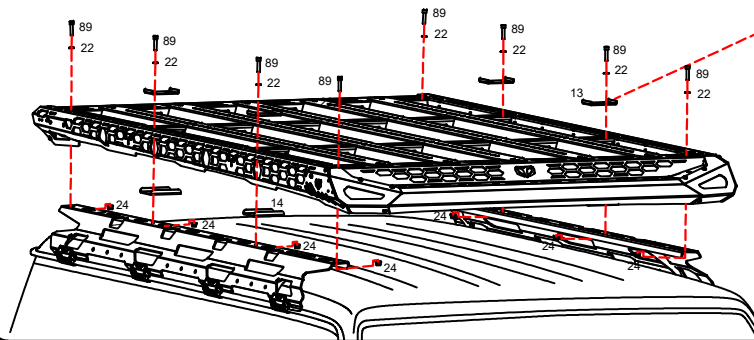

Tighten all M8 Allen cap bolts and M8 nuts using 6mm Allen key and 13mm Wrench.



DONE!

