


8

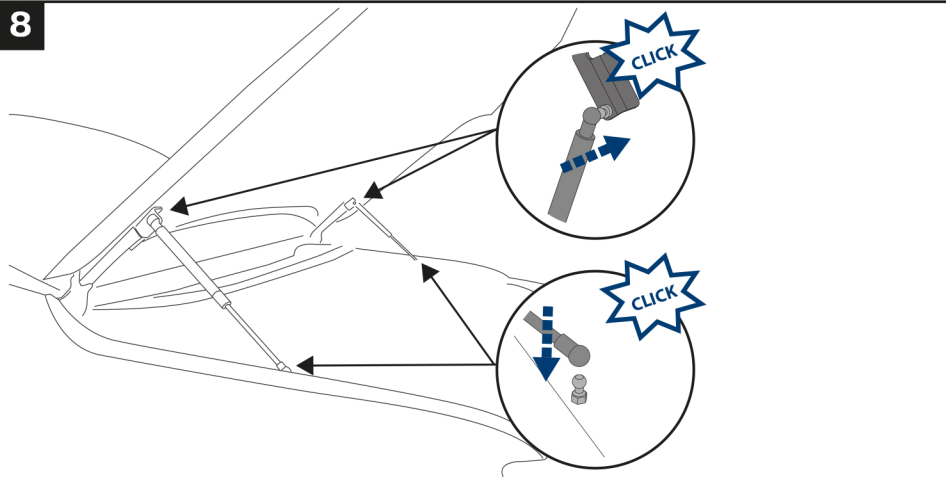

Check vehicle manual



After installation, check the correct operation of all elements.

# Ford Ranger

## BONNET GAS STRUTS


### Installation Instructions




Model year: 2012-2015












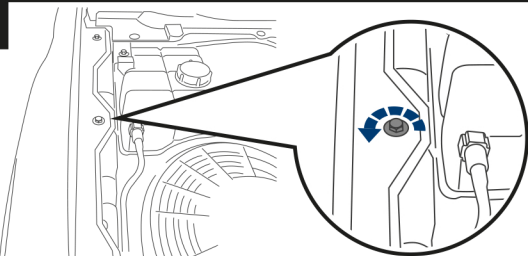





Part No.: DT-BS003






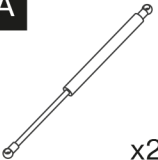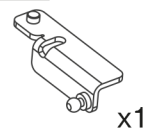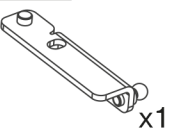




Compatibility: all types

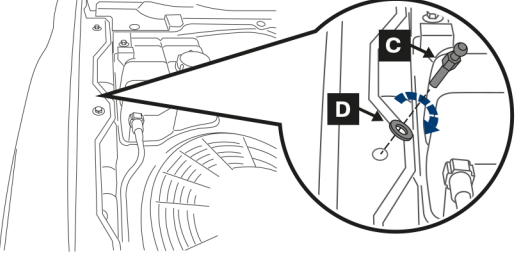Weight:  1 kg

Installation time:  30 min

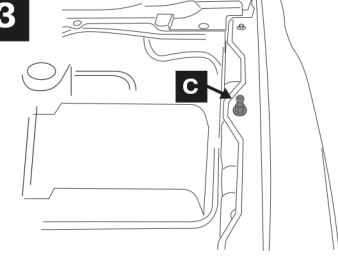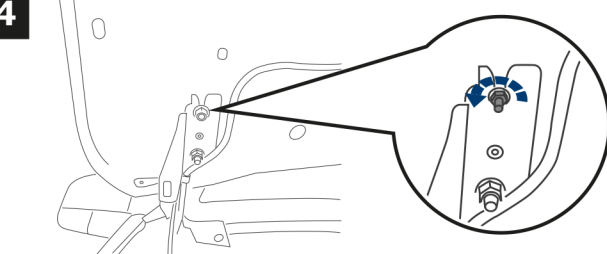
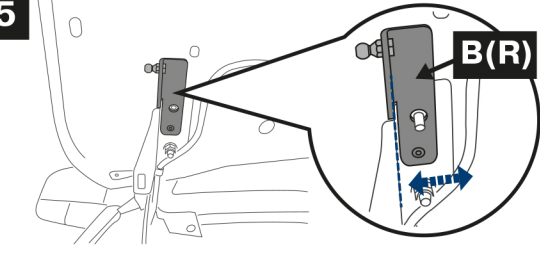
<b>A</b>  x2	<b>B(R)</b>  x1	<b>B(L)</b>  x1	<b>C</b>  x2	<b>D</b>  Ø6 x2
 Installation Instructions				
Required Tools:				
    10 mm      13 mm				
 <b>Attention!</b> Before installation of gas struts, open the hood and check that there is no additional equipment installed in engine bay which can block installation.				
<b>1</b> 	  10 mm			
<b>2</b> 	 9 Nm  10 mm			
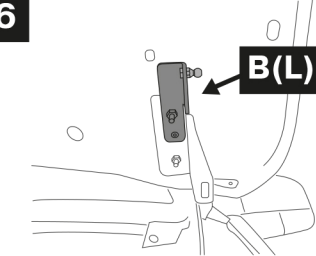
<b>3</b> 	 LHS=RHS			
<b>4</b> 	  13 mm			
<b>5</b> 	 23 Nm  13 mm			
<b>6</b> 	 LHS=RHS			
<b>7</b> 