




THANKYOU FOR YOUR PURCHASE AND SUPPORTING SMALL BUSINESS.

Fitting Instructions for VDJ Landcruiser Bonnet Struts.

NOTE! THIS IS A GUIDE ONLY. IF ANY ACCESSORIES HAVE BEEN FITTED, THEY MAY HAVE TO BE REPOSITIONED!

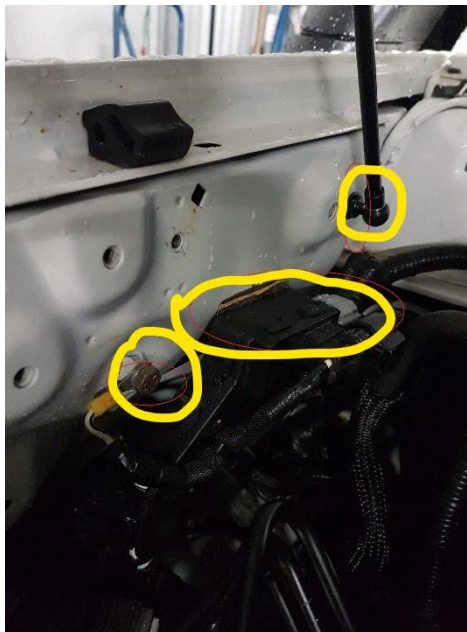

1. Fit and tighten ball stud to existing threaded hole as shown. You will have to reposition circled wiring loom, and anything else that may be in the way, like this earth wire perhaps, and the power outlet. The loom is quite rigid, and I used adhesive foam to stop it vibrating against the body. Cable tie if you wish.




2. Position and prop the bonnet where you would like it to sit when open. 320mm from the edge of the bonnet hinge to the centre of supplied mounting bracket will bring bonnet to approx. the same height the stick does. DON'T GO TOO HIGH, just a few degrees more, or the strut will run out of stroke!

Align bracket too, so the strut will sit square and operate in a vertical plane. The balls on the brackets face out. Mark, and drill 2 x 11mm holes. Be careful not to dent outer skin of bonnet! I recommend the use of a depth gauge on your drill/bit. Attach Nutserts.

3. Attach stainless allen head screws and spring washers and tighten.

4.

Repeat on passenger side. Circled unit needs to be repositioned.

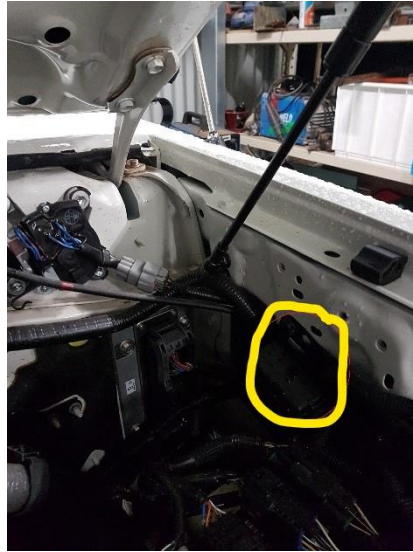

IF YOU HAVE ANY PROBLEMS, PLEASE GIVE ME A RING ON 0404 896679 OR EMAIL info@strutyourstuff.net.au

Cheers,

Wazza.