

## FITTING INSTRUCTIONS

**VEHICLE** Toyota Landcruiser 200 Series **MODEL YEAR** September 2016 - onwards

**PRODUCT** Auxiliary Battery Tray


**PRODUCT CODE** BT045

**Battery Tray Details** 

Fits up to N70zz 12-inch case

Comes with: 2 x 6mm bolts, 2 x 8mm bolts, 4 x 8mm nylocs, 1 Hold Down Bracket, 2 x J Hooks.

- 1. Battery tray fits into the front of the right-hand driver side of the vehicle under the bonnet.
- 2. Place the 2 x 6mm bolts in the holes towards the front of the tray.

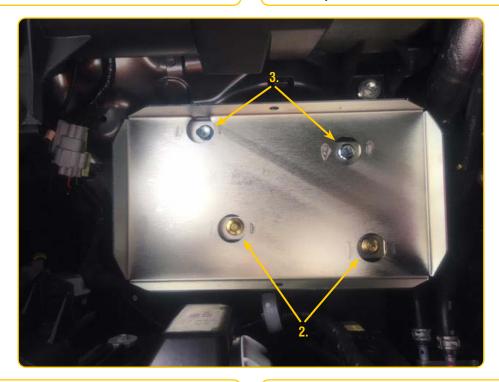

- 3. Then place the 2 x 8mm bolts in the holes at the rear of the tray. Use 2 x 8mm nylocs behind the inner guard.
- **4.** Insert 2 x J hooks into holes on side of tray, sit battery into tray, fit battery hold down and tighten 2 x 8mm nylocs.